

iBoard®

iBoard® by APS


PART#: IB-131A-B

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

***ROCKER PANEL MOUNT
*NO DRILLING REQUIRED**

Fastener Size	Tightening Torque (ft-lbs)
6mm	6-7
8mm	16-18
10mm	31-32
12mm	56-58
14mm	92-94

PART LIST

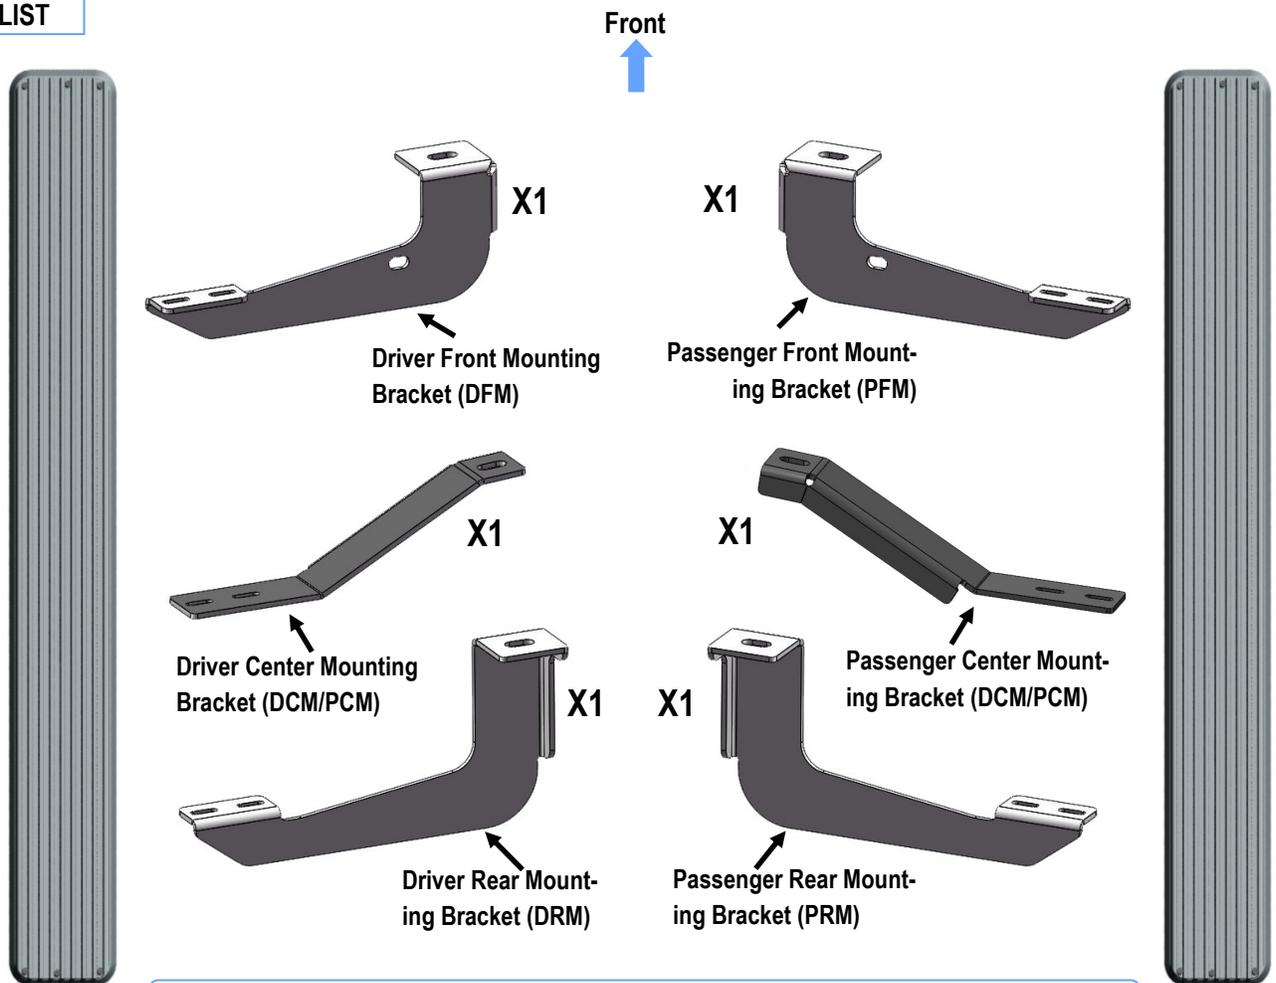

Note: Driver Center Mounting Bracket & Passenger Center Mounting Bracket Are Universal

Customer Support: info@iboardauto.com

iBoard®



X6

M12X1.75-120mm Hex Bolt



X6

M12 Large Flat Washer



X6

M12 Lock Washer



X12

M6X1-20mm Square Head Bolt



X12

M6 Large Flat Washer



X12

M6X1 Nylon Lock Nut



STEP 1

Start the installation under the Driver side of the vehicle. Remove the front and rear body mount hex bolts. Do not remove the rubber bushings, (Fig 1).

STEP 2

Hang the driver side front / center and rear Mounting Brackets to the body mounts using the factory hex bolts.

NOTE: On some model years, the factory bolt and flat washer cannot be reinstated due to Bracket interference. Replace the factory hex bolts and washers with the included M12X1.75-120mm Hex Bolt, M12 Lock Washers and M12 Large Flat Washers, (Fig 2). Do not tighten hardware at this time.

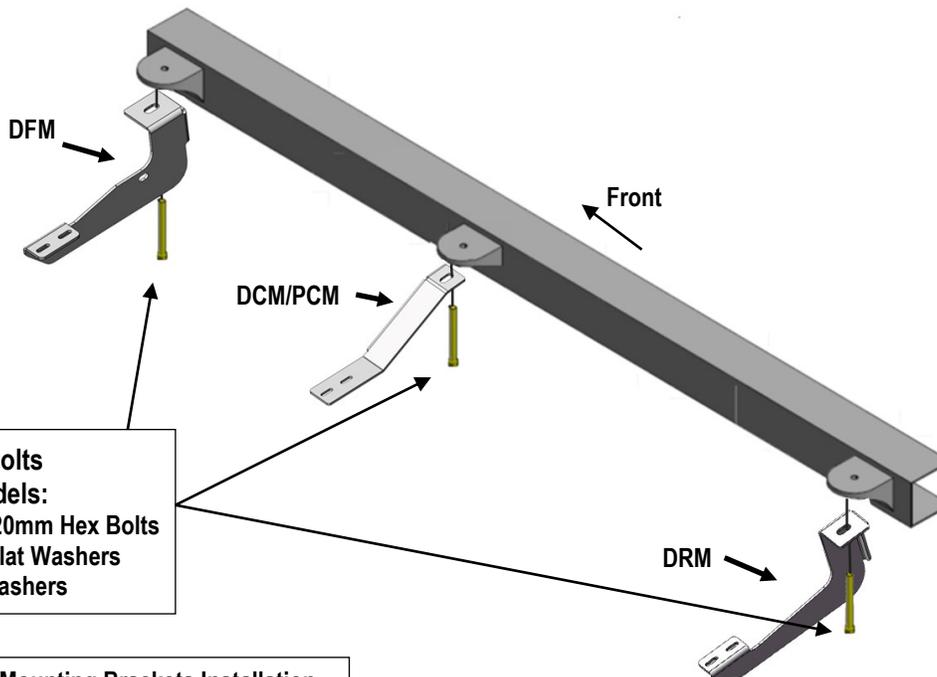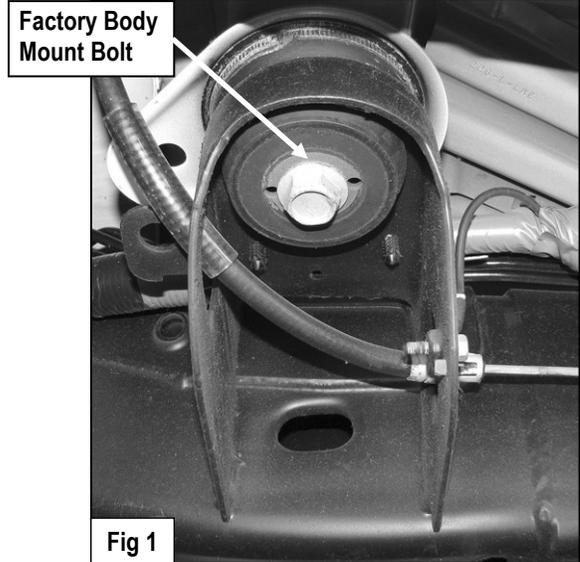

(Fig 2) Driver Side Mounting Brackets Installation

iBoard®

STEP 3


Select a Running Board. Slip (3) M6x1-20mm Square Head Bolts into each bottom channel (**Fig 3**). Carefully position the Running Board onto the (3) Mounting Brackets.

IMPORTANT: Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Brackets with (2) M6x1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 X1 Nylon Lock Nuts (**Fig 4**). Do not fully tighten at this time.



(Fig 3) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels

(2)M6X1-20mm Square Head Bolts
(2)M6 Large Flat Washers
(2)M6X1 Nylon Lock Nuts

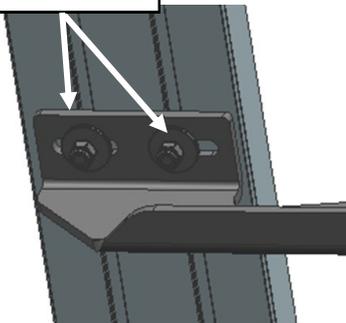

(Fig 4) Running Board Installed Onto Mounting Bracket

STEP 4

Level and adjust the Running Board and fully tighten all hardware.

STEP 5

Repeat **Steps 1-4** for the other side Running Board installation. The installation is completed (**Fig 5**).



(Fig 5) Installation Completed

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.