

iBoard®

iBoard® by APS



PART#: IB-022A-B

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

***ROCKER PANEL MOUNT
*NO DRILLING REQUIRED**

Fastener Size	Tightening Torque (ft-lbs)
6mm	6-7
8mm	16-18
10mm	31-32
12mm	56-58
14mm	92-94

PART LIST

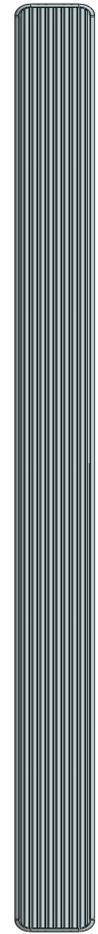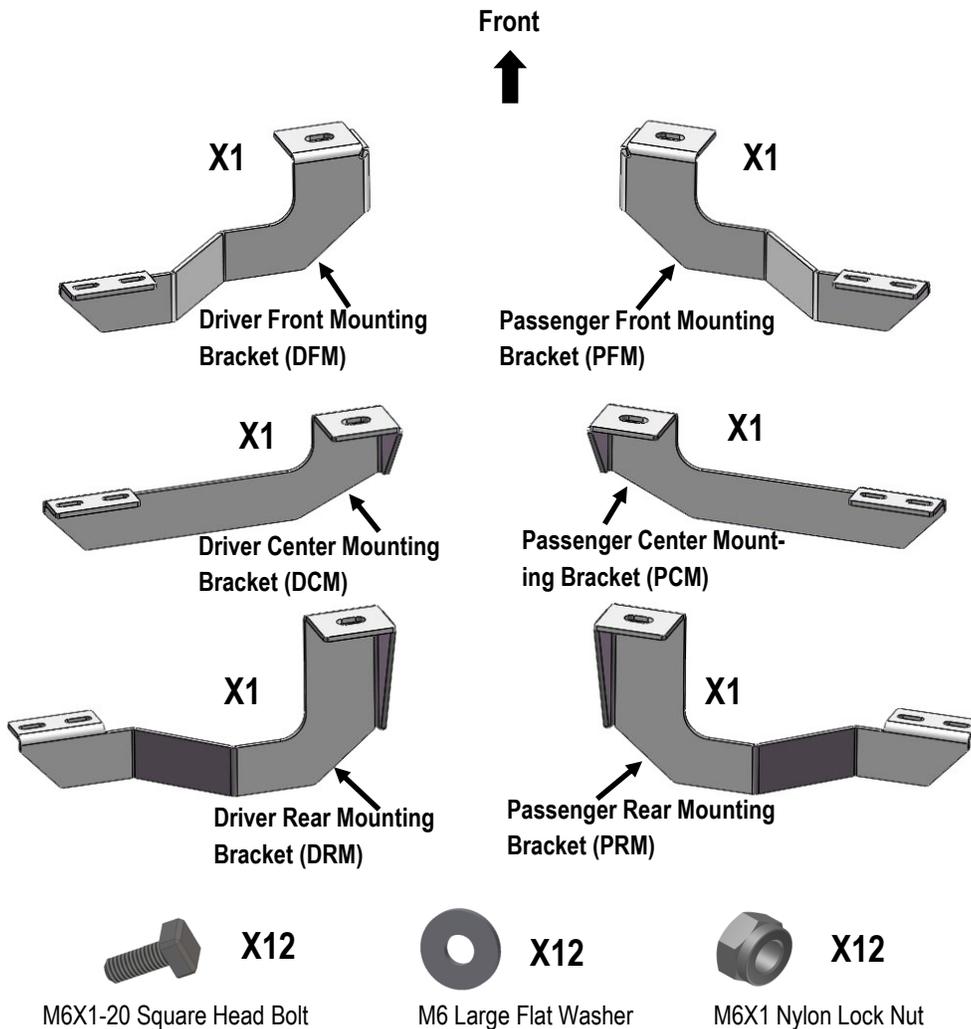


Customer Support: info@iboardauto.com

iBoard®

STEP 1

Start the installation under the Passenger side of the vehicle. Remove the front body mount hex bolt, (**Fig 1 & 2**). Do not remove rubber bushings.

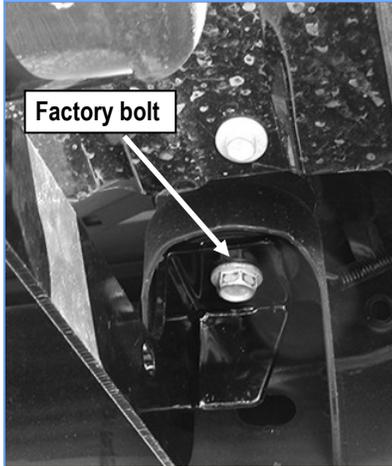

(Fig 1) Bracket Installation Pictured

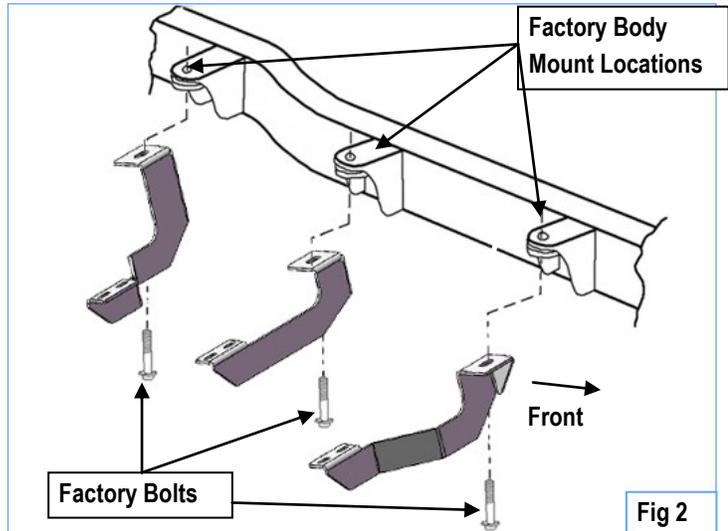


Fig 2

STEP 2

Hang the Passenger Front Mounting Bracket (**PFM**) to the body mount using the long factory hex bolt, (**Fig 1 & 2**). Do not fully tighten hex bolt at this time.

STEP 3

Repeat **Steps 1 & 2** for Passenger Center Mounting Bracket (**PCM**) and Passenger Rear Mounting Bracket (**PRM**) installation, (**Fig 1 & 2**).

Note: No inference between the Mounting Brackets and the body mount frames.

STEP 4

Select a Running Board. Slip (3) M6x1-20 Square Head Bolts into each bottom channel (**Fig 3**). Carefully position the Running Board onto the (3) Mounting Brackets.


IMPORTANT: Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Brackets with (2) M6x1-20 Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 X1 Nylon Lock Nuts (**Fig 4**). Do not tighten at this time.



(Fig 3) Slip (3) M6X1-20 Square Head Bolts Into Each Bottom Channel

iBoard®

(2)M6X1-20 Square Head Bolts
(2)M6 Large Flat Washers
(2)M6X1 Nylon Lock Nuts

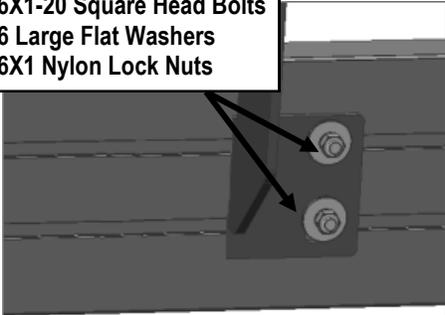

(Fig 4) Running Board Installed Onto Mounting Bracket

STEP 5

Level and adjust the Running Board and fully tighten all hardware.

STEP 6

Repeat **Steps 1-5** for the other side Running Board installation. The installation is completed (Fig 5).



(Fig 5) Installation Completed

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.