

# iBoard®

## iBoard® by APS

PART#: IB-026A-B



**READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.**

**\*ROCKER PANEL MOUNT  
\*NO DRILLING REQUIRED**

Fastener Size	Tightening Torque (ft-lbs)
6mm	6-7
8mm	16-18
10mm	31-32
12mm	56-58
14mm	92-94

### PART LIST

Front

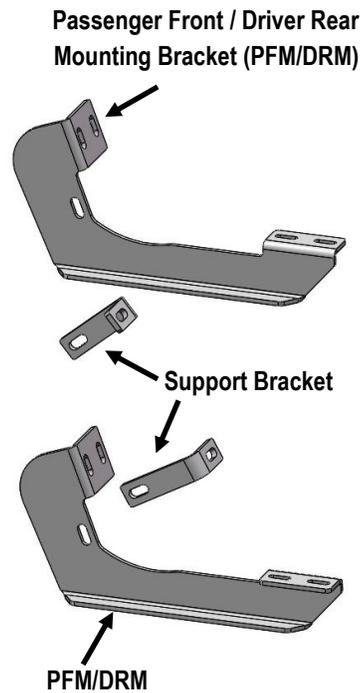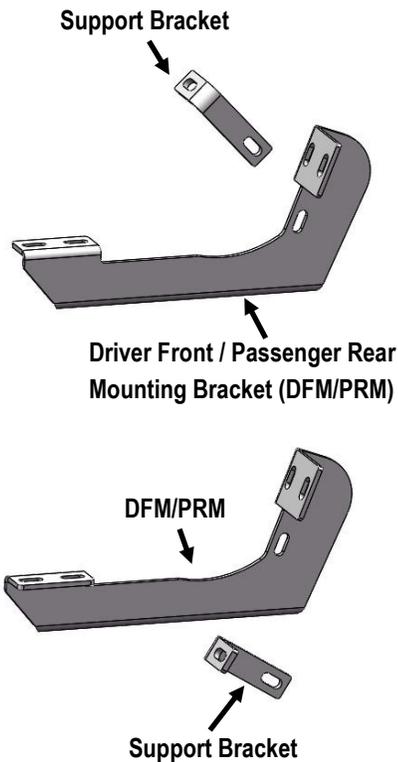


Customer Support: [info@iboardauto.com](mailto:info@iboardauto.com)

# iBoard®



## STEP 1


Starting on the driver side of the vehicle. Select (1) Driver Front Mounting Bracket (**DFM/PRM**) and (1) Support Bracket, attach the Support Bracket to the front facing side of the Mounting Bracket with (1) M8X1.25-30mm Hex Bolt, (1) M8 Lock Washer, (2) M8 Flat Washers and (1) M8 Hex Nut, (**Fig 1**). Do not fully tighten hardware at this time.

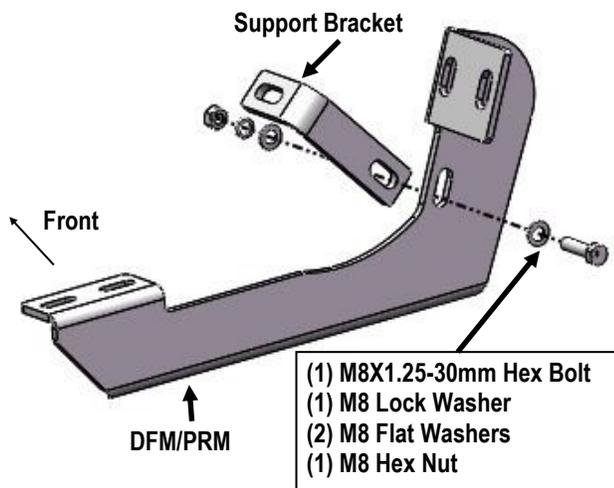

(Fig 1) Driver Front Support & Mounting Bracket Assembly

## STEP 2

Attach the assembled Driver Front Mounting Bracket onto the (2) thread holes on the inner of the rocker panel with the included (2) M8X1.25-30mm Hex Bolt, (2) M8 Lock Washer and (2) M8 Flat Washers, (**Fig 2**). And then, bolt the Support Bracket to the pinch weld with (1) M8X1.25-30mm Hex Bolt, (1) M8 Lock Washer and (1) M8 Flat Washer, (**Fig 2**). Do not fully tighten hardware at this time.

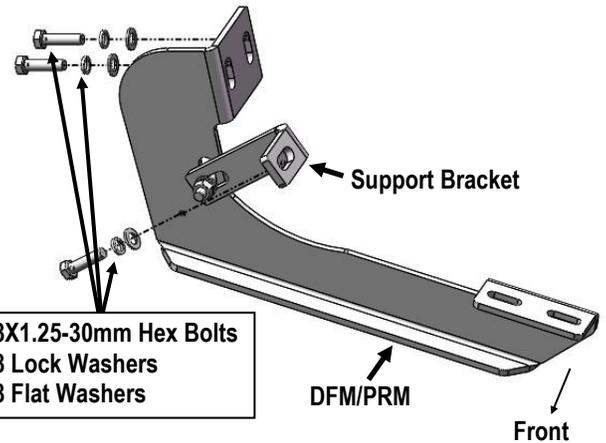


(Fig 2) Driver Front Support & Mounting Bracket Installation

## STEP 3

Move to the Driver Side Rear Location of the vehicle. Repeat **Steps 1-2** for Driver Rear Mounting Bracket (**PFM/DRM**) & Support Bracket installation, (**Fig 3**). Do not fully tighten hardware at this time.

**Note: All (4) Support Brackets are universal.**

# iBoard®

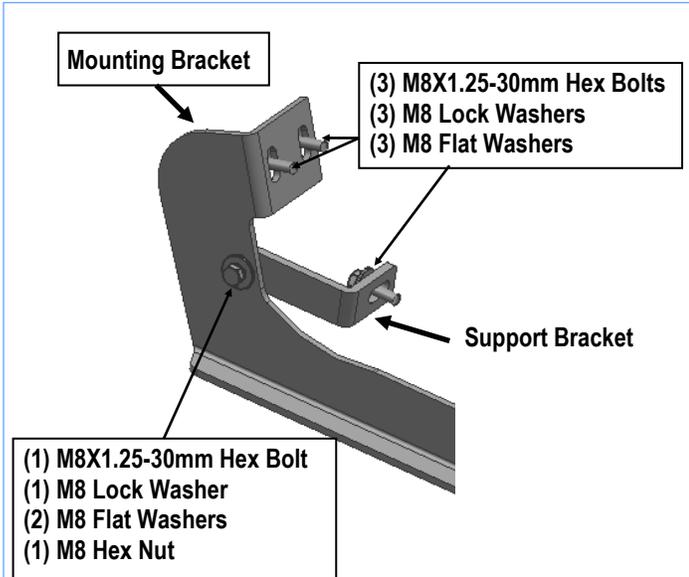

(Fig 3) Driver Rear Support & Mounting Bracket Installation

## STEP 4


Select a Running Board. Slip (2) M6x1-20mm Square Head Bolts into each bottom channel (Fig 9). Carefully position the Running Board onto the (2) Mounting Brackets.

**IMPORTANT:** Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Bracket with (2) M6x1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 Nylon Lock Nuts (Fig 10). Do not fully tighten hardware at this time.



(Fig 4) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels

- (2) M6X1-20mm Square Head Bolts
- (2) M6 Large Flat Washers
- (2) M6 Nylon Lock Nuts

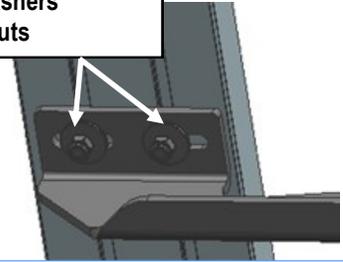

(Fig 5) Running Board Installed Onto Driver Center Mounting Bracket

## STEP 5

Level and adjust the Running Board and fully tighten all hardware.

## STEP 6

Repeat **Steps 1-5** for the other side Running Board installation. The installation is completed (Fig 6).



(Fig 6) Installation Completed

### Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.