

iBoard®

iBoard® by APS


PART#: IB-239/313A&B

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

*ROCKER PANEL MOUNT
*No DRILLING REQUIRED

Fastener Size	Tightening Torque (ft-lbs)
6mm	6-7
8mm	16-18
10mm	31-32
12mm	56-58
14mm	92-94

Item	QTY	Description	Item	QTY	Description
1#	1	Driver Front Mounting Bracket	6#	12	M10 Flat Washers
2#	1	Passenger Front Mounting Bracket	7#	12	M10 Lock Washers
3#	2	Driver Center & Rear Mounting Brackets	8#	12	M6X1-20mm Square Head Bolts
4#	2	Passenger Center & Rear Mounting Brackets	9#	12	M6 Large Flat Washers
5#	12	M10x1.5 - 25mm Hex Bolts	10#	12	M6X1 Nylon Lock Nuts




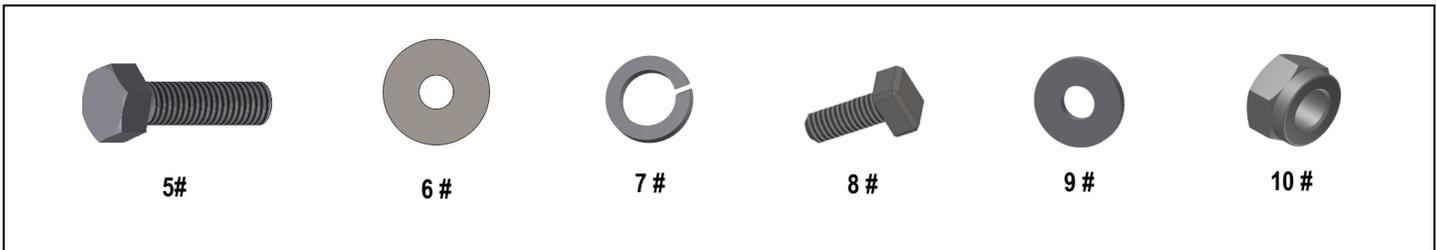


iBoard®

Driver

Front


Passenger

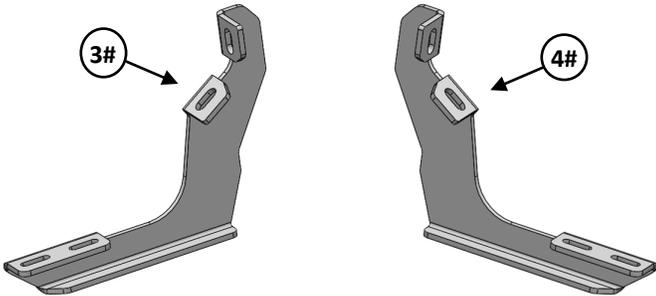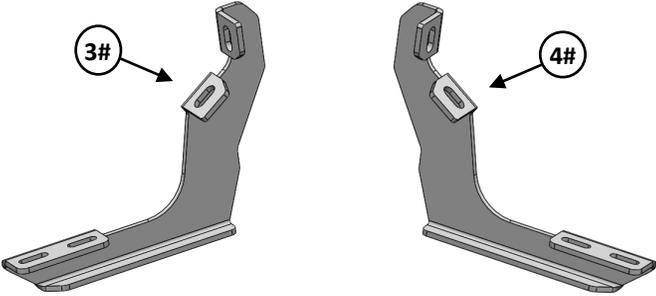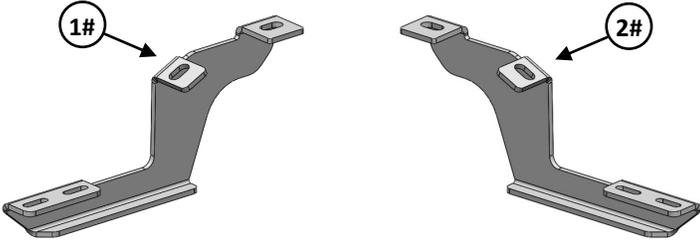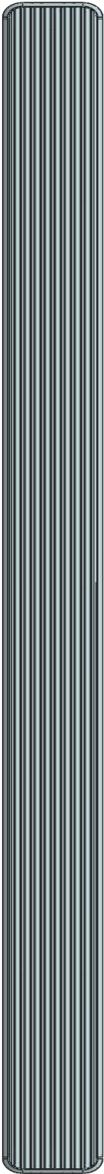

iBoard®

STEP 1


Starting from the Passenger side inner rocker panel, locate the threaded mounting holes on the rocker panel, (Fig 1). Remove the plastic plugs covering the mounting holes.

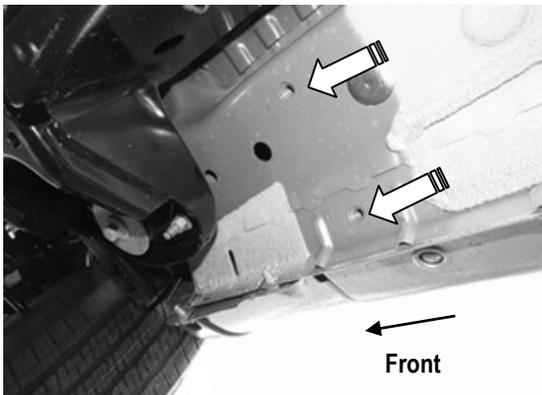

(Fig 1) Passenger Front Mounting Bracket Location Pictured

STEP 2

Select Passenger Front Mounting Bracket . Attach to Passenger front location with (2) M10x1.5-25mm Hex Bolts, (2) M10 Flat Washers and (2) M10 Lock Washers (Fig 2). Do not tighten hardware at this time.

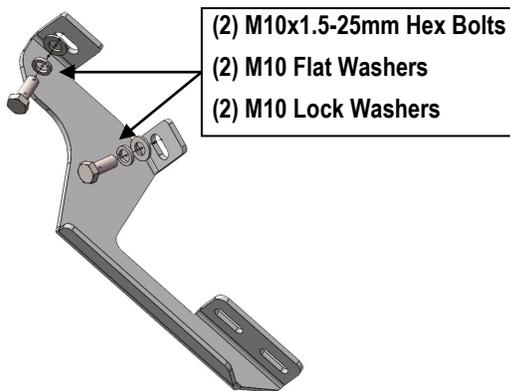


(Fig 2) Passenger Front Mounting Bracket Installation


STEP 3

Move to center & rear mounting locations, (Fig 3-4). Repeat Steps 1-2 to installation Passenger Center & Rear Mounting Brackets . (Fig 5)

Note: Passenger Center Mounting Bracket (PCM) and Passenger Rear Mounting Bracket (PRM) are universal .

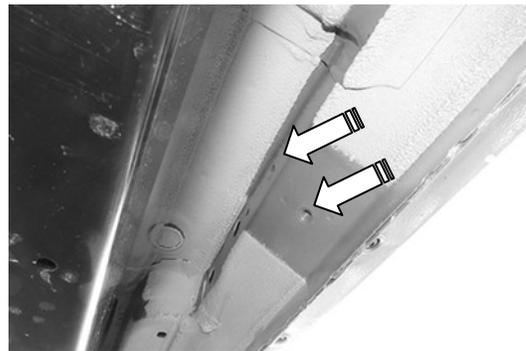


(Fig 3) Passenger Center Mounting Location Pictured

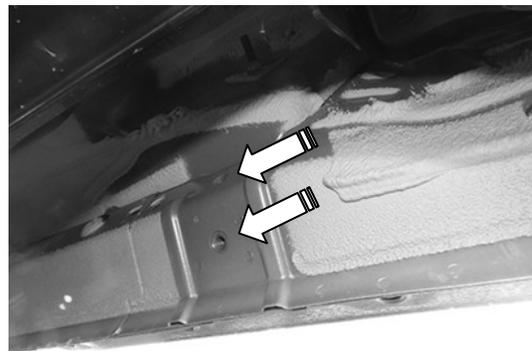

(Fig 4) Passenger Rear Mounting Location Pictured

(2) M10x1.5-25mm Hex Bolts
(2) M10 Flat Washers
(2) M10 Lock Washers

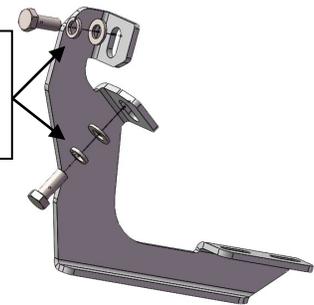

(Fig 5) Passenger Center & Rear Mounting Bracket Installation

iBoard®

STEP 4


Select a Running Board. Slip (3) M6x1-20mm Square Head Bolts into each bottom channel (**Fig 6**). Carefully position the Running Board onto the (3) Mounting Brackets.

IMPORTANT: Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Brackets with (2) M6x1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 X1 Nylon Lock Nuts (**Fig 7**). Do not fully tighten at this time.



(Fig 6) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels

(2)M6X1-20mm Square Head Bolts
(2)M6 Large Flat Washers
(2)M6X1 Nylon Lock Nuts

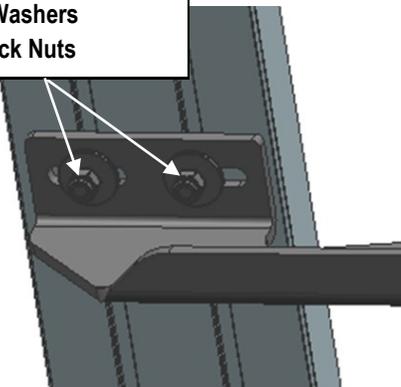

(Fig 7) Running Board Installed Onto Mounting Bracket

STEP 5

Level and adjust the Running Board and fully tighten all hardware.

STEP 6

Repeat **Steps 1-5** for the other side Running Board installation. The installation is completed (**Fig 8**).



(Fig 8) Installation Completed

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.