

# iBoard®

## iBoard® by APS


PART#: IB-R188H\_Y

**READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.**

**\*ROCKER PANEL MOUNT  
\*NO DRILLING REQUIRED**

Fastener Size	Tightening Torque (ft-lbs)
6mm	6-7
8mm	16-18
10mm	31-32
12mm	56-58
14mm	92-94

### PART LIST

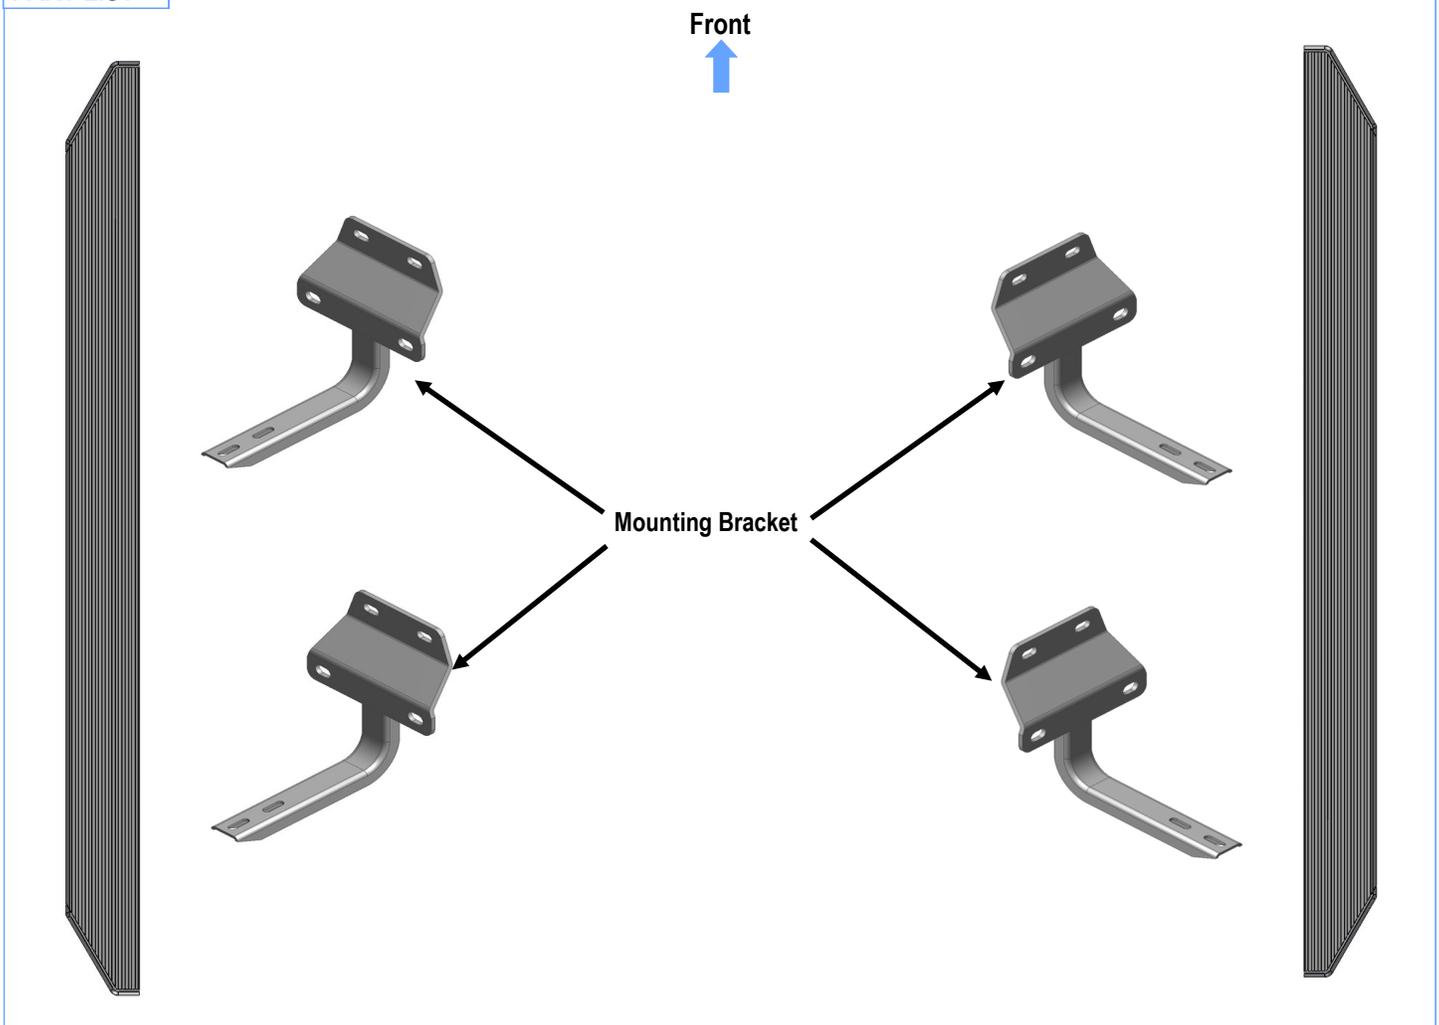

Customer Support: [info@iboardauto.com](mailto:info@iboardauto.com)

# iBoard®



X12

Plastic Washer



X12

M8 Large Flat Washer



X12

M8X1.25 Nylon  
Lock Nut



X8

M6X1-20mm Square  
Head Bolt



X8

M6 Large Flat  
Washer




X8

M6X1 Nylon  
Lock Nut

## STEP 1

Start installation from the passenger side front of the vehicle. Locate the front factory running board mounting location along the inner side of the body, **(Fig 1)**.

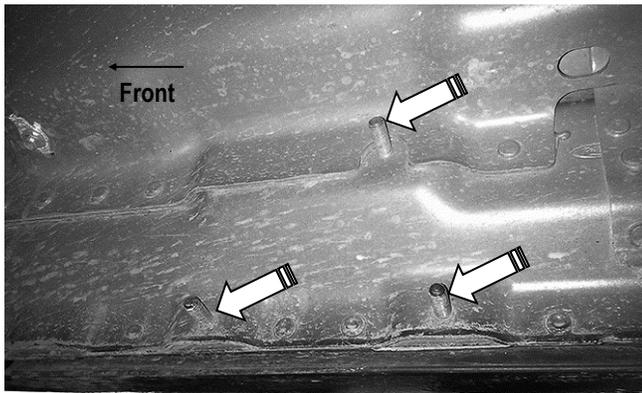


**(Fig 1) Passenger Side Front Mounting Location**

## STEP 2

Slide (1) Plastic Washer over each factory mounting stud in the body panel, **(Fig 2)**.


**Note:** The Plastic Washers are designed to prevent corrosion between the aluminum body panel and the steel mounting brackets.

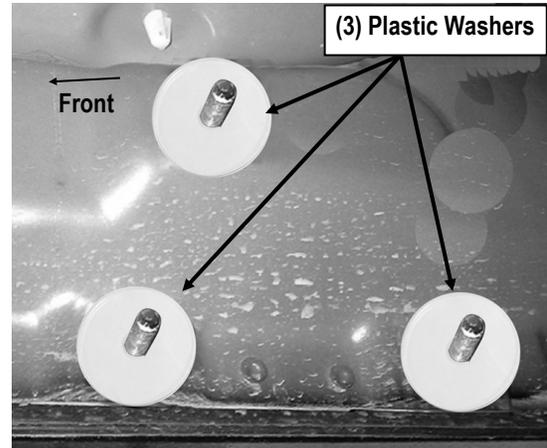

**(Fig 2) Thread Plastic Washers Onto 3 Mounting Studs (Passenger Side Front Mounting Location Pictured)**

## STEP 3

Select (1) Mounting Bracket. **Note: All (4) Mounting Brackets are universal.** Attach the Mounting Bracket to the (3) factory studs with (3) M8 Large Flat Washers and (3) M8X1.25 Nylon Lock Nuts, **(Fig 3)**. Do not fully tighten hardware at this time.

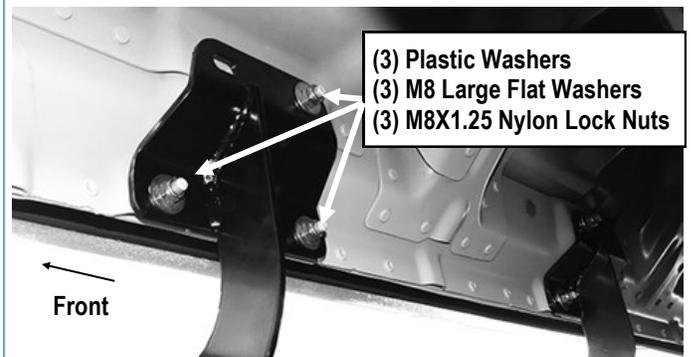

**(Fig 3) Passenger Front Mounting Bracket Installed**

# iBoard®


## STEP 4

Move to the Passenger Side Rear Mounting Location. Repeat **Steps 1—3** to install the Passenger Side Rear Mounting Bracket. Do not fully tighten at this time.


## STEP 5

Select a Running Board. Slip (2) M6X1-20mm Square Head Bolts into each bottom channel (**Fig 4**). Carefully position the Running Board onto the (2) Mounting Brackets.

**IMPORTANT:** Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Bracket with (2) M6x1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 X1 Nylon Lock Nuts (**Fig 5**). Do not fully tighten at this time.

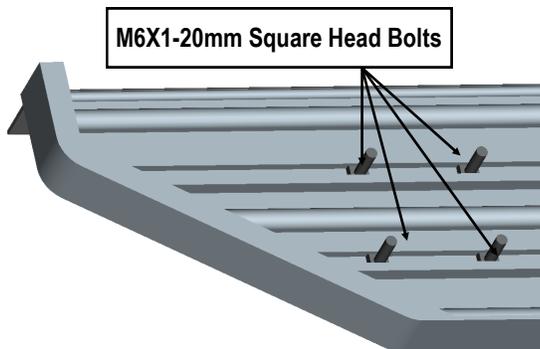

(Fig 4) Slip (2) M6X1-20mm Square Head Bolts Into Each Bottom Channel

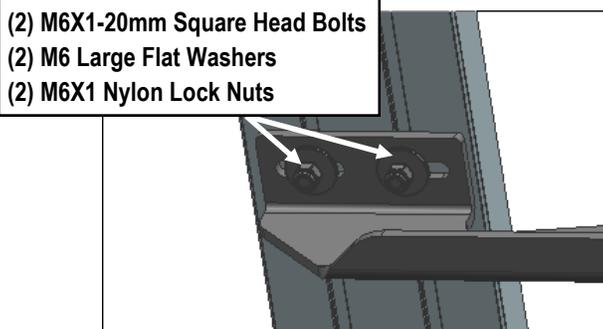

(Fig 5) Running Board Installed Onto Mounting Bracket

## STEP 6

Level and adjust the Running Board and fully tighten all hardware.

## STEP 7

Repeat **Steps 1-6** for other side Running Board installation. The installation is completed (**Fig 6**).



(Fig 6) Installation Completed

### Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.