

# iBoard®

## iBoard® by APS


PART#: IB-R044H\_Y

**READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.**

**\*ROCKER PANEL MOUNT  
\*NO DRILLING REQUIRED**

Fastener Size	Tightening Torque (ft-lbs)
6mm	6-7
8mm	16-18
10mm	31-32
12mm	56-58
14mm	92-94

### PART LIST

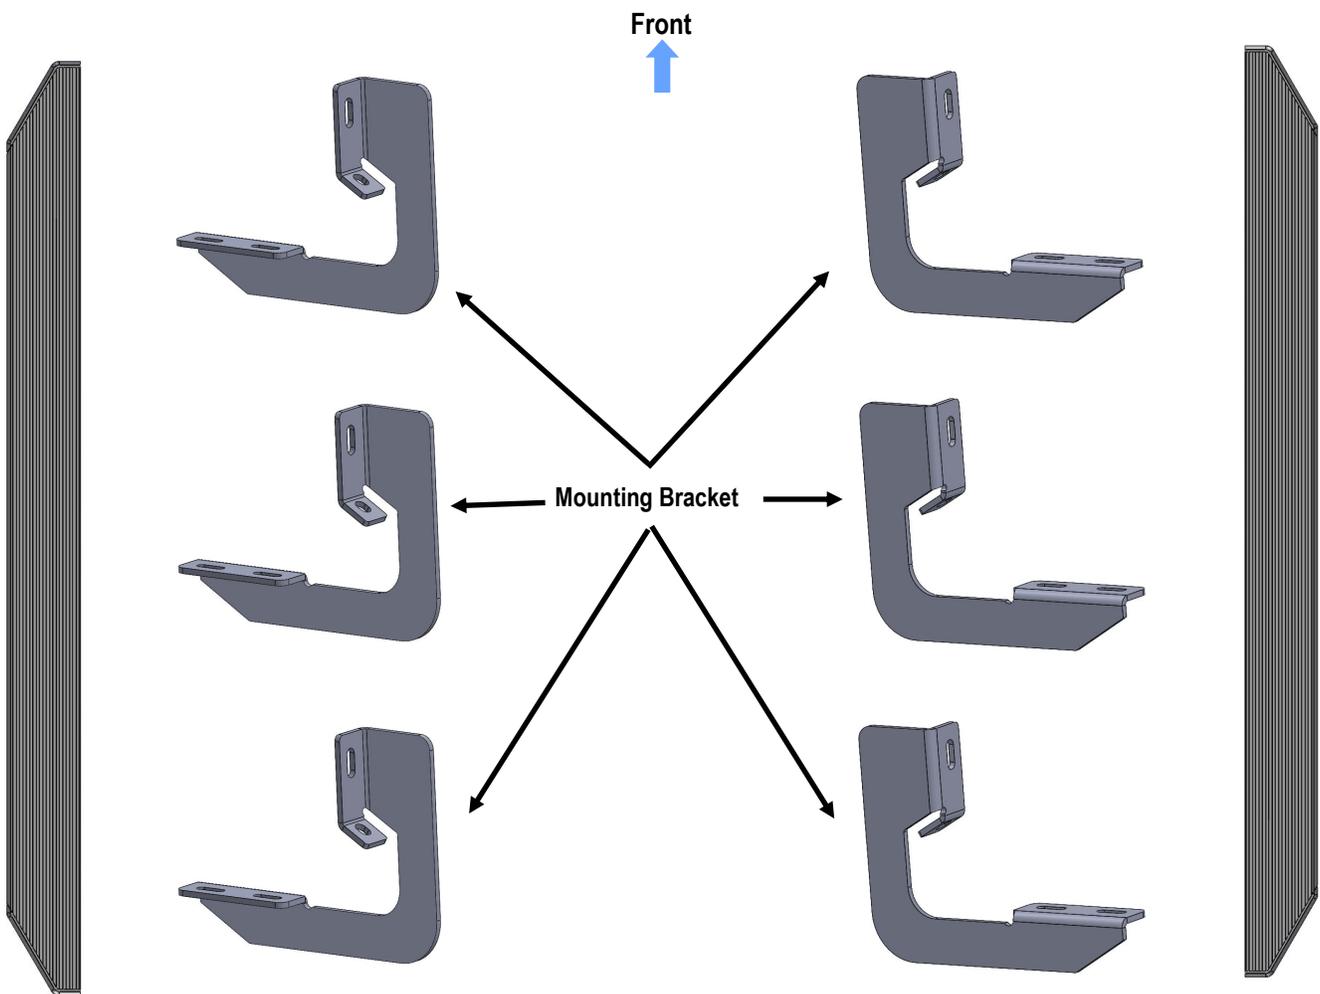


Customer Support: [info@iboardauto.com](mailto:info@iboardauto.com)

# iBoard®



## STEP 1


Start installation from the passenger side of the vehicle. Locate Passenger Side mounting locations as shown on Fig 1.

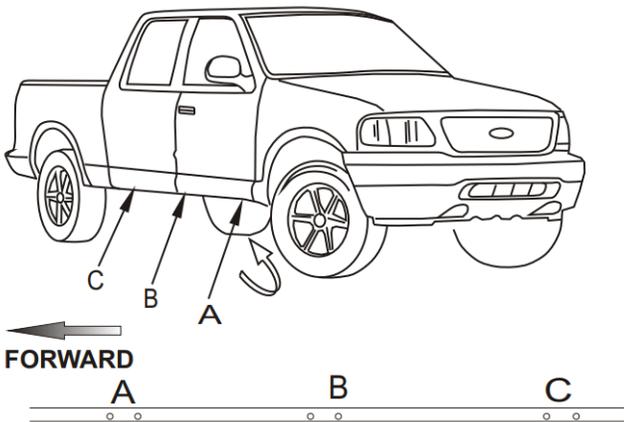

(Fig 1) Passenger Side Mounting Locations

## STEP 2


Start from the passenger side front mounting location. Select (1) M8 Clip Nut. Install M8 Clip Nut as shown, (Fig 2).

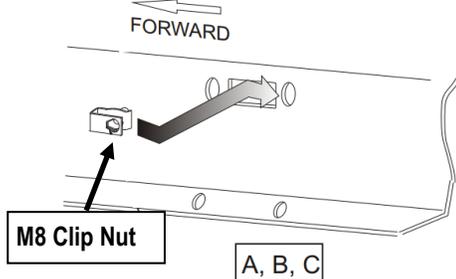

(Fig 2) M8 Clip Nut Installation

## STEP 3

Attach (1) Mounting Bracket to the installed M8 Clip Nut and pinch weld with (1) M8X1.25-25mm Hex Bolt, (1) M8 Flat Washer, (1) M8 Lock Washer and (1) M10X1.5-25mm Hex Bolt, (2) M10 Flat Washers, (1) M10 Lock Washer, (1) M10X1.5 Hex Nut, (Fig 3). Do not fully tighten hardware at this time.

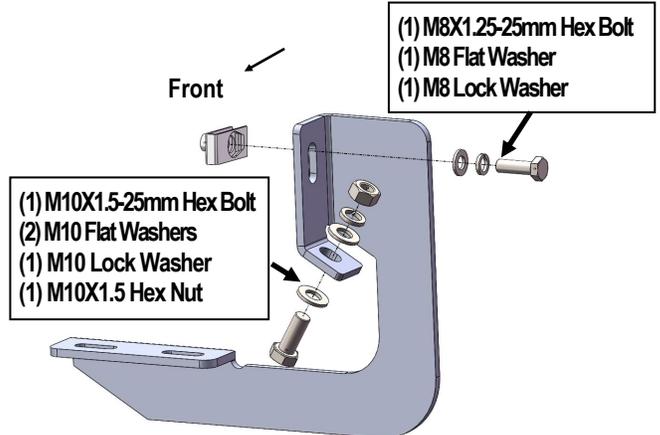

(Fig 3) Passenger Front Mounting Bracket Installation

# iBoard®

## STEP 4


Move to the passenger side center & rear mounting locations. Repeat **Steps 1—3** to install the Mounting Brackets onto the Passenger Side Center & Rear Mounting Locations.

**NOTE:** All (6) Mounting Brackets are universal.

## STEP 5

Select a Running Board. Slip (3) M6x1-20mm Square Head Bolts into each bottom channel (**Fig 4**). Carefully position the Running Board onto the (3) Mounting Brackets.


**IMPORTANT:** Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Bracket with (2) M6x1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 X1 Nylon Lock Nuts (**Fig 5**). Do not fully tighten at this time.

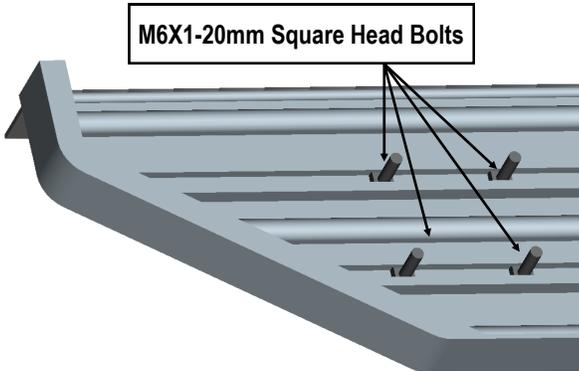

(Fig 4) Slip (3) M6X1-20mm Square Head Bolts Into Each Bottom Channel

## STEP 6

Level and adjust the Running Board and fully tighten all hardware.

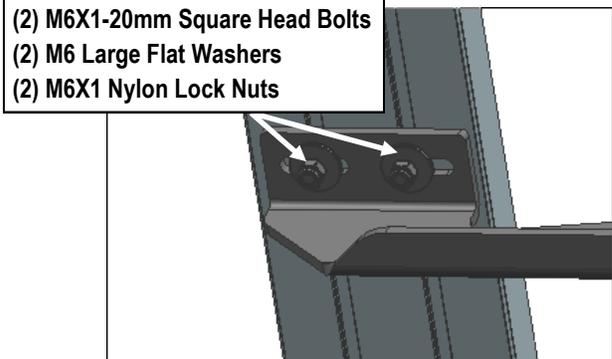

(Fig 5) Running Board Installed Onto Mounting Bracket

## STEP 7

Repeat **Steps 1-6** for other side Running Board installation. The installation is completed (**Fig 6**).



(Fig 6) Installation Completed

### Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.