

iBoard®

iBoard® by APS


PART#: IB-084A&B

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

*ROCKER PANEL MOUNT
*NO DRILLING REQUIRED

Fastener Size	Tightening Torque (ft-lbs)
6mm	6-7
8mm	16-18
10mm	31-32
12mm	56-58
14mm	92-94

Item	QTY	Description	Item	QTY	Description
1#	4	Mounting Brackets	7#	8	M12 Flat Washers
2#	1	Driver Front Bar Bracket	8#	4	M12 Lock Washers
3#	1	Driver Rear Bar Bracket	9#	4	M12X1.75 Hex Nuts
4#	1	Passenger Front Bar Bracket	10#	8	M6X1-20mm Square Head Bolts
5#	1	Passenger Rear Bar Bracket	11#	8	M6 Large Flat Washers
6#	4	M12X1.75-35mm Hex Bolts	12#	8	M6X1 Nylon Lock Nuts





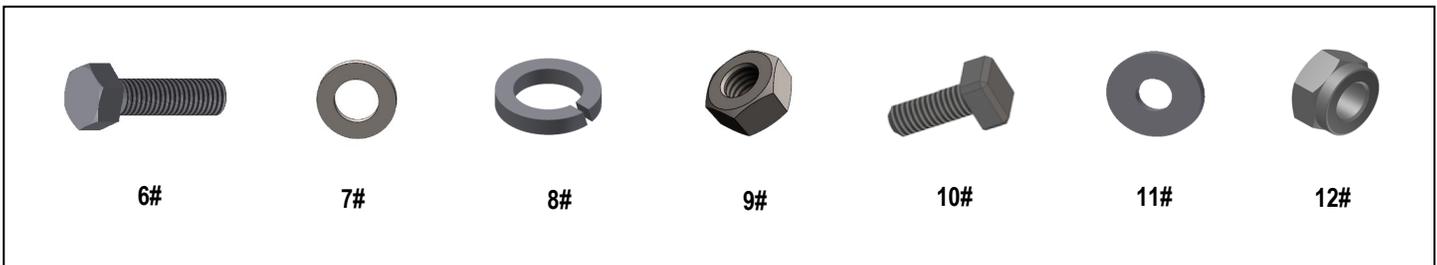


iBoard®

Driver

Front

Passenger

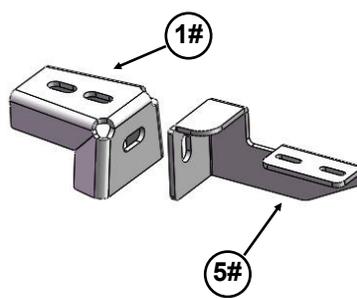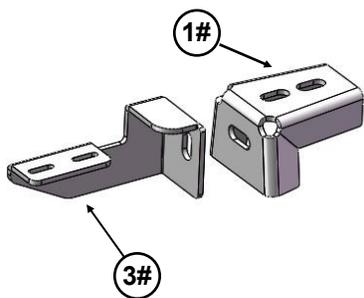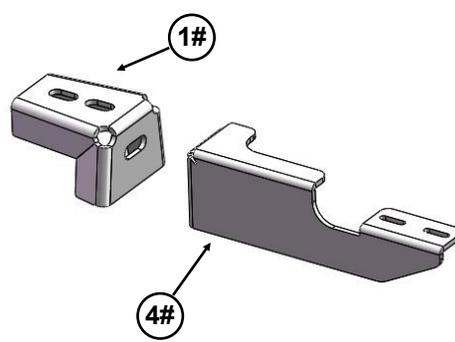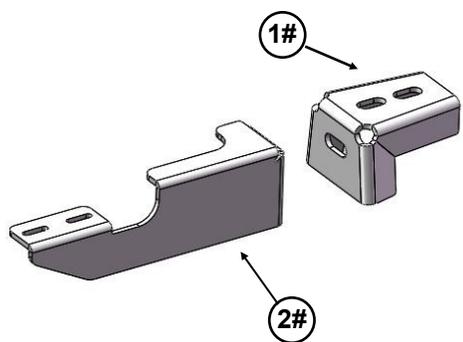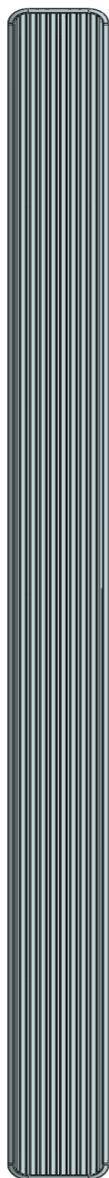

iBoard®


STEP 1

Start installation toward the front of the driver side of the vehicle. Remove the factory body mount bolt (Fig 1). Select (1) Mounting Bracket. Insert the factory body mount bolt through the appropriate slot, the rubber bushing and back into the vehicle. **NOTE:** Do not remove the rubber bushing. The Mounting Bracket will install over the rubber bushing. **IMPORTANT:** The Brackets are equipped with (2) mounting slots. Determine correct model year for proper installation (Figs 2-3):

- 1987 - 1995 Vehicles:** Use the inner slot. Do not fully tighten hardware at this time.
- 1997 - 2006 Vehicles:** Use the outer slot closer to the bend in the Bracket. Do not fully tighten hardware at this time.



(Fig 1) Remove Factory Body Mount Bolt

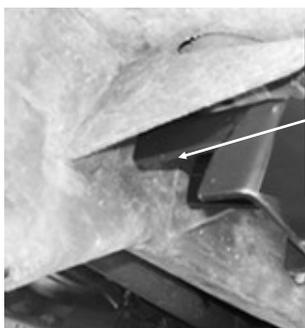


Re-Use The Factory Hex Bolt To Attach The Bracket To Rubber Bushing And Body Mount

(Fig 2) Mounting Bracket Installation Pictured

1987 - 1995 Vehicles:
Use The Inner Slot


1997 - 2006 Vehicles: Use
The Outer Slot Closer To
The Bend In The Bracket

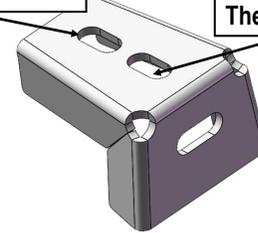

(Fig 3) Mounting Bracket


STEP 2

Select the Driver Front Bar Bracket, attach to the Mounting Bracket with (1) M12X1.75-35mm Hex Bolt, (2) M12 Flat Washers, (1) M12 Lock Washer and (1) M12 X1.75 Hex Nut (Fig 4). Repeat to install driver side rear bracket (Fig 5).

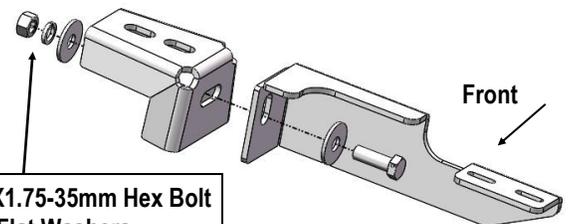

(1) M12X1.75-35mm Hex Bolt
(2) M12 Flat Washers
(1) M12 Lock Washer
(1) M12 X1.75 Hex Nut

(Fig 4) Driver Front Bar Bracket Installation Pictured

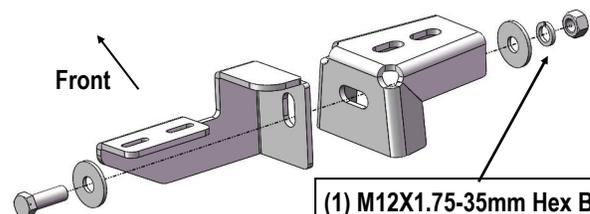

(1) M12X1.75-35mm Hex Bolt
(2) M12 Flat Washers
(1) M12 Lock Washer
(1) M12 X1.75 Hex Nut

(Fig 5) Driver Rear Bar Bracket Installation Pictured

iBoard®

STEP 3

Repeat **Steps 1-2** to install the driver side rear brackets (**Fig 5**).

STEP 4


Select a Running Board. Slip (2) M6X1-20mm Square Head Bolts into each bottom channel (**Fig 6**). Carefully position the Running Board onto the (2) Mounting Brackets.

IMPORTANT: Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Bracket with (2) M6x1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 X1 Nylon Lock Nuts (**Fig 7**). Do not fully tighten at this time.



(Fig 6) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels

(2) M6X1-20mm Square Head Bolts
(2) M6 Large Flat Washers
(2) M6X1 Nylon Lock Nuts

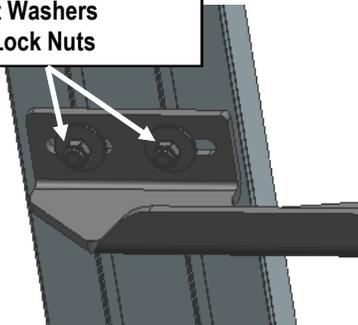

(Fig 7) Running Board Installed Onto Driver Side Bar Bracket

STEP 5

Level and adjust the Running Board and fully tighten all hardware.

STEP 6

Repeat **Steps 1-5** for the other side Running Board installation. The installation is completed (**Fig 8**).



(Fig 8) Installation Completed

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.