

# iBoard®

## iBoard® by APS


PART#: IB-049&050A-B

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

\*ROCKER PANEL MOUNT  
\*NO DRILLING REQUIRED

| Fastener Size | Tightening Torque (ft-lbs) |
|---------------|----------------------------|
| 6mm           | 6-7                        |
| 8mm           | 16-18                      |
| 10mm          | 31-32                      |
| 12mm          | 56-58                      |
| 14mm          | 92-94                      |

### PART LIST

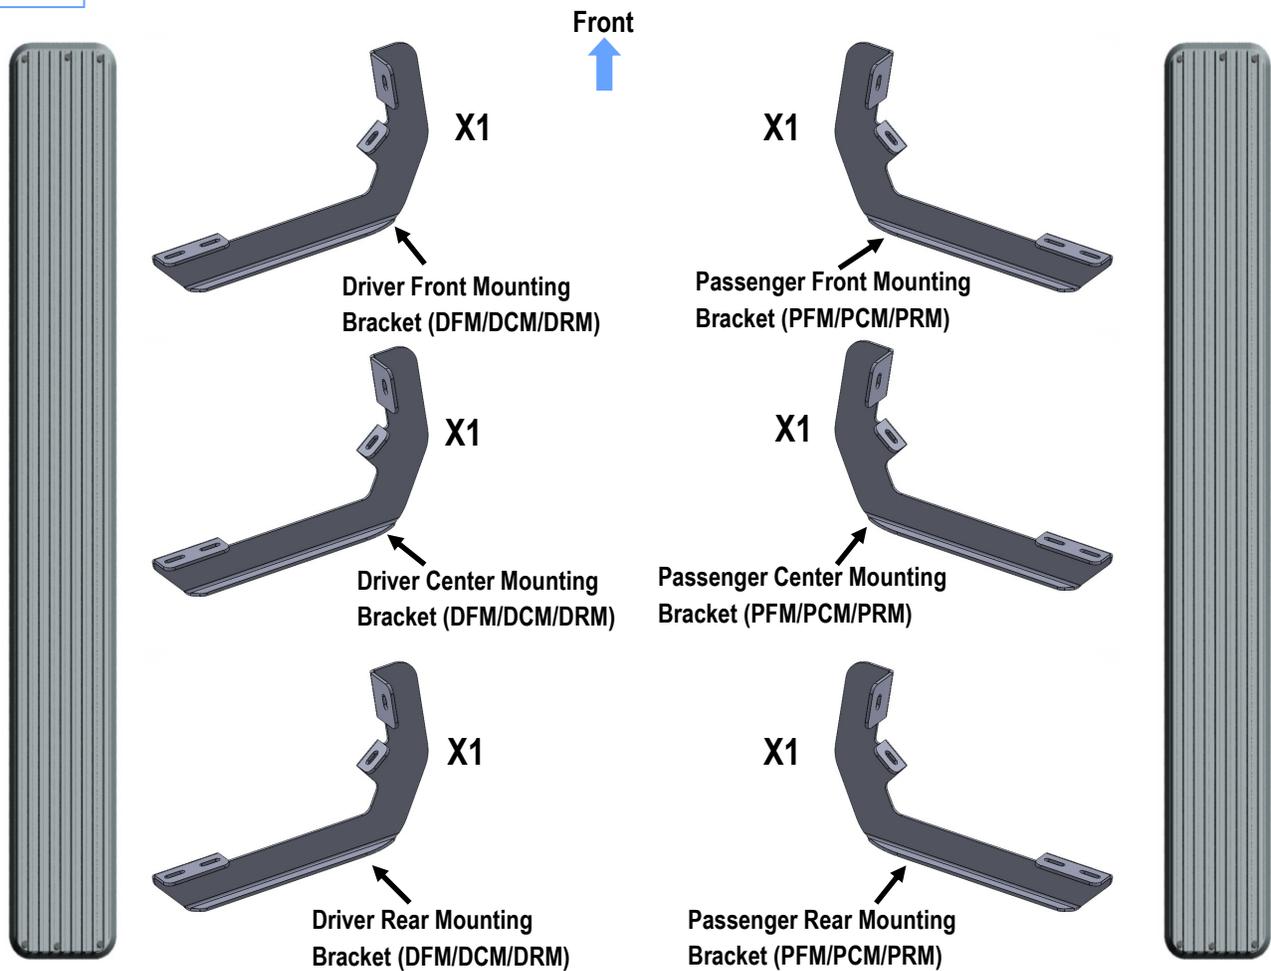


Customer Support: [info@iboardauto.com](mailto:info@iboardauto.com)

# iBoard®




## STEP 1

Start installation at the driver side of the vehicle and locate the factory threaded holes or stud located on the side of the inner body panel, (Fig 1 & 2). **NOTE:** Remove the plastic plug or any insulation on the side panel to locate the threaded holes.

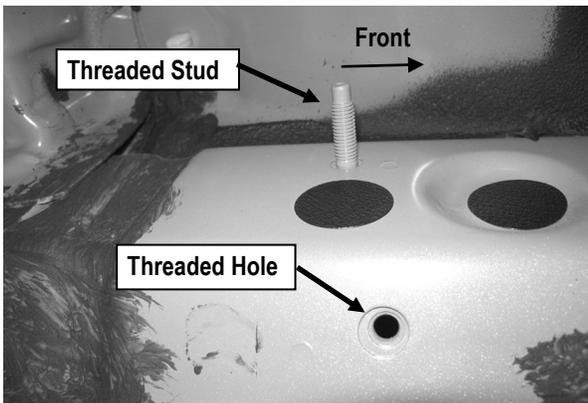

(Fig 1) Up To 2015 Driver Side Rear Mounting Location Pictured. (Note: Remove Plastic Plug To Locate Factory Threaded Hole)

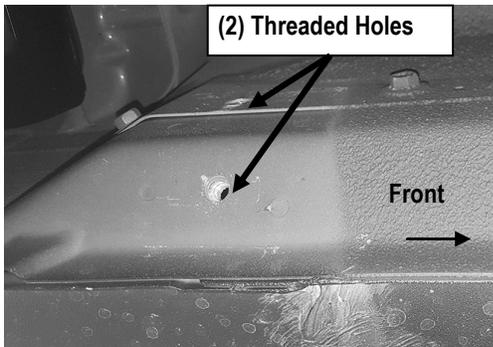


(Fig 2) 2016-On Driver Side Rear Mounting Location Pictured. (Note: Two Factory Threaded Holes Only)

## STEP 2

Attach (1) Driver Front Mounting Bracket onto the Driver Side Front Mounting Location as shown (Fig 3).


- Models with threaded stud:** Attach the Mounting Bracket to stud with (1) M8 Flat Washer, (1) M8 X1.25 Nylon Lock Nut. Next, secure the bracket to the lower threaded hole with (1) M8X1.25-25mm Hex Bolt, (1) M8 Flat Washer and (1) M8 Lock Washer. Do not tighten hardware at this time.
- Models without threaded stud:** Attach the Mounting Bracket to the upper threaded hole with (1) M8X1.25-25mm Hex Bolt, (1) M8 Flat Washer and (1) M8 Lock Washer. Next, secure the bracket to the lower threaded hole with (1) M8X1.25-25mm Hex Bolt, (1) M8 Flat Washer and (1) M8 Lock Washer, (Fig 4). Do not fully tighten hardware at this time.

Repeat to Install the Driver Center and Rear mounting brackets.

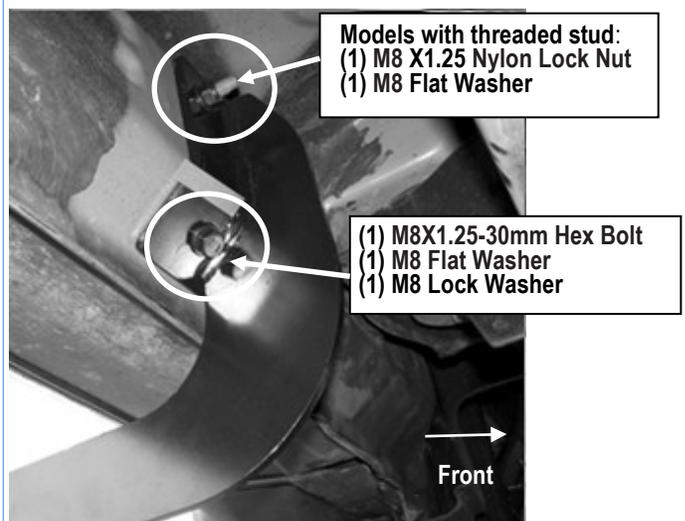

(Fig 3) Models With Threaded Stud Bracket Installed

# iBoard®

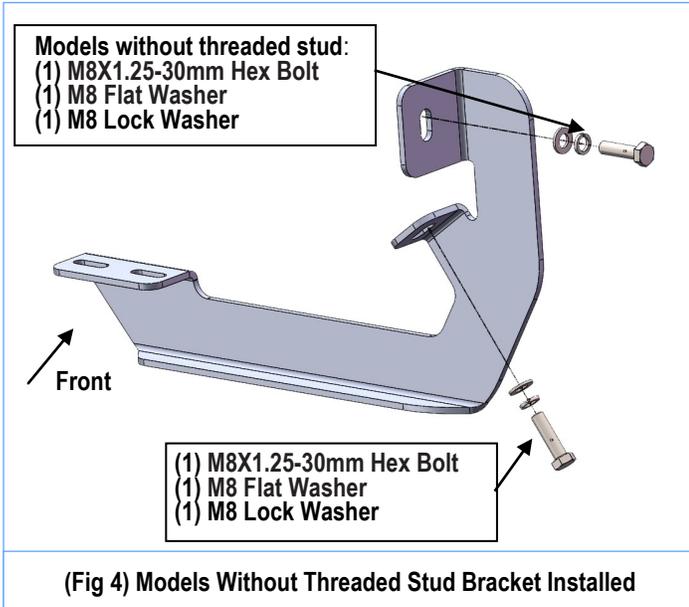


## STEP 3

Select a Running Board. Slip (3) M6X1-20mm Square Head Bolts into each bottom channel (Fig 5). Carefully position the Running Board onto the (3) Mounting Brackets.

**IMPORTANT:** Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Brackets with (2) M6x1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 X1 Nylon Lock Nuts (Fig 6). Do not fully tighten at this time.



(Fig 5) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels

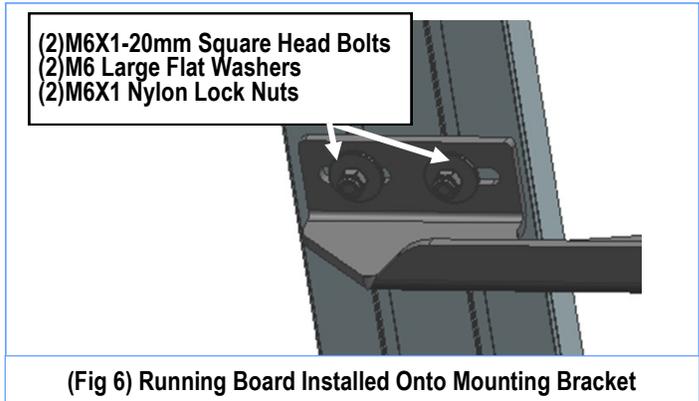

## STEP 4

Level and adjust the Running Board and fully tighten all hardware.

## STEP 5

Repeat **Steps 1-4** for the other side Running Board installation. The installation is completed (Fig 7).



(Fig 7) Installation Completed

### Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.