

iBoard®

iBoard® by APS


PART#: IB-094/095A&B

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

*ROCKER PANEL MOUNT
*No DRILLING REQUIRED

Fastener Size	Tightening Torque (ft-lbs)
6mm	6-7
8mm	16-18
10mm	31-32
12mm	56-58
14mm	92-94

Item	QTY	Description	Item	QTY	Description
1#	6	Mounting Brackets	5#	12	M6X1-20mm Square Head Bolts
2#	12	M8 Large Flat Washers	6#	12	M6 Large Flat Washers
3#	12	M8 Lock Washers	7#	12	M6X1 Nylon Lock Nuts
4#	12	M8 Hex Nuts			







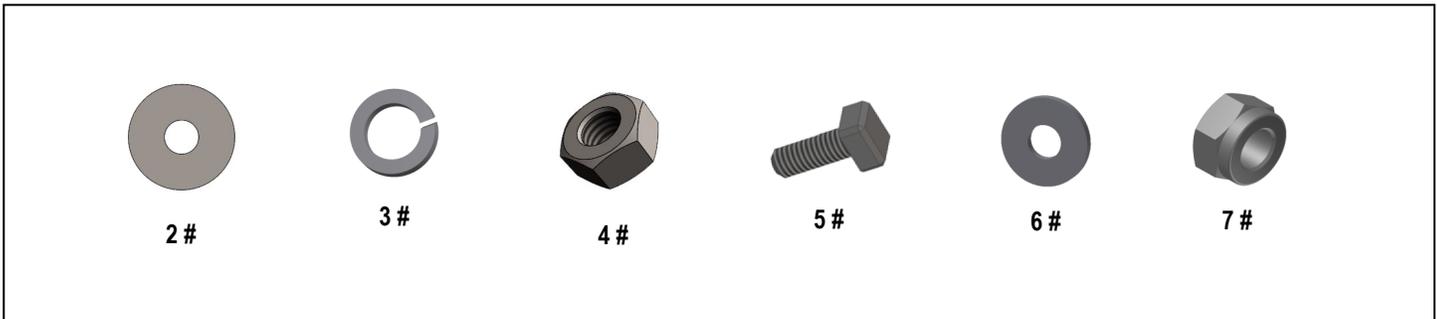


iBoard®

Driver

Front

Passenger

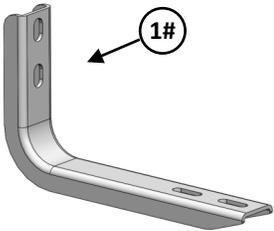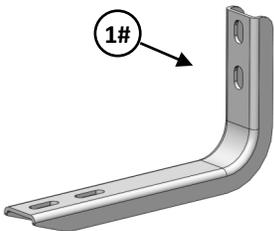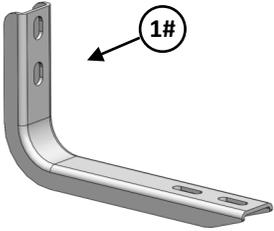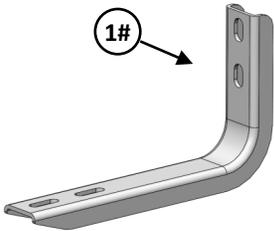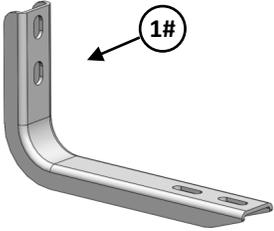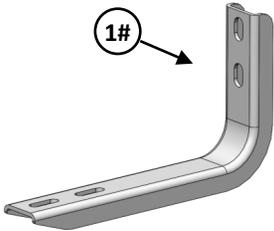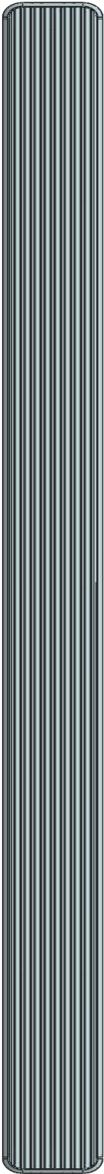

iBoard®


STEP 1

Starting on the passenger side of the vehicle. On the passenger side, if equipped, remove the existing running board by removing the (6) nuts holding mount to inside of body. Install the mounting brackets with the removed stock nuts, leave nuts loose for now (**Fig 1 & 2**).

NOTE: Holes in brackets are off set, install with holes towards front of truck, passenger side shown.


If not equipped with factory running boards – then use the supplied (2) M8 Hex Nuts, (2) Flat Washers & (2) Lock Washers to install mounting brackets to truck.

(2)M8 Lock Washers
(2)M8 Flat Washers
(2)M8 Hex Nuts

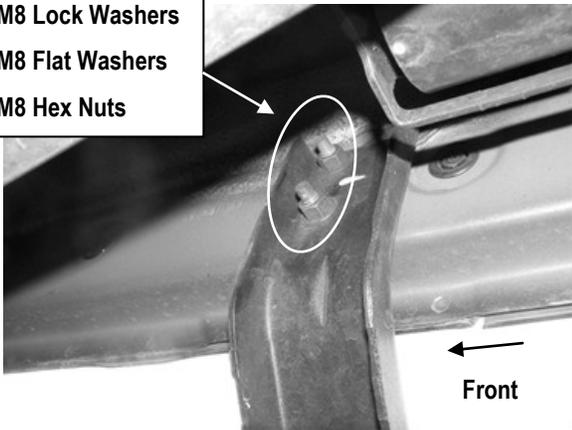

(Fig 1) Passenger Side Front Mounting Bracket

(2)M8 Lock Washers
(2)M8 Flat Washers
(2)M8 Hex Nuts

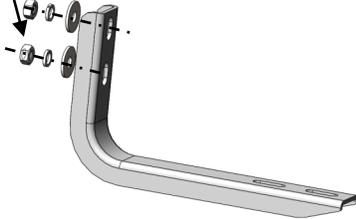

(Fig 2) Passenger Side Front Mounting Bracket

STEP 2

Repeat **Step 1** to install other (2) passenger side mounting brackets.

STEP 3


Select a Running Board. Slip (3) M6x1-20mm Square Head Bolts into each bottom channel (**Fig 3**). Carefully position the Running Board onto the (3) Mounting Brackets.

IMPORTANT: Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Brackets with (2) M6x1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 X1 Nylon Lock Nuts (**Fig 4**). Do not fully tighten at this time.



(Fig 3) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels

(2)M6X1-20mm Square Head Bolts
(2)M6 Large Flat Washers
(2)M6X1 Nylon Lock Nuts

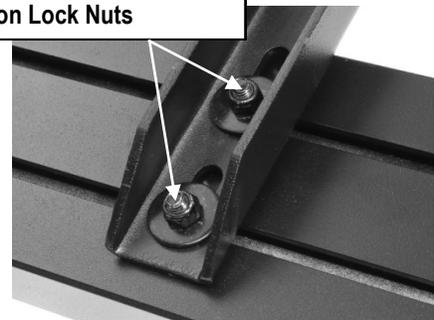

(Fig 4) Running Board Installed Onto Mounting Bracket

iBoard®

STEP 4

Level and adjust the Running Board and fully tighten all hardware.

STEP 5

Repeat **Steps 1-4** for the other side Running Board installation. The installation is completed (**Fig 5**).



(Fig 5) Installation Completed

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.