

# iBoard®

## iBoard® by APS


PART#: IB-095[S]-A\_B

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

\*ROCKER PANEL MOUNT  
\*NO DRILLING REQUIRED

Fastener Size	Tightening Torque (ft-lbs)
6mm	6-7
8mm	16-18
10mm	31-32
12mm	56-58
14mm	92-94

### PART LIST

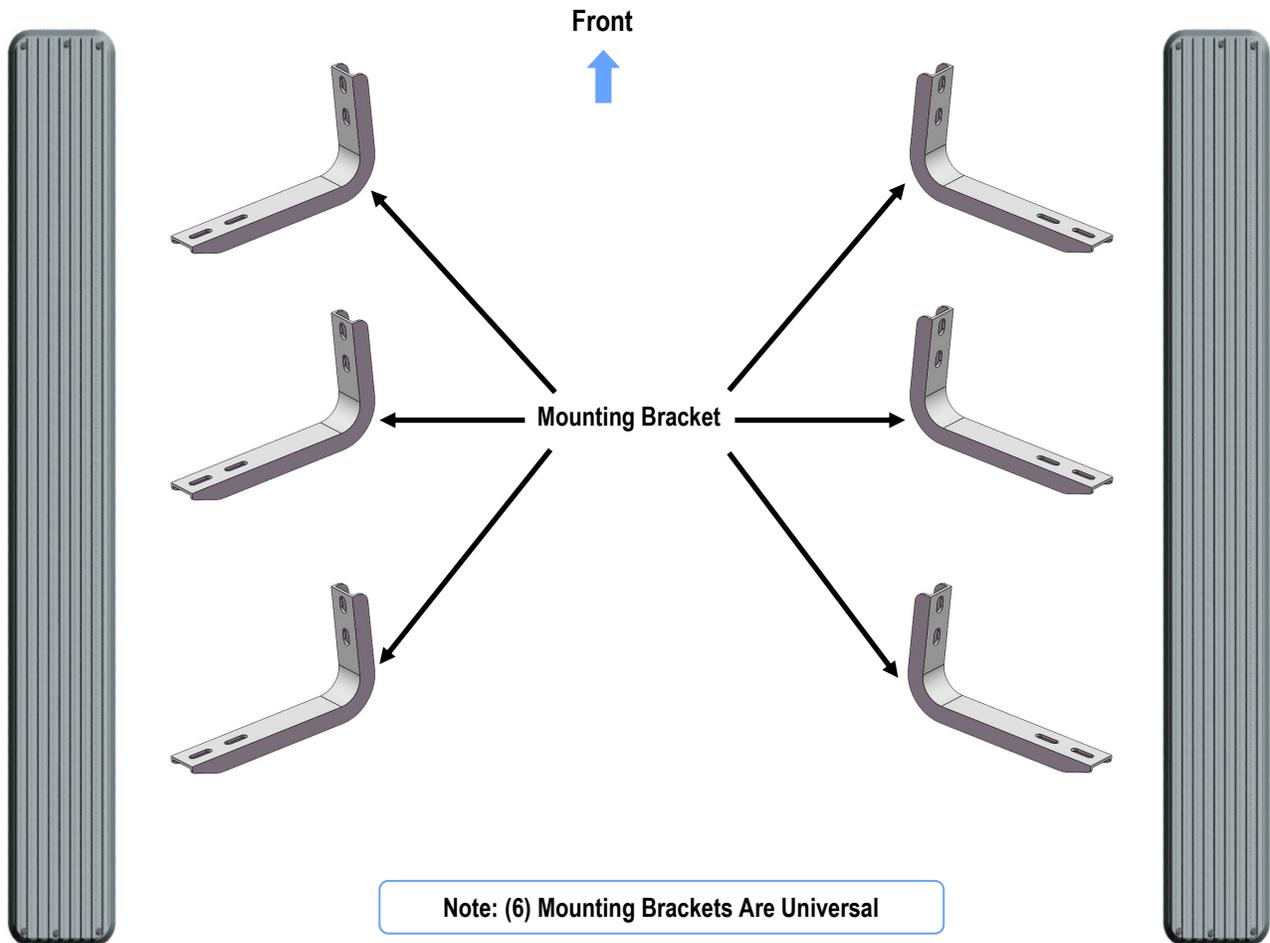

Customer Support: [info@iboardauto.com](mailto:info@iboardauto.com)

# iBoard®



X12

M8 Large Flat Washer



X12

M8 Lock Washer



X12

M8X1.25 Hex Nut



X12

M6X1-20mm  
Square Head Bolt



X12

M6 Large Flat  
Washer



X12

M6X1 Nylon  
Lock Nut

## STEP 1


Start installation from the Passenger Side Front Mounting Location.

### **Vehicle equipped existing factory running board:**


- 1) Remove the existing running board by removing the (6) nuts mounting the brackets to inside of body panel.
- 2) Install (1) Mounting Bracket with (2) removed factory nuts, leave nuts loose at this time (Fig 1).

### **Vehicle without existing factory running board:**

Secure (1) Mounting Bracket to the body panel with the supplied (2) M8 Hex Nuts, (2) M8 Large Flat Washers & (2) M8 Lock Washers (Fig 2). Do not fully tighten at this time.

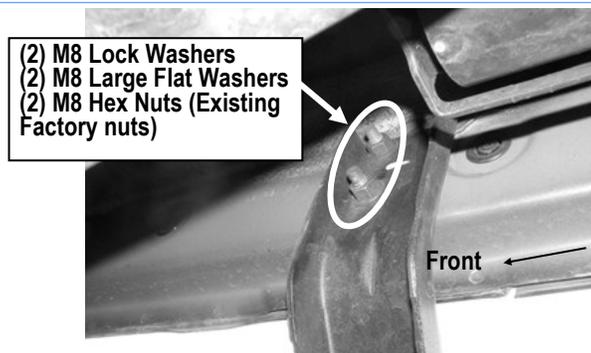

(Fig 1) Passenger Front Mounting Bracket Installed  
(Vehicle equipped existing factory running board)

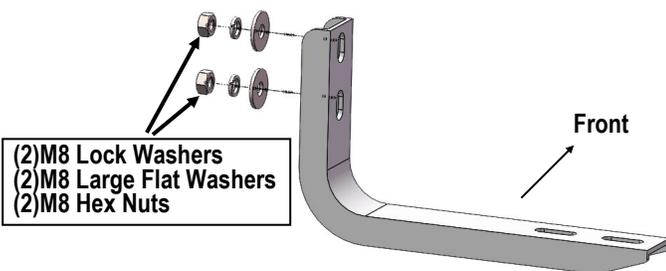

(Fig 2) Passenger Front Mounting Bracket Installed  
(Vehicle without existing factory running board)

## STEP 2

Repeat **Step 1** to install other (2) passenger side mounting brackets. Don't fully tighten the hardware at this time.

## STEP 3

Select a Running Board. Slip (3) M6x1-20mm Square Head Bolts into each bottom channel (Fig 3). Carefully position the Running Board onto the (3) Mounting Brackets.


**IMPORTANT:** Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Brackets with (2) M6x1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 X1 Nylon Lock Nuts (Fig 4). Do not fully tighten at this time.



(Fig 3) Slip M6X1-20mm Square Head Bolts Into The Bottom  
Channels

# iBoard®

- (2) M6X1-20mm Square Head Bolts
- (2) M6 Large Flat Washers
- (2) M6X1 Nylon Lock Nuts

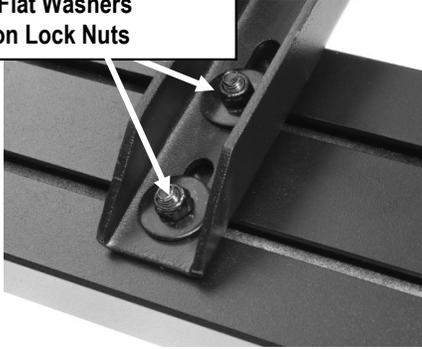

(Fig 4) Running Board Installed Onto Mounting Bracket

## STEP 4

Level and adjust the Running Board and fully tighten all hardware.

## STEP 5

Repeat **Steps 1-4** for the other side Running Board installation. The installation is completed (Fig 5).



(Fig 5) Installation Completed

### Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.