

iBoard®

iBoard® by APS


PART#: IB-097/098A&B

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

*ROCKER PANEL MOUNT
*NO DRILLING REQUIRED

Fastener Size	Tightening Torque (ft-lbs)
6mm	6-7
8mm	16-18
10mm	31-32
12mm	56-58
14mm	92-94

Item	QTY	Description	Item	QTY	Description
1#	2	Driver/Passenger Front Mounting Brackets	5#	12	M8 Lock Washers
2#	4	Mounting Brackets	6#	12	M6X1-20mm Square Head Bolts
3#	12	M8X1.25-30mm Hex Bolts	7#	12	M6 Large Flat Washers
4#	12	M8 Flat Washers	8#	12	M6X1 Nylon Lock Nuts







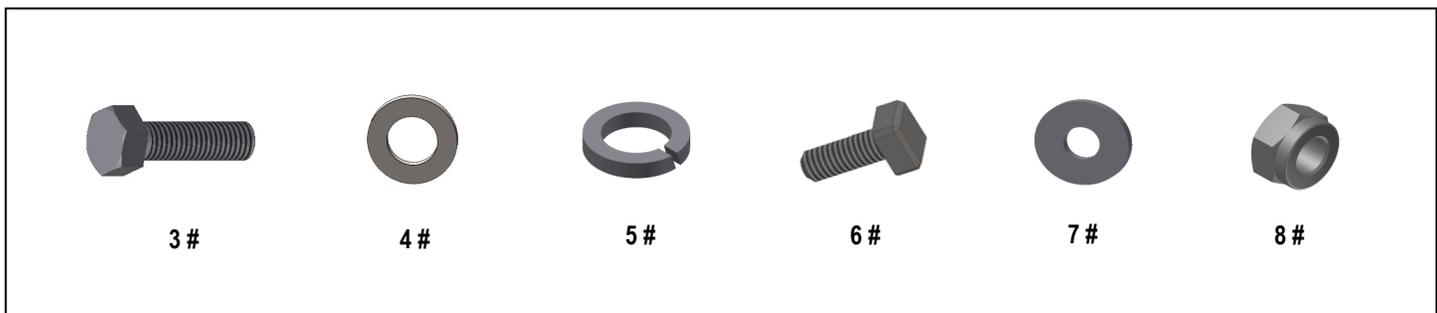


iBoard®

Driver

Front

Passenger

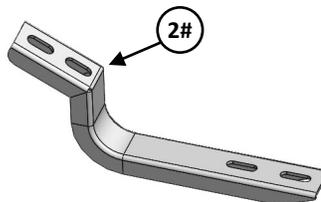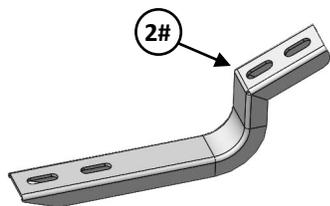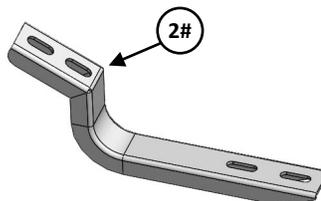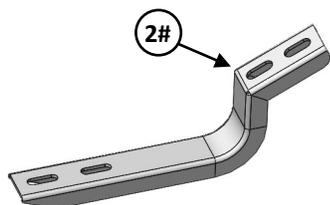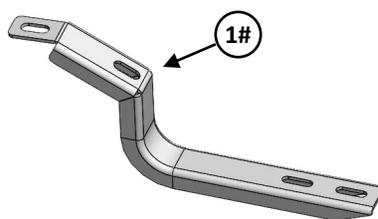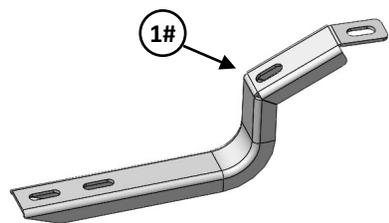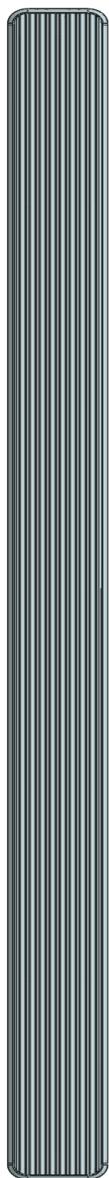


iBoard®

STEP 1


Starting on the driver side front of the vehicle, remove the existing (2) factory bolts, (or plastic plugs), on the side panel located by the front tire opening, (**Fig 1**). This will be the mounting location for the driver side front Mounting Bracket.

Note: There are 4 sets of threaded holes in the side panel. Starting from the front of the vehicle, use the 1st, 2nd, and 4th set of holes.

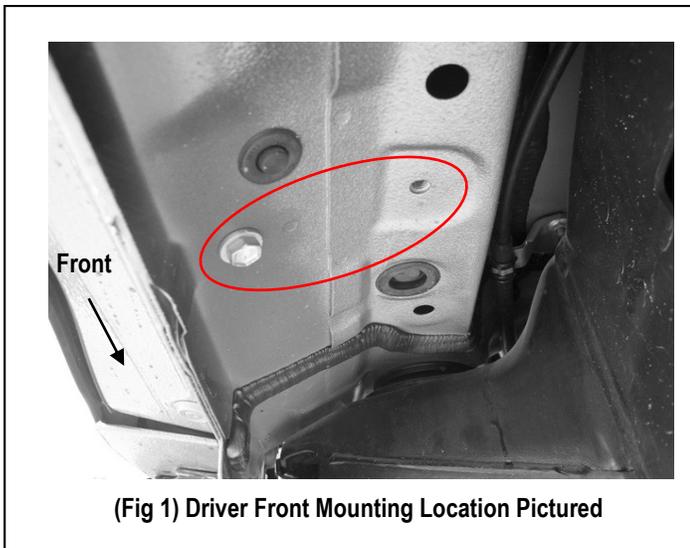

STEP 2

Select the Driver Front Mounting Bracket (**DFM/PFM**). Attach the Bracket to the vehicle using the included (2) M8X1.25-30mm Hex Bolts, (2) M8 Flat Washers and (2) M8 Lock Washers. Don't tighten at this time, (**Fig 2**).

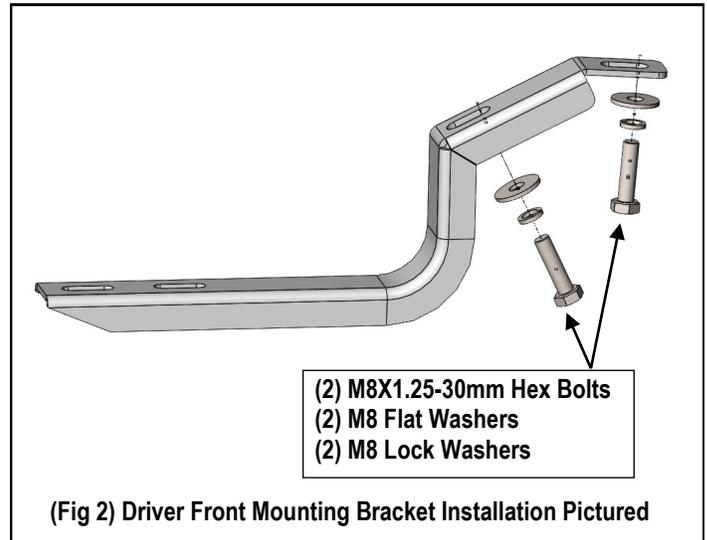

STEP 3

Move along the driver side center & rear mounting location, (**Fig 3 & 4**). Repeat **Steps 1-2** to install the Driver Center Mounting Bracket and Driver Rear Mounting Bracket.



iBoard®

- (2) M8X1.25-30mm Hex Bolts
- (2) M8 Flat Washers
- (2) M8 Lock Washers



(Fig 4) Driver Rear Mounting Bracket Installation Pictured

STEP 4

Select (1) Running Board. Slip (3) M6X1-20mm Square Head Bolts into each bottom channel (Fig 5). Carefully position the Running Board onto the (3) Mounting Brackets.


IMPORTANT: Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Brackets with (2) M6x1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 X1 Nylon Lock Nuts (Fig 6). Do not fully tighten at this time.

Level and adjust the Running Board and fully tighten all hardware.



(Fig 5) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels

- (2) M6X1-20mm Square Head Bolts
- (2) M6 Large Flat Washers
- (2) M6X1 Nylon Lock Nuts

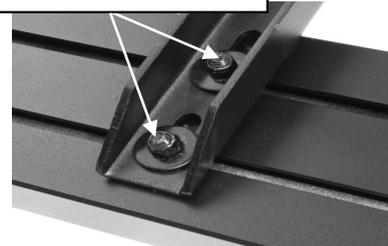

(Fig 6) Running Board Installed Onto Mounting Bracket

STEP 5

Repeat **Steps 1-4** for the other side Running Board installation. The installation is completed (Fig 7).



(Fig 7) Installation Completed

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.