

iBoard®

iBoard® by APS


PART#: IB-101A-B

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

***ROCKER PANEL MOUNT
*NO DRILLING REQUIRED**

| Fastener Size | Tightening Torque (ft-lbs) |
|---------------|----------------------------|
| 6mm | 6-7 |
| 8mm | 16-18 |
| 10mm | 31-32 |
| 12mm | 56-58 |
| 14mm | 92-94 |

PART LIST

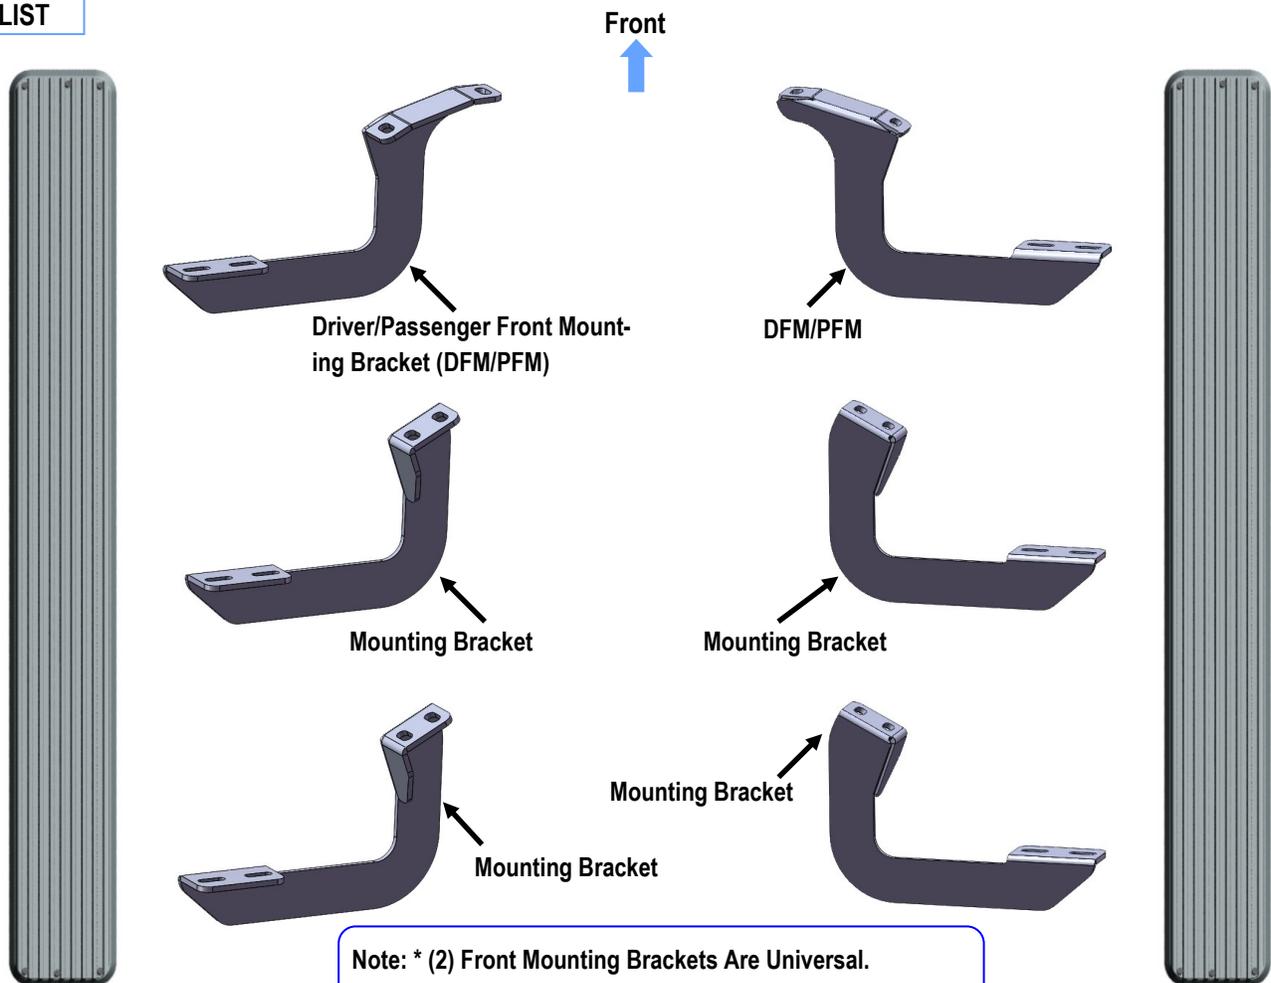

Note: * (2) Front Mounting Brackets Are Universal.
* (4) Center & Rear Mounting Brackets Are Universal.

Customer Support: info@iboardauto.com

iBoard®




STEP 1

Start installation from the Driver Side Front of the vehicle. Remove the (2) factory hex bolts or plastic plugs from the threaded holes in the bottom of the body panel, (Fig 1 & 2).




(Fig 1) Driver Side Front Mounting Location

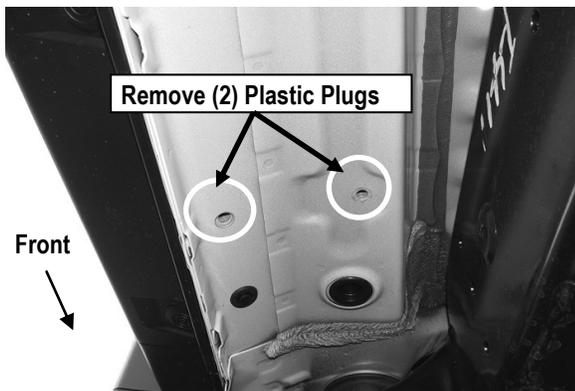

(Fig 2) Driver Side Front Mounting Location

STEP 2

Select (1) Driver Front Mounting Bracket (DFM/PFM). Line up the mounting holes in the Bracket with the threaded holes on the body panel. Bolt the Driver Front Mounting Bracket to the vehicle using the included (2) M8X1.25-40mm Hex Bolts, (2) M8 Lock Washers and (2) M8 Flat Washers, (Fig 3). Do not fully tighten hardware at this time.

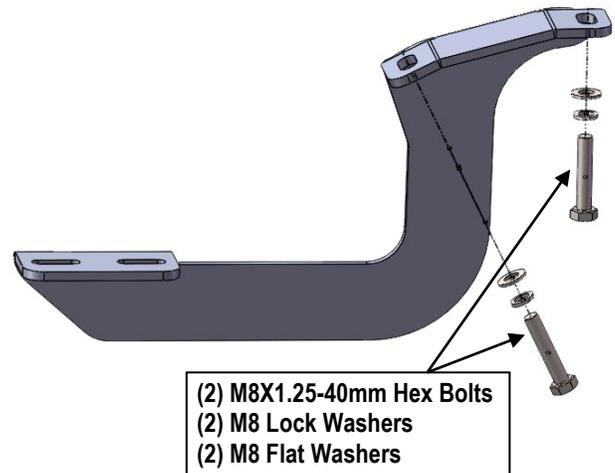


(Fig 3) Driver Front Mounting Bracket (DFM/PFM) Installation

STEP 3

Move to the Driver Side Center & Rear Mounting Locations, (Fig 4). Repeat Steps 1-2 to bolt the Mounting Brackets to the factory threaded holes. Do not fully tighten hardware at this time.

iBoard®

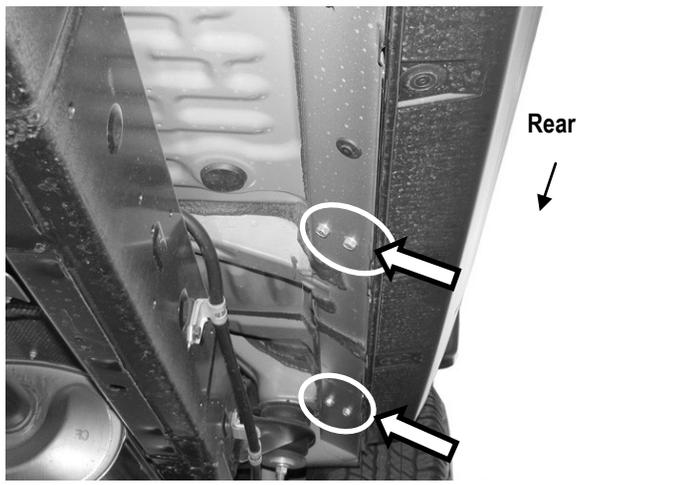

(Fig 4) Driver Side Center & Rear Mounting Locations

STEP 4


Select a Running Board. Slip (2) M6x1-20mm Square Head Bolts into each bottom channel (Fig 5). Carefully position the Running Board onto the (3) Mounting Brackets.

IMPORTANT: Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to Mounting Bracket with (6) M6x1-20mm Square Head Bolts, (6) M6 Large Flat Washers and (6) M6 X1 Nylon Lock Nuts (Fig 6). Do not fully tighten hardware at this time.



(Fig 5) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels

(2) M6X1-20mm Square Head Bolts
(2) M6 Large Flat Washers
(2) M6X1 Nylon Lock Nuts

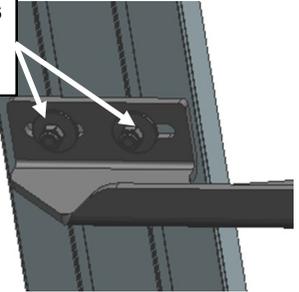

(Fig 6) Running Board Installed Onto the Mounting Bracket (Example)

STEP 5

Level and adjust the Running Board and fully tighten all hardware.

STEP 6

Repeat **Steps 1-5** for the other side Running Board installation. The installation is completed (Fig 7).



(Fig 7) Installation Completed

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.