

iBoard®

iBoard® by APS


PART#: IB-280A-B

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

***ROCKER PANEL MOUNT
*NO DRILLING REQUIRED**

Fastener Size	Tightening Torque (ft-lbs)
6mm	6-7
8mm	16-18
10mm	31-32
12mm	56-58
14mm	92-94

PART LIST

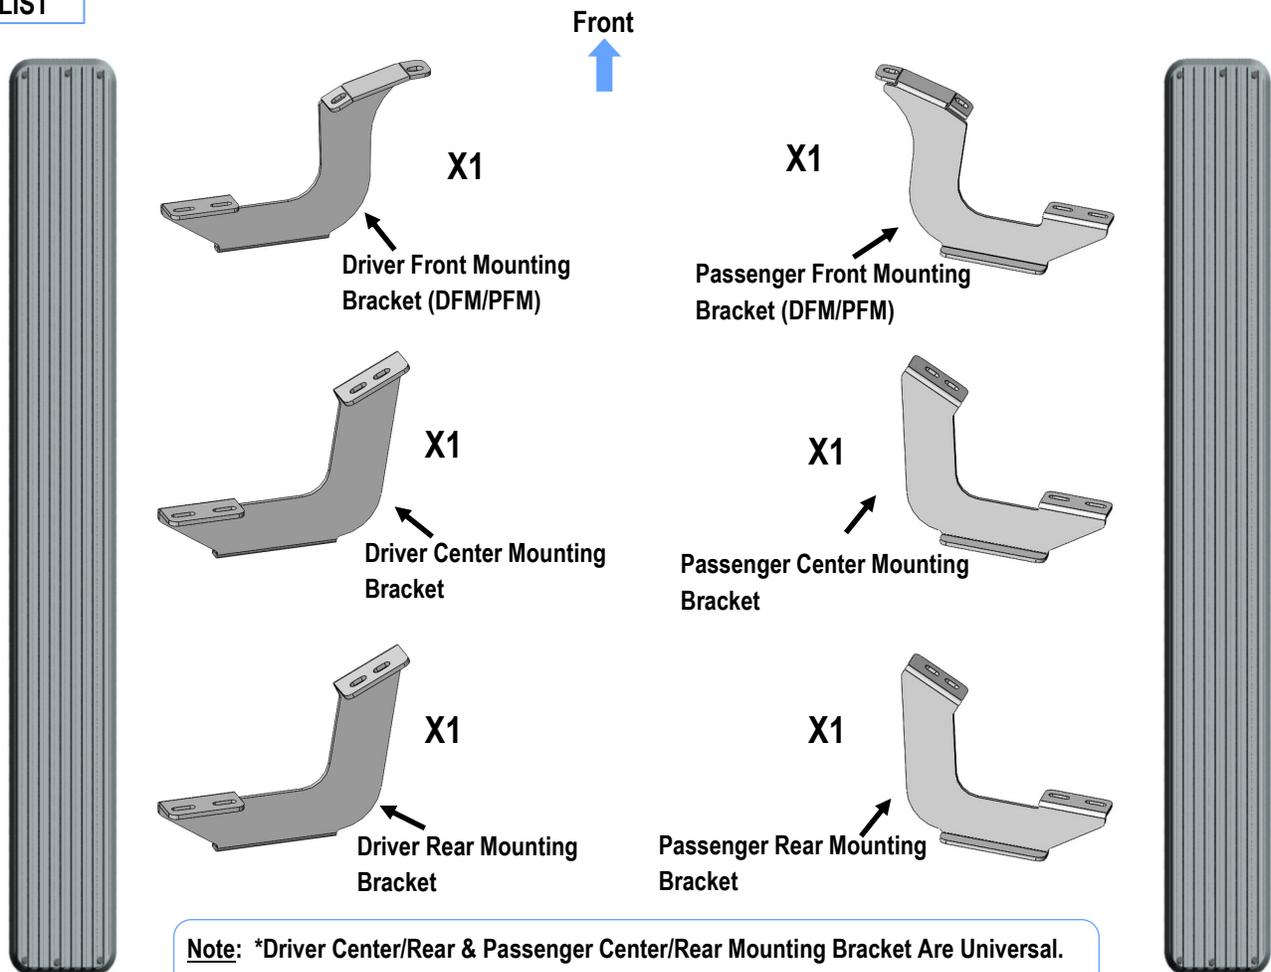

Note: *Driver Center/Rear & Passenger Center/Rear Mounting Bracket Are Universal.
*Driver Front & Passenger Front Mounting Bracket Are Universal.

Customer Support: info@iboardauto.com

iBoard®



X12

M8X1.25-30mm Hex Bolt



X12

M8 Flat Washer



X12

M8 Lock Washer



X12

M6X1-20mm
Square Head Bolt



X12

M6 Large Flat
Washer




X12

M6X1 Nylon
Lock Nut

STEP 1

Start installation on the passenger side of the vehicle, remove the existing (2) factory bolts located by the front tire opening securing the factory rocker panel bracket to the vehicle, (Fig 1).

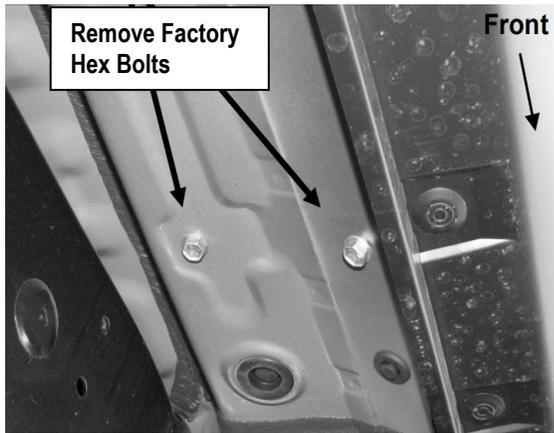


(Fig 1) Passenger Front Mounting Bracket Location Pictured

STEP 2

Select (1) Passenger Front Mounting Bracket (DFM/PFM). Hold the Passenger Front Mounting Bracket (DFM/PFM) over the rocker panel bracket and line up the (2) mounting holes. Secure the bracket to the vehicle using the included (2) M8X1.25-30mm Hex Bolts, (2) M8 Lock Washers and (2) M8 Flat Washers, (Fig 2). Do not fully tighten hardware at this time.


(2) M8X1.25-30mm Hex Bolts
(2) M8 Flat Washers
(2) M8 Lock Washers

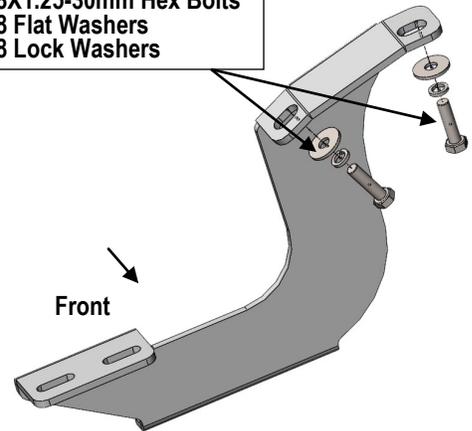

(Fig 2) Passenger Front Mounting Bracket Installation


STEP 3

Move to the passenger side center and rear mounting locations. Repeat **Steps 1-2** to install the Passenger Center Mounting Bracket and Passenger Rear Mounting Bracket (Fig 3 & 4). Do not fully tighten hardware at this time.

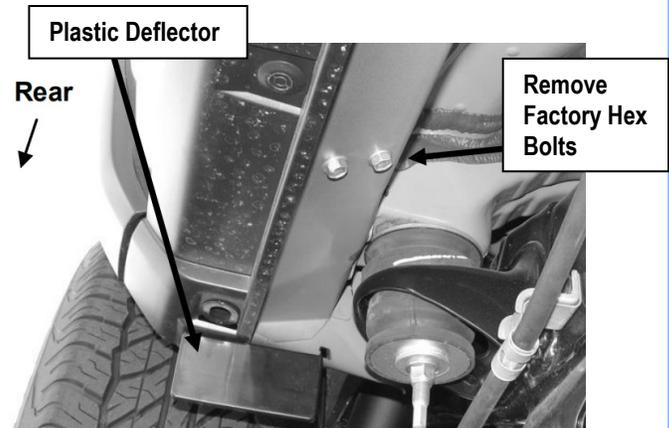

(Fig 3) Passenger Rear Mounting Bracket Location Pictured

iBoard®

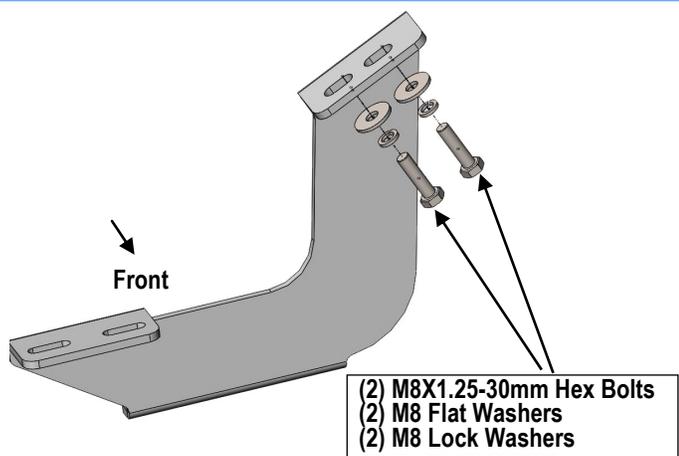

(Fig 4) Driver Center/Rear Mounting Brackets Installation

STEP 4


Select a Running Board. Slip (3) M6x1-20mm Square Head Bolts into each bottom channel (Fig 5). Carefully position the Running Board onto the (3) Mounting Brackets.

IMPORTANT: Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Brackets with (2) M6x1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 X1 Nylon Lock Nuts (Fig 6). Do not fully tighten at this time.



(Fig 5) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels

(2) M6X1-20mm Square Head Bolts
(2) M6 Large Flat Washers
(2) M6X1 Nylon Lock Nuts

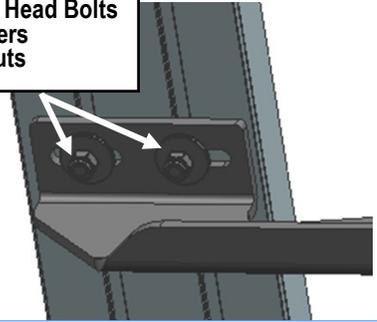

(Fig 6) Running Board Installed Onto Mounting Bracket

STEP 5

Level and adjust the Running Board and fully tighten all hardware.

STEP 6

Repeat **Steps 1-5** for the other side Running Board installation. The installation is completed (Fig 7).



(Fig 7) Installation Completed

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.