

# iBoard®

## iBoard® by APS


**PART#: IB-056/058A&B**

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

**\*ROCKER PANEL MOUNT**  
**\*No DRILLING REQUIRED**


Fastener Size	Tightening Torque (ft-lbs)
6mm	6-7
8mm	16-18
10mm	31-32
12mm	56-58
14mm	92-94

Item	QTY	Description	Item	QTY	Description
1#	2	Driver/Passenger Front Mounting Brackets	5#	12	M8 Lock Washers
2#	4	Driver /Passenger Center/Rear Mounting Brackets	6#	12	M6X1-20mm Square Head Bolts
3#	12	M8X1.25-30mm Hex Bolts	7#	12	M6 Large Flat Washers
4#	12	M8 Flat Washers	8#	12	M6X1 Nylon Lock Nuts

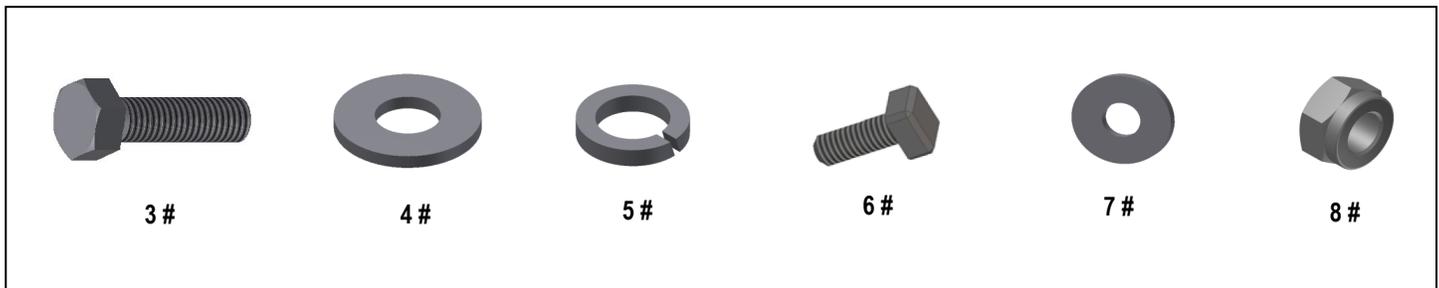

# iBoard®


Driver

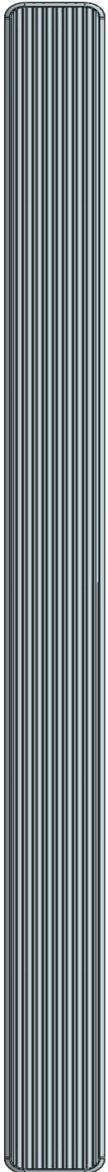

Front




Passenger

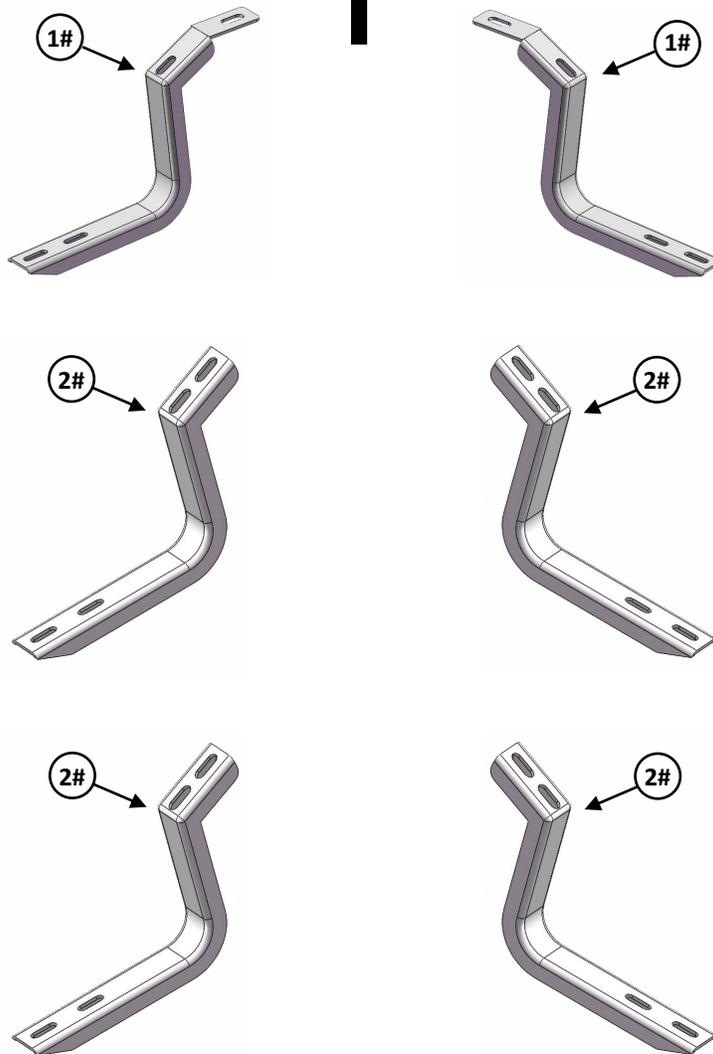

# iBoard®

## STEP 1

Starting on the driver side front of the vehicle, remove the existing (2) factory bolts, (or plastic plugs) (Fig 1). This will be the mounting location for the Driver Front Mounting Bracket.

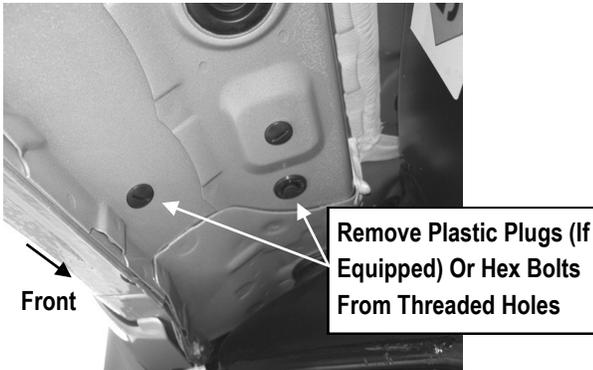


(Fig 1) Driver Front Mounting Bracket Location

## STEP 2

Select the Driver Front Mounting Bracket, attach the Bracket to the vehicle using the included (2) M8x1.25-30mm Hex Bolts, (2) M8 Lock Washers and (2) M8 Flat Washers, (Fig 2). Do not fully tighten hardware at this time.

**Note:** All (2) Front Mount Brackets are universal.

(2) M8x1.25-30mm Hex Bolts  
(2) M8 Lock Washers  
(2) M8 Flat Washers

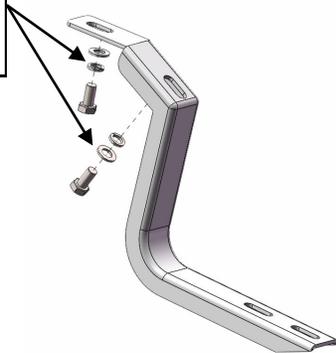


(Fig 2) Driver Front Mounting Bracket Installed

## STEP 3

Move along the side panel to the Driver Side Center and Rear Mounting Locations, (Fig 3). Repeat Step 1 & 2 to install the Driver Center & Rear Mounting Brackets, (Fig 4). **Note:** The (4) mounting brackets for driver/passenger side center and rear are universal.



(Fig 3) Example of Driver Side Center & Rear Mounting Location

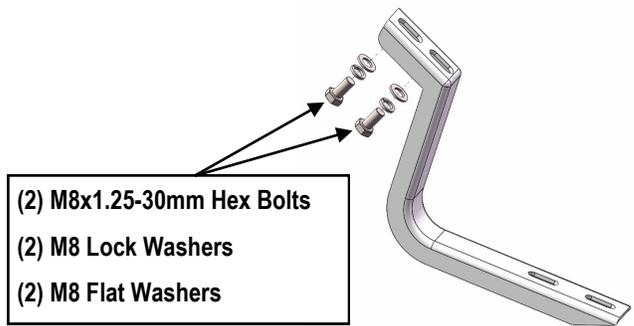

(Fig 4) Driver Center & Rear Mounting Bracket Installed

## STEP 4

Select a Running Board. Slip (3) M6x1-20mm Square Head Bolts into each bottom channel (Fig 5). Carefully position the Running Board onto the (3) Mounting Brackets.


**IMPORTANT:** Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Brackets with (2) M6x1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 X1 Nylon Lock Nuts (Fig 6). Do not tighten at this time.

# iBoard®



(Fig 5) Slip M6X1-20mm Square Head Bolts Into The Bottom Channels

- (2)M6X1-20mm Square Head Bolts
- (2)M6 Large Flat Washers
- (2)M6X1 Nylon Lock Nuts

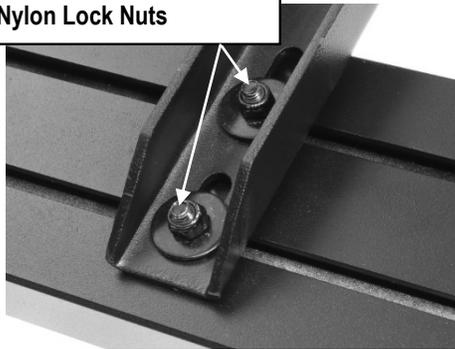

(Fig 6) Running Board Installed Onto Mounting Bracket

## STEP 5

Level and adjust the Running Board and fully tighten all hardware.

## STEP 6

Repeat **Steps 1-5** for the other side Running Board installation. The installation is completed (Fig 7).



(Fig 7) Installation Completed

### Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.