

iBoard®

iBoard® by APS


PART#: IB-058[S]-A_B

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. ASSISTANCE IS RECOMMENDED.

***ROCKER PANEL MOUNT
*NO DRILLING REQUIRED**

Fastener Size	Tightening Torque (ft-lbs)
6mm	6-7
8mm	16-18
10mm	31-32
12mm	56-58
14mm	92-94

PART LIST

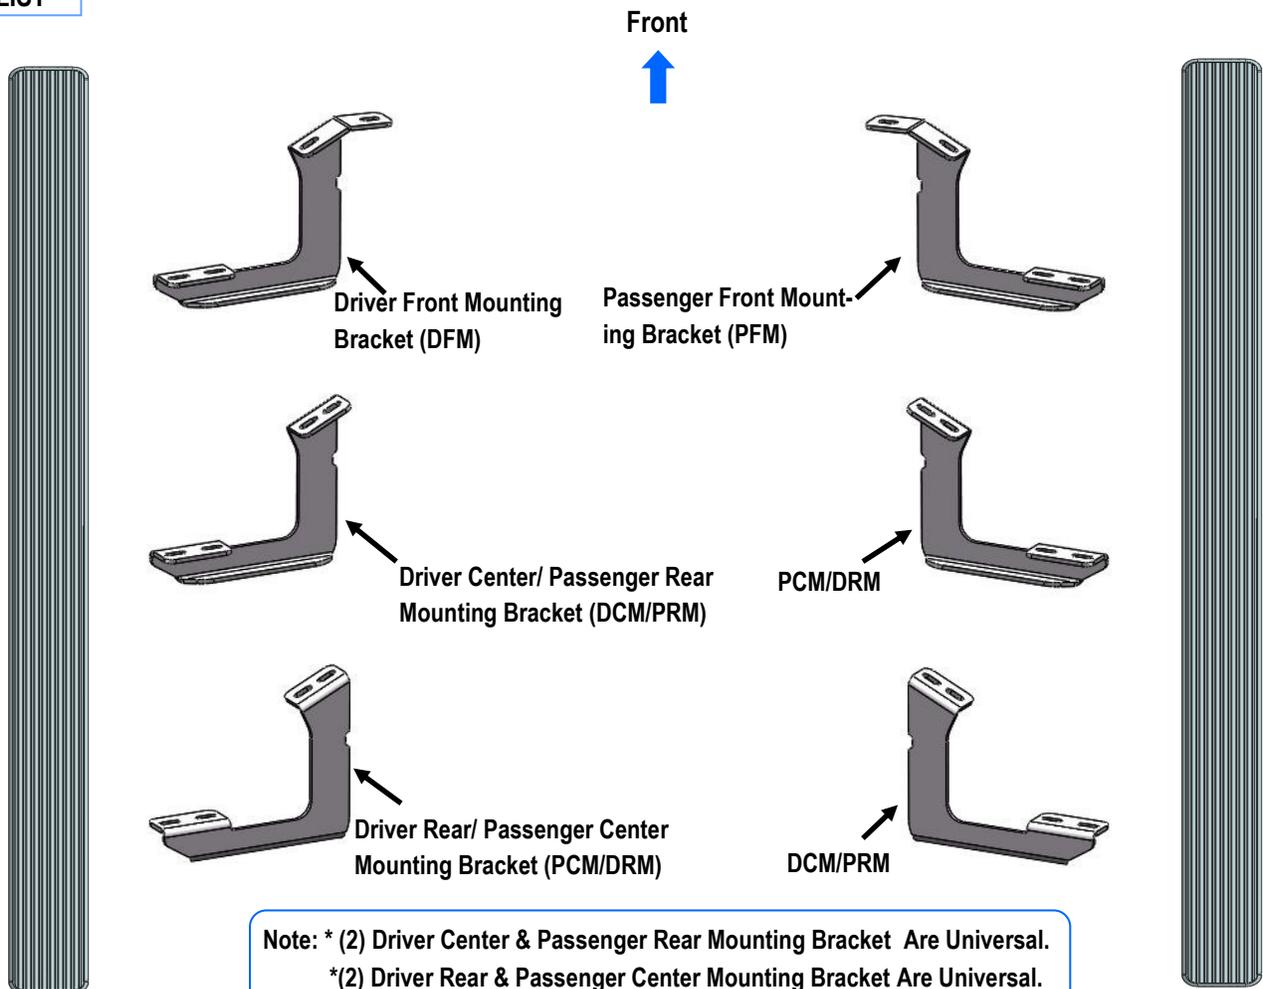

Customer Support: info@iboardauto.com

iBoard®



M8X1.25-30mm Hex Bolt



M8 Large Flat Washer



M8 Lock Washer



M6X1-20mm
Square Head Bolt




M6 Large Flat Washer



M6X1 Nylon
Lock Nut

STEP 1


Start installation from the driver side front of the vehicle, remove the existing (2) factory bolts, (or plastic plugs) (**Fig 1**). This will be the mounting location for the Driver Front Mounting Bracket.

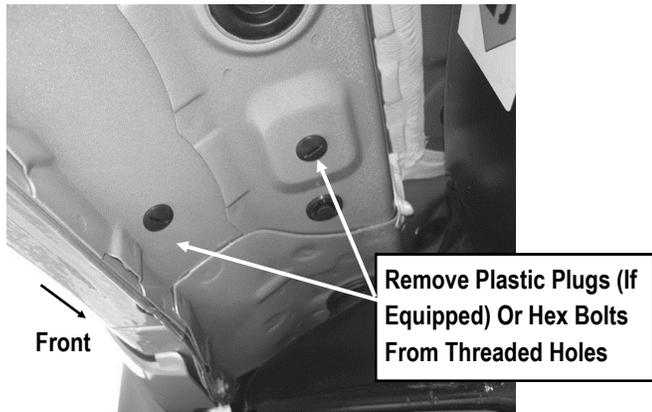

(Fig 1) Driver Side Front Mounting Location

STEP 2

Select the Driver Front Mounting Bracket (**DFM**), attach the Bracket to the vehicle using the included (2) M8x1.25-30mm Hex Bolts, (2) M8 Lock Washers and (2) M8 Large Flat Washers, (**Fig 2**). Do not fully tighten hardware at this time.

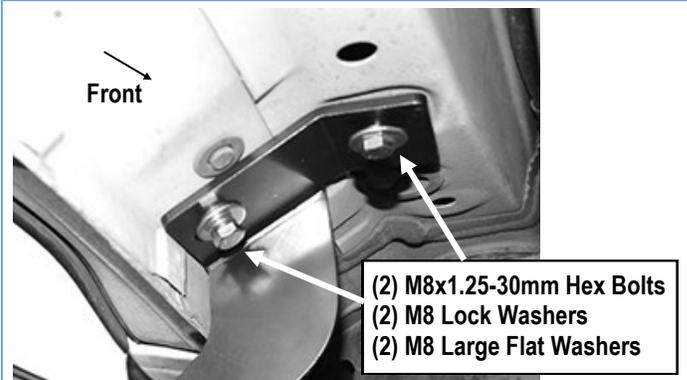

(Fig 2) Driver Front Mounting Bracket Installed

STEP 3


Move along the side panel to the Driver Side Center & Rear Mounting Locations, (**Fig 3**). Repeat **Steps 1 & 2** to install the Driver Center Mounting Bracket (**DCM/PRM**) and Driver Rear Mounting Bracket (**PCM/DRM**), (**Fig 4**). Do not fully tighten hardware at this time.



(Fig 3) Example of Driver Side Center & Rear Mounting Location

iBoard®

- (2) M8x1.25-30mm Hex Bolts
- (2) M8 Lock Washers
- (2) M8 Flat Washers

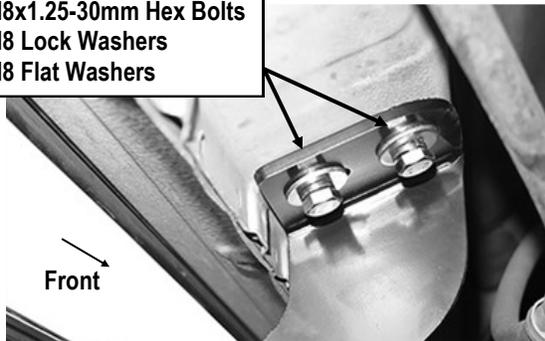

(Fig 4) Driver Center Mounting Bracket Installed

STEP 4

Select a Running Board. Slip (3) M6x1-20mm Square Head Bolts into each bottom channel (Fig 5). Carefully position the Running Board onto the (3) Mounting Brackets.


IMPORTANT: Do not slide the Running Board on the Brackets or the bottom surface of the board will be damaged. Attach the Running Board to each Mounting Brackets with (2) M6x1-20mm Square Head Bolts, (2) M6 Large Flat Washers and (2) M6 X1 Nylon Lock Nuts (Fig 6). Do not tighten at this time.

Level and adjust the Running Board and fully tighten all hardware.



(Fig 5) Slip M6X1-20 Square Head Bolts Into The Bottom Channels

- (2) M6X1-20mm Square Head Bolts
- (2) M6 Large Flat Washers
- (2) M6X1 Nylon Lock Nuts

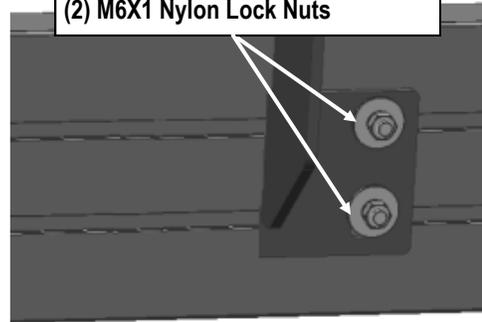

(Fig 6) Running Board Installed Onto Front & Center Mounting Bracket

STEP 5

Repeat **Steps 1-4** for the other side Running Board installation. The installation is completed (Fig 7).



(Fig 7) Installation Completed

Attention

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

In order to protect your bars/boards, please use only mild soap/non-abrasive products for cleaning.