



Hitch Installation Instructions


REV.20260901D

Part#	HT-R34445	Application	Dodge Durango All \Chrysler Aspen All
-------	-----------	-------------	---------------------------------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hardware List	1#	Hex Bolts	2	M12X1.75-100	3#	Hex Flange Nuts	6	M12X1.75
	2#	Large Flat Washers	2	M12	4#	U-Bolts	2	M12X1.75-115

Gross Load Capacity When Used As A Weight Carrying Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.
Gross Load Capacity When Used As A Distribution Carrying Hitch: 9000 LBS. Trailer Weight & 900 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

- * Drilling Required
- * Fascia Reinforcement Trimming Required
- * Fascia Removal Required for Drilling

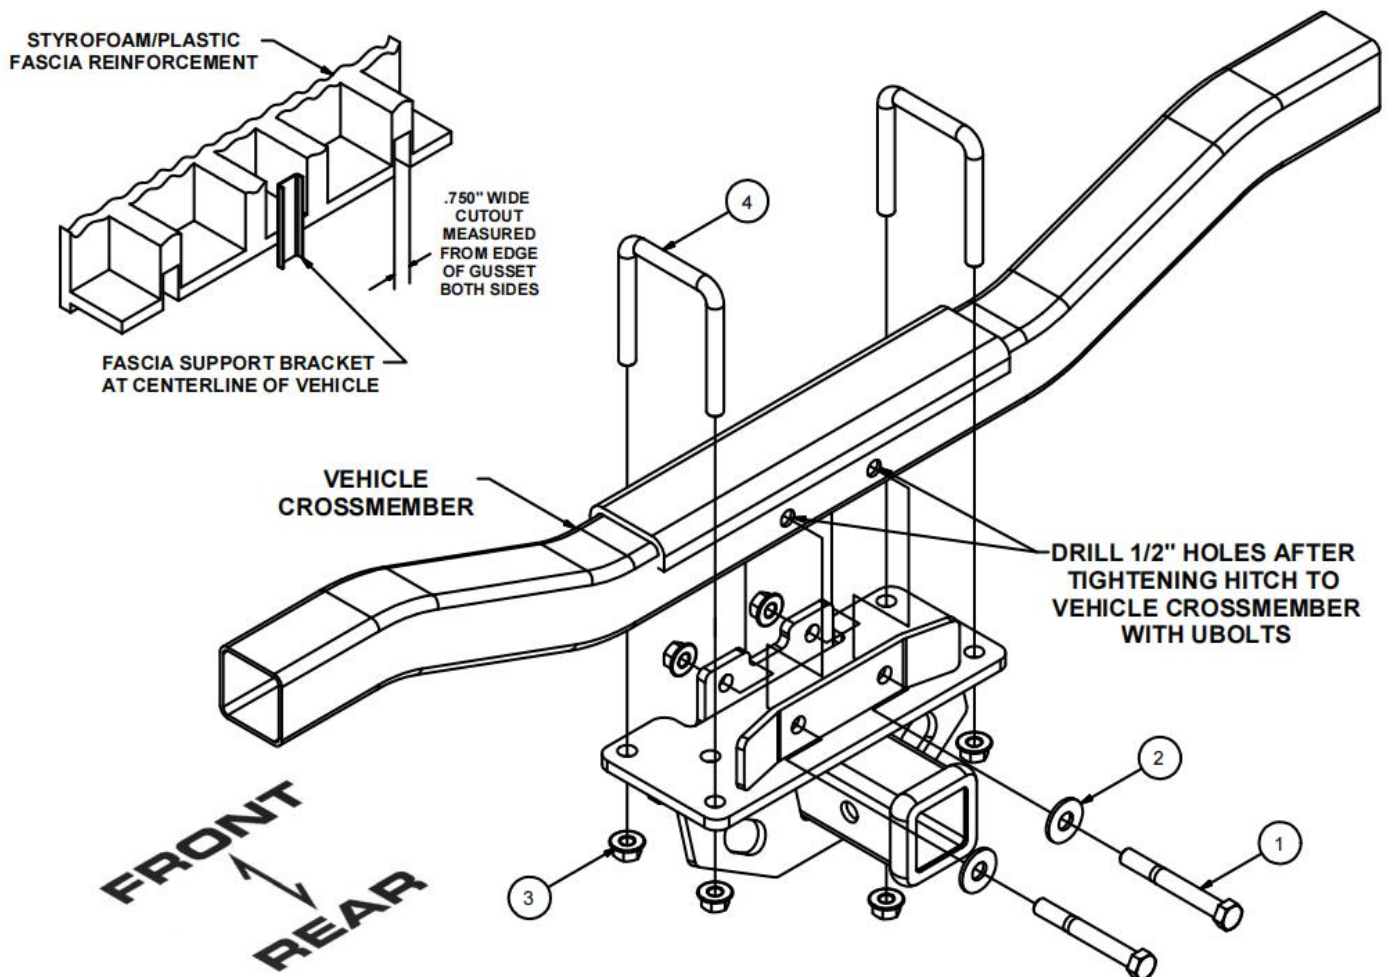

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-R34445	Application	Dodge Durango All \Chrysler Aspen All
Step	Description		
1	Lower spare tire.		
2	Lift hitch into position and center on vehicle crossmember. Mark areas on styrofoam / plastic fascia reinforcement where u-bolts will line up. Lower hitch and cut 3/4" wide cutouts at the two spots marked.		
3	Install u-bolts over vehicle crossmember at cutouts in styrofoam / plastic.		
4	Raise hitch back into position, attaching to u-bolts with M12 flange nuts. Finger tight only.		
5	Center hitch on vehicle and torque M12 u-bolts to 86 lb-ft. (Hitch should fit flat against bottom of vehicle.)		
6	Remove (4) fasteners which secure fascia to fascia mounting brackets. Push fascia up to allow access to drill thru (2) holes in hitch bar into rear face of vehicle crossmember. Drill (2) holes thru hitch plate and into face of vehicle crossmember.		
7	Install M12 hex bolts and M12 washers as shown and finger tight with M12 flange nuts.		
8	Torque remaining M12 hardware to 86 lb-ft.		
9	Re-install fascia mounting fasteners.		
10	Raise spare tire back into position.		
PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!