Hitch Installation Instructions


REV.20260901D

Part#	HT-R35211	Application	Jeep Commander Excluding Rocky Mountain Edition

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hardware List	1#	Hex Bolts	4	M12X1.75-100	2#	Conical Washers	4	M12

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY. *****

*** No Drilling Required**
*** Lower Spare Tire**

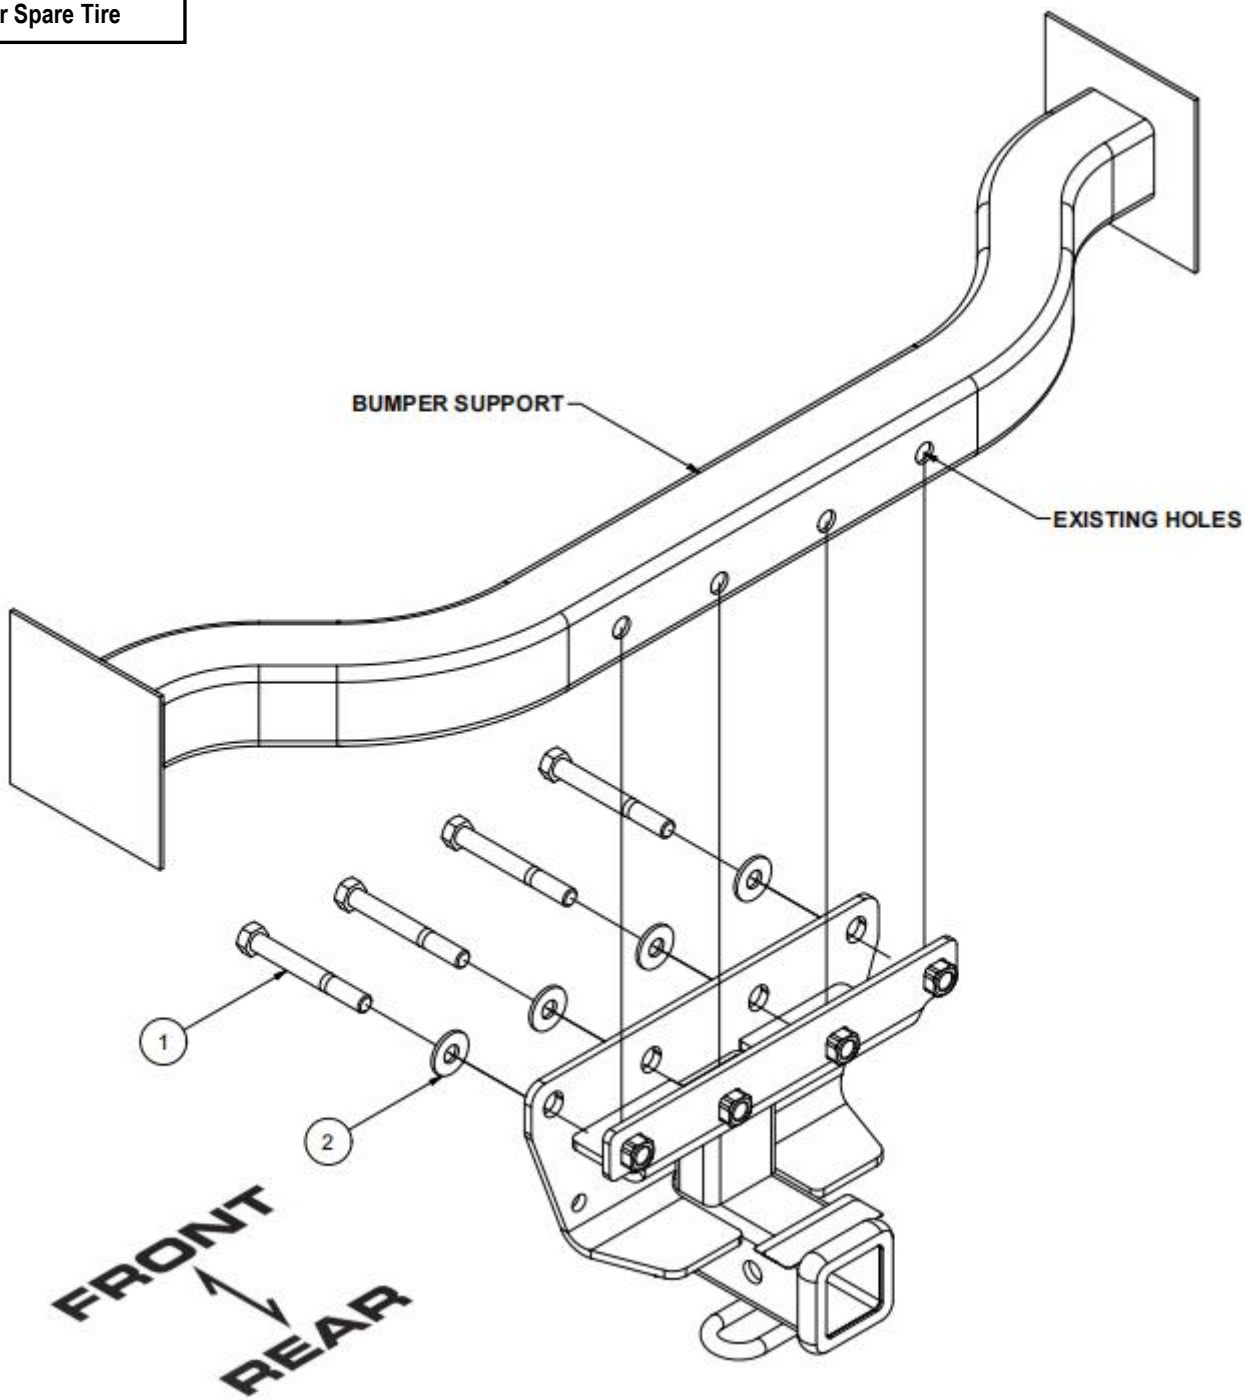

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Hitch Installation Instructions

Part#	HT-R35211	Application	Jeep Commander Excluding Rocky Mountain Edition

Step	Description
If vehicle is equipped with an OEM Tow Hook: permanently remove the Tow Hook before installing the hitch. Install time will increase from 30 to 90 minutes.	
1	Lower spare tire to allow access to the rear bumper support.
2	Remove (6) plastic fasteners from bumper fascia tabs. (Reuse later)
3	Gently pull bumper cover away from vehicle and raise hitch into position. Secure hitch with hex bolts and conical washers through existing holes in bumper support.
4	Torque all M12 fasteners to 86 lb-ft.
5	Reinstall plastic push fasteners and bumper cover removed in step 2.
6	Raise spare tire back into position.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!