



Hitch Installation Instruction

REV.20251001


Part#	HT-R37960	Application	For 1987-1995 Jeep Wrangler Excluding Renegade
-------	-----------	-------------	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1#	Conical Washers	2	M10	4#	Hex Bolts	2	7/16-14x1-1/2
	2#	Hex Flange Nuts	8	M10X1.5	5#	Flat Washers	8	M10
	3#	Hex Bolts	8	M10X1.5-45				

Gross Load Capacity When Used As A Weight Carrying Hitch: 3500 LBS. Trailer Weight & 350 LBS. Tongue Weight.

DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

* No Drilling Required

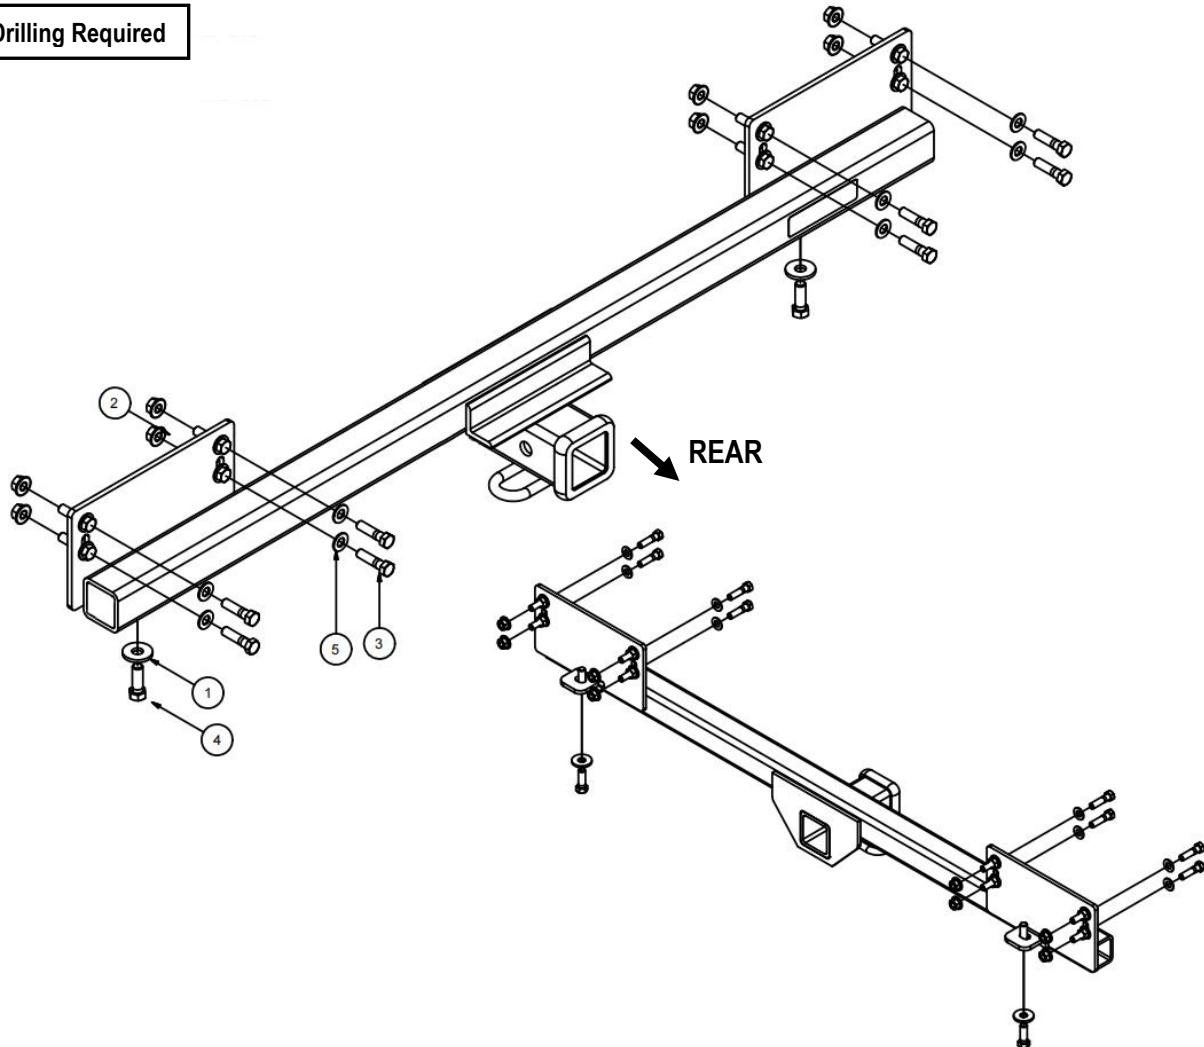

Step	Description
1	Locate existing holes in frame. Raise the hitch into position and install fasteners as shown.
2	Check and tighten all fasteners as specified below: Torque all M10 hardware to 47 ft-lbs. Torque all 7/16" hardware to 86 ft-lbs.

***Periodically Check The Receiver Hitch To Ensure That All Fasteners ***
Are Tight & All Structural Components Are Sound.

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!