



Hitch Installation Instructions



REV.20260801D

Part#	HT-R38945	Application	Mercury Villager /Nissan Quest All					
-------	-----------	-------------	------------------------------------	--	--	--	--	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hardware List	1#	Lock Washers	6	M12	2#	Hex Bolts	6	M12X1.25-35

Gross Load Capacity When Used As A Weight Carrying Hitch: 3500 LBS. Trailer Weight & 350 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

* No Drilling Required

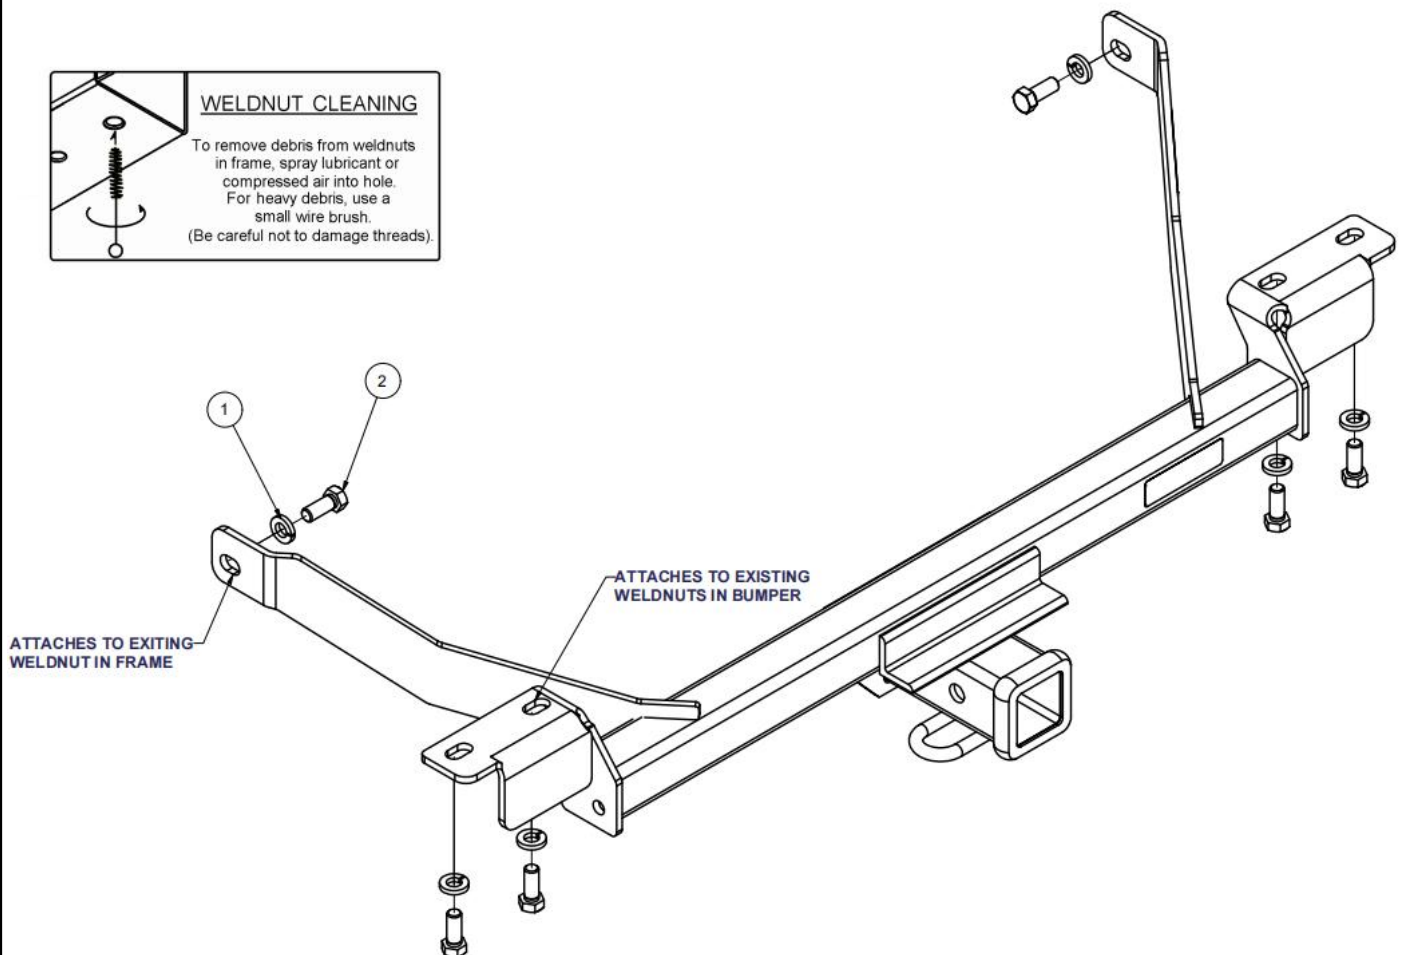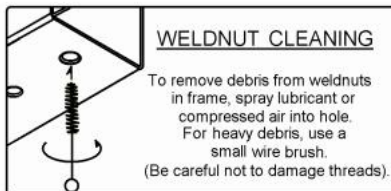

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-R38945	Application	Mercury Villager /Nissan Quest All
Step	Description		
1	Raise vehicle for access to underside.		
2	Unfasten (2) most rearward exhaust hangers.		
3	Raise hitch into position by lifting right mounting plate up & over the tailpipe, and under the exhaust hanger bracket.		
4	Line up the hole in the side plates with the inboard holes of the vehicle frame. The holes in the mounting plates should then line up with the forwardmost lower holes on the inboard sides of the vehicle frame rails.		
5	Secure hitch using the supplied M12 bolts and lock washers.		
6	Torque all M12 fasteners to 86 lb-ft.		
PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!