



Hitch Installation Instructions


REV.20260901D

Part#	HT-R30571	Application	Mercedes-Benz G500 All					
-------	-----------	-------------	------------------------	--	--	--	--	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hardware List	1#	Spacers	4	With SQ Hole	4#	Carriage Bolts	4	M10X1.5-40
	2#	Lock Washers	8	M10	5#	Hex Bolts	4	M10X1.5-45
	3#	Hex Nuts	4	M10X1.5	6#	Flat Washers	4	M10

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

* No Drilling Required

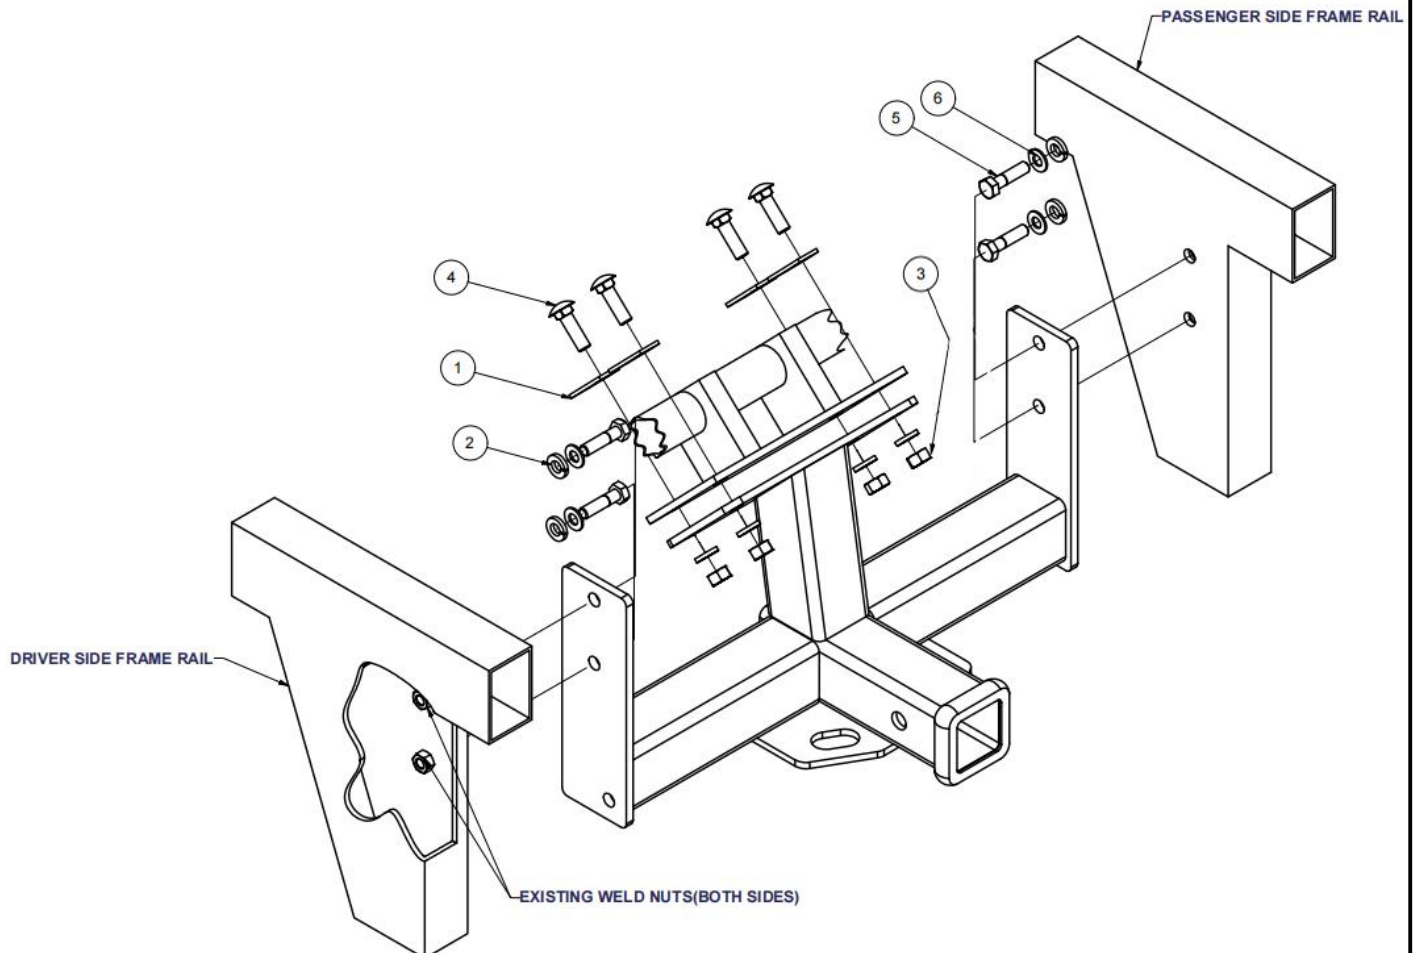

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-R30571	Application	Mercedes-Benz G500 All
Step	Description		
1	Locate the tow loop extensions projecting from the driver and passenger side frame rails, and the angled plate on vehicle center as shown.		
2	Use fasteners to mount the hitch as shown.		
3	Room to wrench fasteners is limited. Wrenching may be easier from the rear of vehicle.		
4	Torque M10 carriage bolts to 34 lb-ft and other M10 fasteners to 58 lb-ft.		
PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!