



Hitch Installation Instructions


REV.20260801S

Part#	HT-R30600	Application	Hyundai Veracruz All					
-------	-----------	-------------	----------------------	--	--	--	--	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hardware List	1#	Hex Bolts	4	M10X1.25-30	2#	Conical Washers	4	M10

Gross Load Capacity When Used As A Weight Carrying Hitch: 3500 LBS. Trailer Weight & 350 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

- * No Drilling Required
- * Lower Exhaust
- * Remove Tow Loop

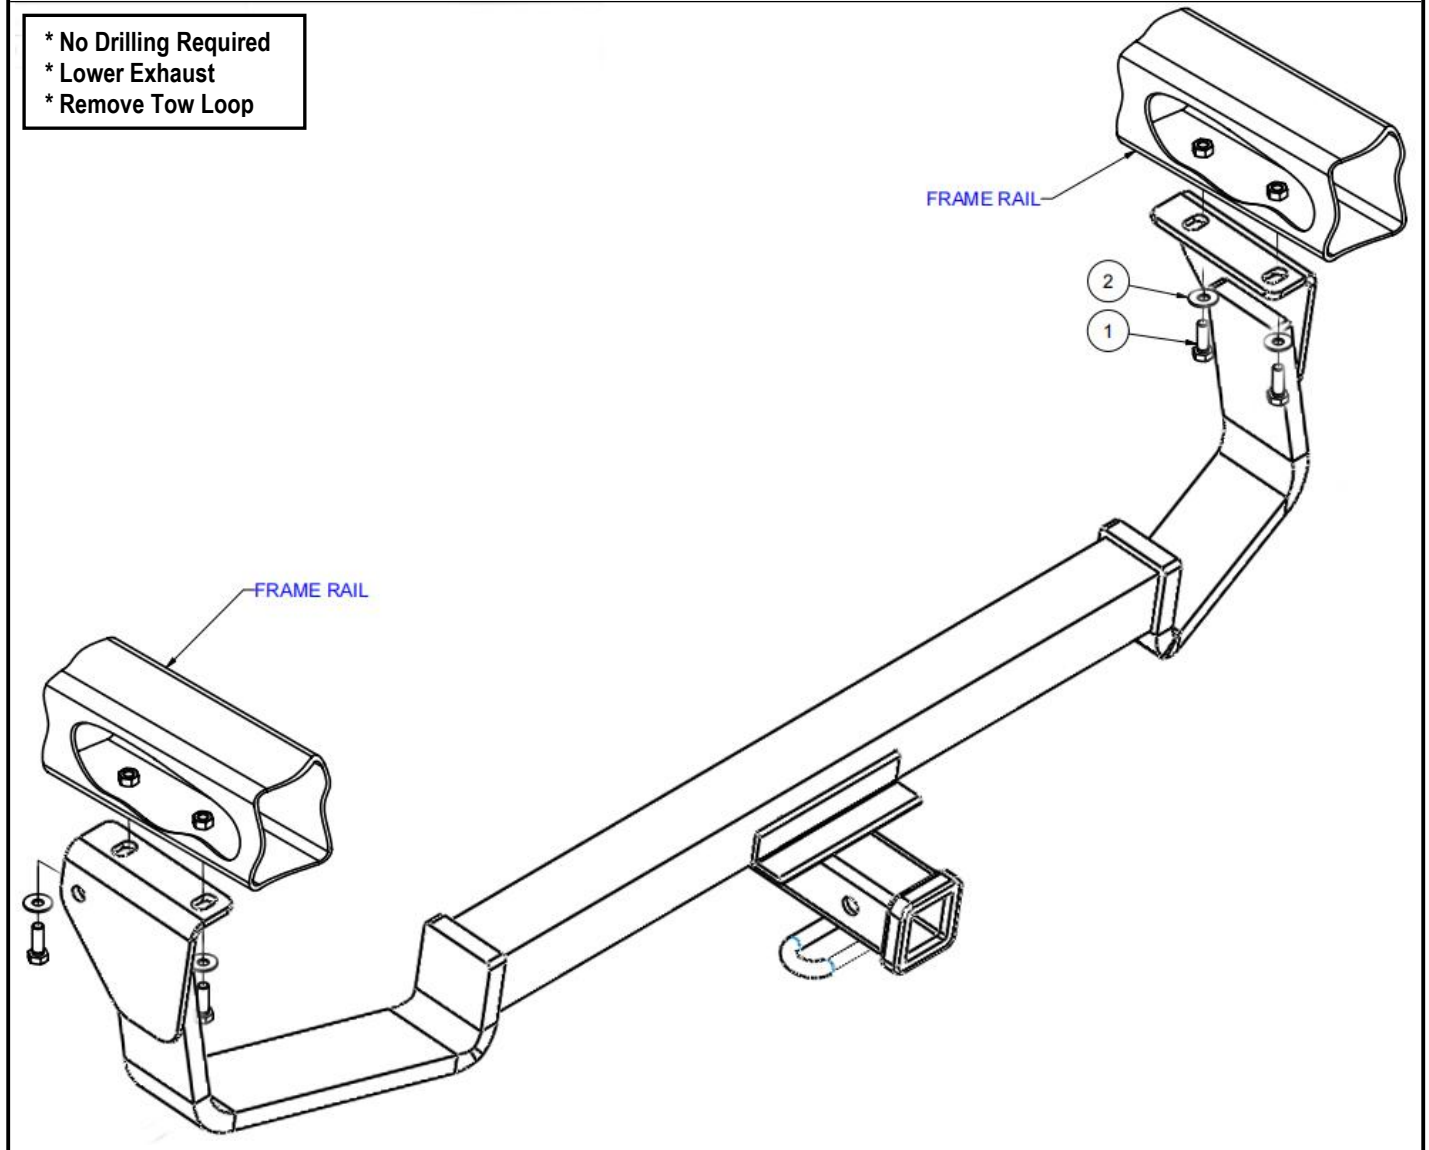

Step	Description
1	Lower exhaust on vehicle.
2	Remove tow loop on passenger side of vehicle by first removing heat shield. After tow loop is removed, return heat shield to original position.
3	Raise hitch into position and align holes in hitch with holes in frame rails.
4	Fasten hitch to vehicle using hardware provided.
5	Torque all M10 x 1.25 hardware to 50 lb-ft.

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-R30600	Application	Hyundai Veracruz All
6	Return exhaust to original position.		
PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!