



Hitch Installation Instructions


REV.20260801D

Part#	HT-X31280	Application	Kia Sportage All
-------	-----------	-------------	------------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B	1#	Hex Bolts	2	M12X1.75-35	3#	Large Flat Washers	4	M12
	2#	Hex Bolts	2	M12X1.75-100	4#	Hex Flange Nuts	4	M12X1.75
HW A (For Hitch Assembly)	5#	Hex Bolts	6	M12X1.75-35	7#	Lock Washers	6	M12
	6#	Flat Washers	10	M12	8#	Hex Nuts	4	M12X1.75

Gross Load Capacity When Used As A Weight Carrying Hitch: 4000 LBS. Trailer Weight & 400 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

* Drilling Required

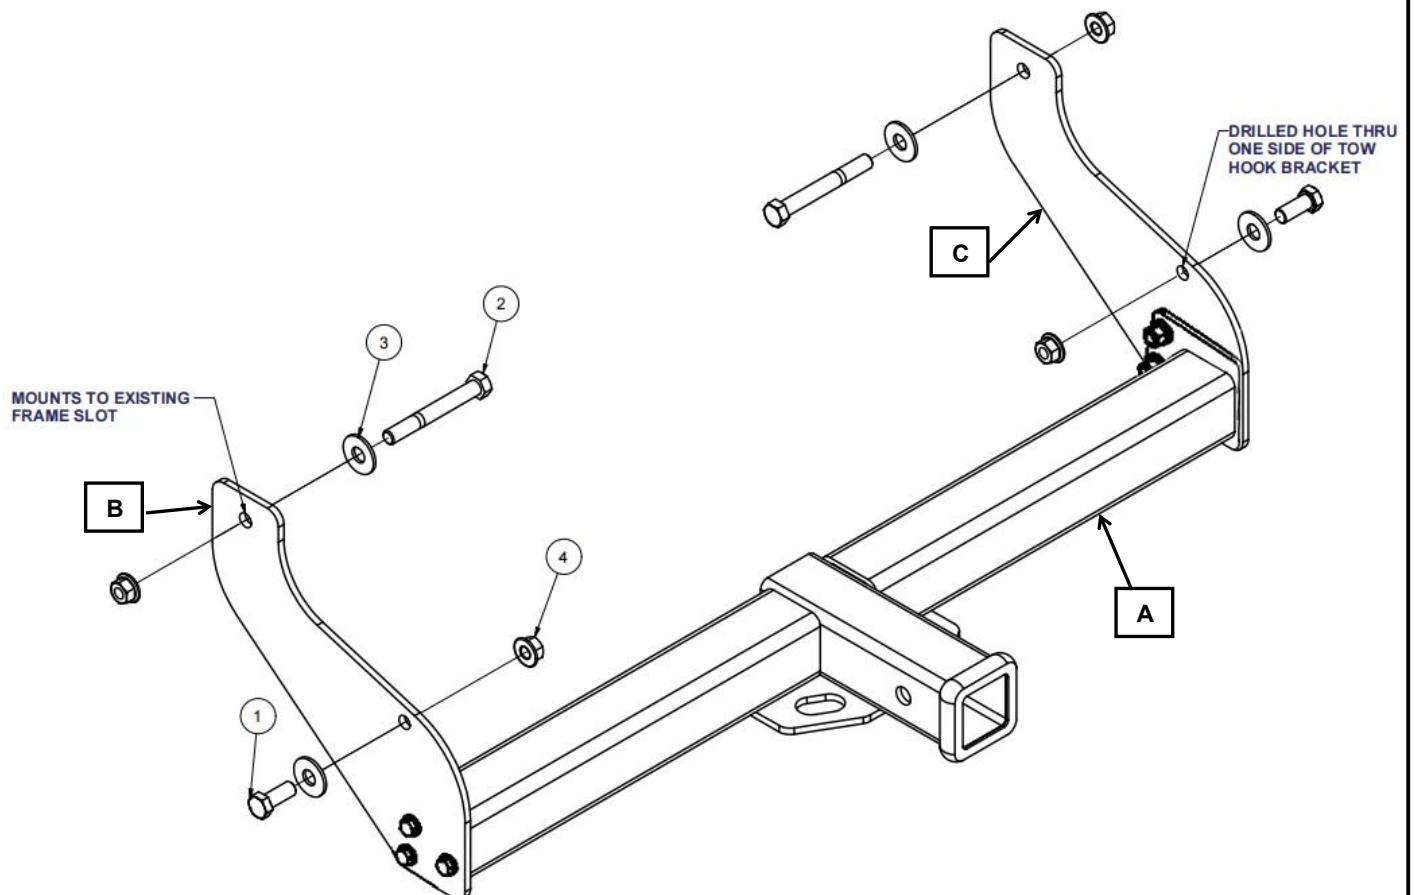

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X31280	Application	Kia Sportage All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (6) M12X1.75-35mm Hex Bolts, (10) M12 Flat Washers, (6) M12 Lock Washers, (4) M12 Hex Nuts. (Hardware in “HW A”). Note: Torque all “HW A” fasteners to 86 lb-ft.		
2	Raise hitch up to frame and install a M12 hex bolt through the rearmost hole of the hitch and through the existing frame slots.(Both sides)		
3	Attach hitch with the M12 flange nuts provided, finger tight only.		
4	Rotate the hitch upward to a level position and clamp it to the tow hook supports.		
5	When the hitch is level and properly positioned use the hole in the hitch mounting plate as a guide to drill a 12mm hole through the tow hook bracket. (Both sides)		
6	After drilling through the tow hook brackets install the M12 hex bolts and washers, attach with the M12 flange nuts.		
7	Torque all HW B (M12) hardware to 86 ft-lbs.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!