



Hitch Installation Instructions


REV.20260801D

Part#	HT-X31866	Application	Chevrolet S10 Blazer All / GMC Jimmy All / Oldsmobile Bravada All
-------	-----------	-------------	---

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Nuts	8	M12X1.75	3#	Lock Washers	8	M12
	2#	Hex Bolts	8	M12X1.75-30				
HW A (For Hitch Assembly)	4#	Hex Bolts	8	M12X1.75-35	6#	Hex Flange Nuts	8	M12X1.75
	5#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

* No Drilling Required

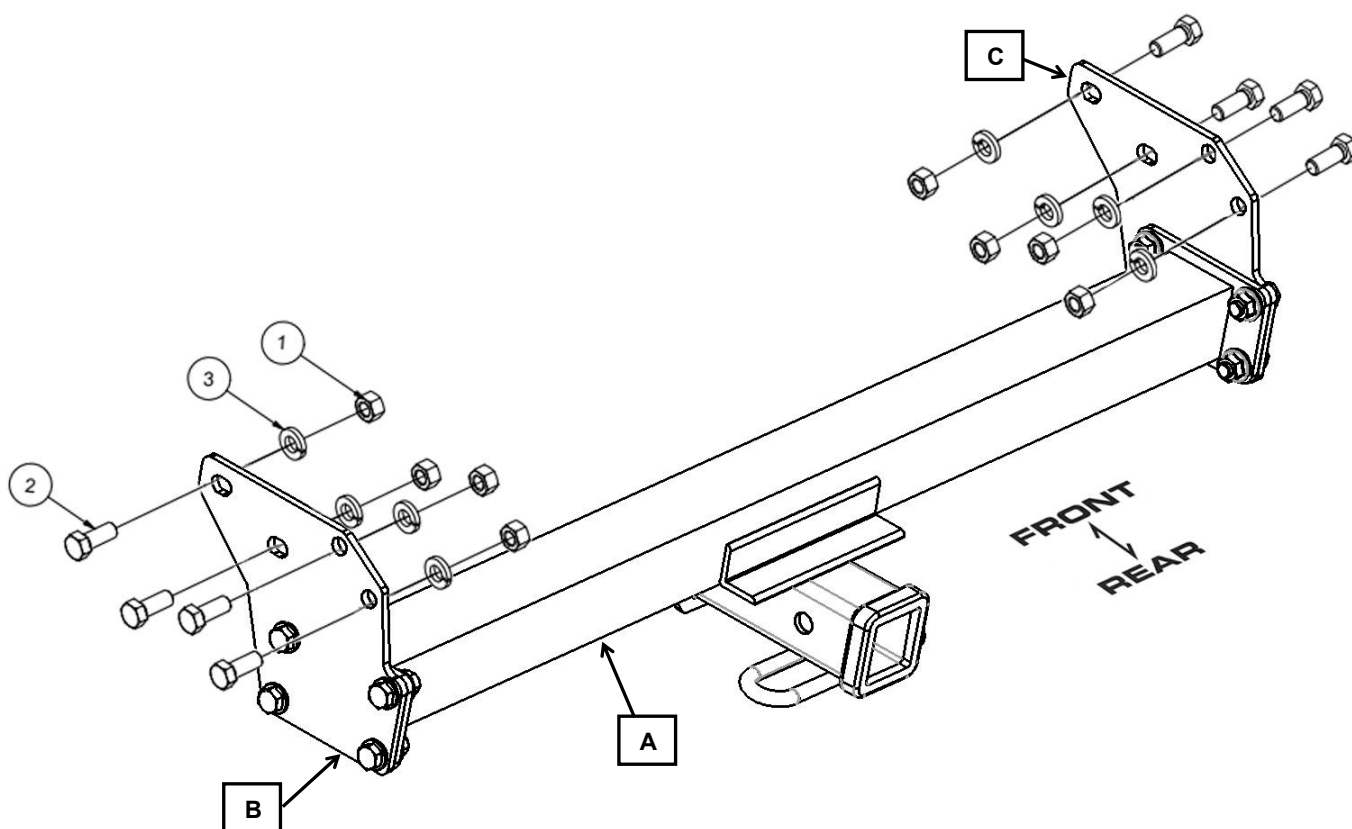

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X31866	Application	Chevrolet S10 Blazer All / GMC Jimmy All / Oldsmobile Bravada All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in "HW A"). Note: Torque all HWA to 86 lb-ft		
2	Remove all fasteners which hold the inner and outer bumper brackets to frame.		
3	Loosen, but do not remove the bolts which hold the outer bumper brackets to the bumper. Slide the outer bumper brackets away from the frame.		
4	Position the hitch over the frame, lining up the holes and slots in the hitch with the bumper bracket mounting holes in the frame.		
5	Loosely install the existing fasteners through the hitch, frame and inner bumper brackets.		
6	Slide outer bumper brackets back into position. The hitch should be sandwiched between the outer bumper brackets and the frame.		
7	Install the remaining fasteners.		
8	Tighten all fasteners to 86 ft-lbs.		
9	Tighten fasteners at outer bumper bracket bumper connections.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!