





Hitch Installation Instructions

REV.20260601D

Part#	HT-X32186	Application	Chevrolet Silverado/ GMC Sierra 1500 1500 HD (Inc Classic) 2500 10" drop bumper or Tommy Gate lift
-------	-----------	-------------	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Nuts	6	M12X1.75	4#	S-Spacers	6	With SQ Hole
	2#	Hex Bolts	6	M12X1.75-45	5#	L-Spacers	2	With SQ Hole
	3#	Lock Washers	6	M12	6#	M-Spacers	4	With SQ Hole
HW A (For Hitch Assembly)	7#	Hex Bolts	8	M12X1.75-35	9#	Hex Flange Nuts	8	M12X1.75
	8#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 8000 LBS. Trailer Weight & 800 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 12000 LBS. Trailer Weight & 1200 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

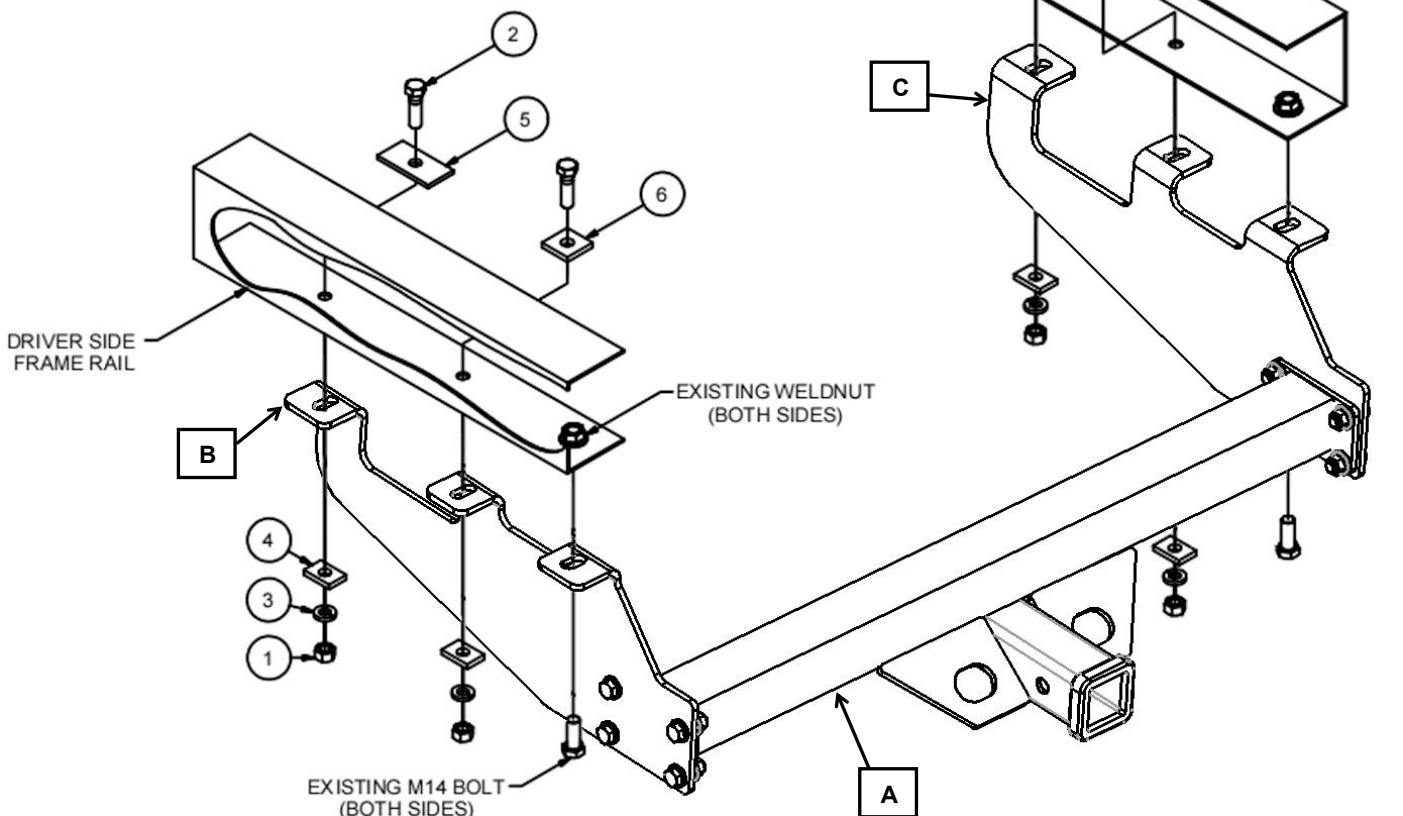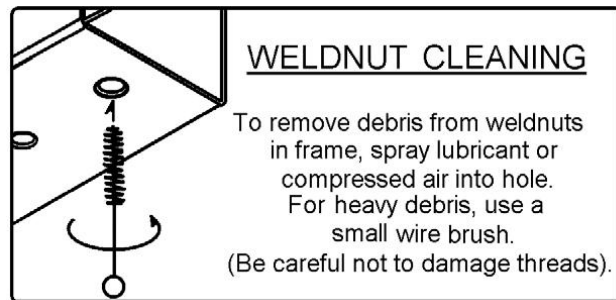

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X32186	Application	Chevrolet Silverado/ GMC Sierra 1500 1500 HD (Inc Classic) 2500 10" drop bumper or Tommy Gate lift
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in "HW A"). Note: Finger tighten only. Do not fully tighten at this time.		
2	Lower spare tire for ease of installation.		
3	If present, remove M14 bolts from bumper bracket.		
4	Raise hitch into position and reinstall M14 bolt removed in Step 3.		
5	Install M12 hex bolts and M-Spacers through middle holes. Note: If M14 bolt and weld-nut do not exist on vehicle, use the supplied M12 hex bolts and M-spacers in the rear hole as well.		
6	Install M12 hex bolts and L-Spacers through forward holes.		
7	Secure hitch with S-Spacers, lock washers and hex nuts as shown.		
8	Torque all M12 hardware to 86 lb-ft.		
9	Reinstall spare tire.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!