



Hitch Installation Instructions

REV.20260701D

Part#	HT-X32506	Application	Nissan Quest All
-------	-----------	-------------	------------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Conical Washers	6	M12	2#	Hex Bolts	6	M12X1.25-40
HW A (For Hitch Assembly)	3#	Hex Bolts	6	M12X1.25-35	5#	Lock Washers	6	M12
	4#	Flat Washers	10	M12	6#	Hex Nuts	4	M12X1.25

Gross Load Capacity When Used As A Weight Carrying Hitch: 3500 LBS. Trailer Weight & 300 LBS. Tongue Weight.
Gross Load Capacity When Used As A Distribution Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****



- * Lower Exhaust Required
- * No Drilling Required

RUBBER ISOLATOR REMOVAL DIAGRAM

This technique can be used if and Exhaust Hanger Removal Pliers is not available.

Using a 5/8" open end wrench, slide the wrench up to the rubber isolator, cradling the hanger rod as shown. Next place the flat edge of a pry bar between the wrench and the hanger stop or hanger rod. Then simply rotate the pry bar toward the wrench to remove the rubber isolator.

Note: Using a spray lubricant or soapy water on the hanger rod and the rubber isolator helps removal.

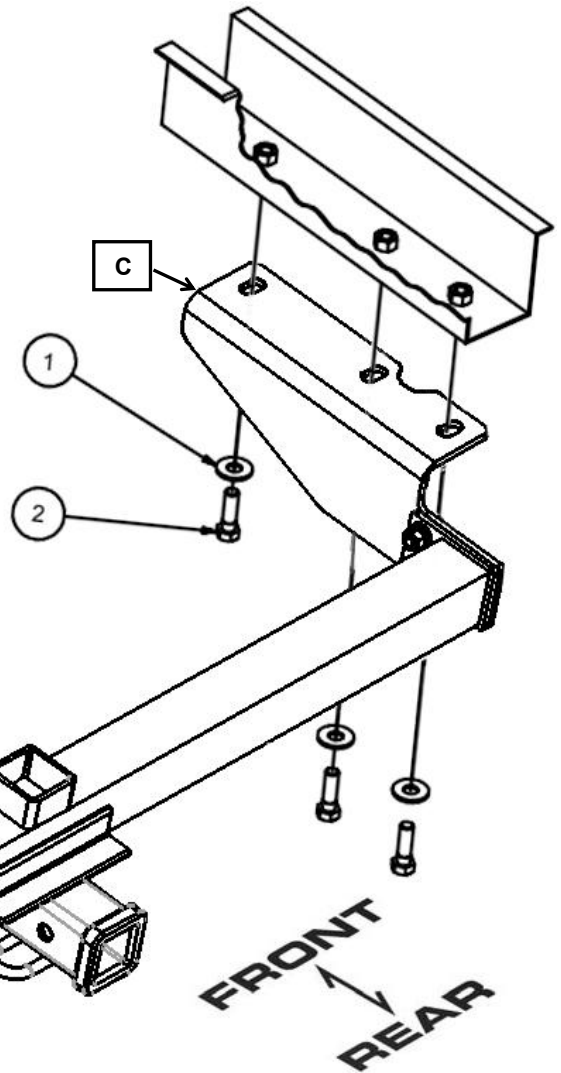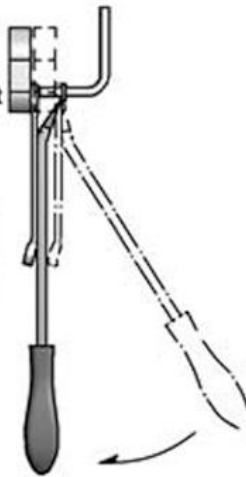

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X32506	Application	Nissan Quest All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (6) M12X1.25-35mm Hex Bolts, (10) M12 Flat Washers, (6) M12 Lock Washers, (4) M12 Hex Nuts. (Hardware in "HW A"). Note: Torque all "HW A" fasteners to 86 lb-ft.		
2	Remove the plastic rivets that fasten the bumper fascia tabs to the back of vehicle. (Note: To do this, remove the center of the rivet with a screwdriver, or from the top side, push down on the center piece in rivet and remove. Keep these rivets and put them back in after hitch is installed.)		
3	Lower the exhaust by removing the rubber from the muffler hanger and by loosening the two nuts that secure the exhaust hanger bracket to the chassis, ahead of the muffler adjacent to rear axle.		
4	Pull and hold muffler to the side to remove the screw attaching the ground strap to the passenger side frame rail. Keep this screw. Remove the two screws that attach the aluminum heat shield to the frame. Return heat shield and screws to customer.		
5	Raise hitch into place and loosely install the 12mm hex bolts and conical toothed washers. Note: Position hitch toward driver side to allow maximum muffler clearance.		
6	Torque all M12 fasteners to 86 lb-ft.		
7	Reinstall ground strap and screw. Lift exhaust back into position and re-install hangers.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!