



Hitch Installation Instructions


REV.20260701D

Part#	HT-X32661	Application	Jeep Grand Cherokee Including Laredo and with Skid Shield
-------	-----------	-------------	---

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Bolts	2	M12X1.75-45	3#	Flat Washers	6	M12
	2#	Lock Washers	6	M12	4#	Hex Nuts	4	M12X1.75
HW A (For Hitch Assembly)	5#	Hex Bolts	8	M12X1.75-35	7#	Hex Flange Nuts	8	M12X1.75
	6#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 8000 LBS. Trailer Weight & 800 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

* No Drilling Required

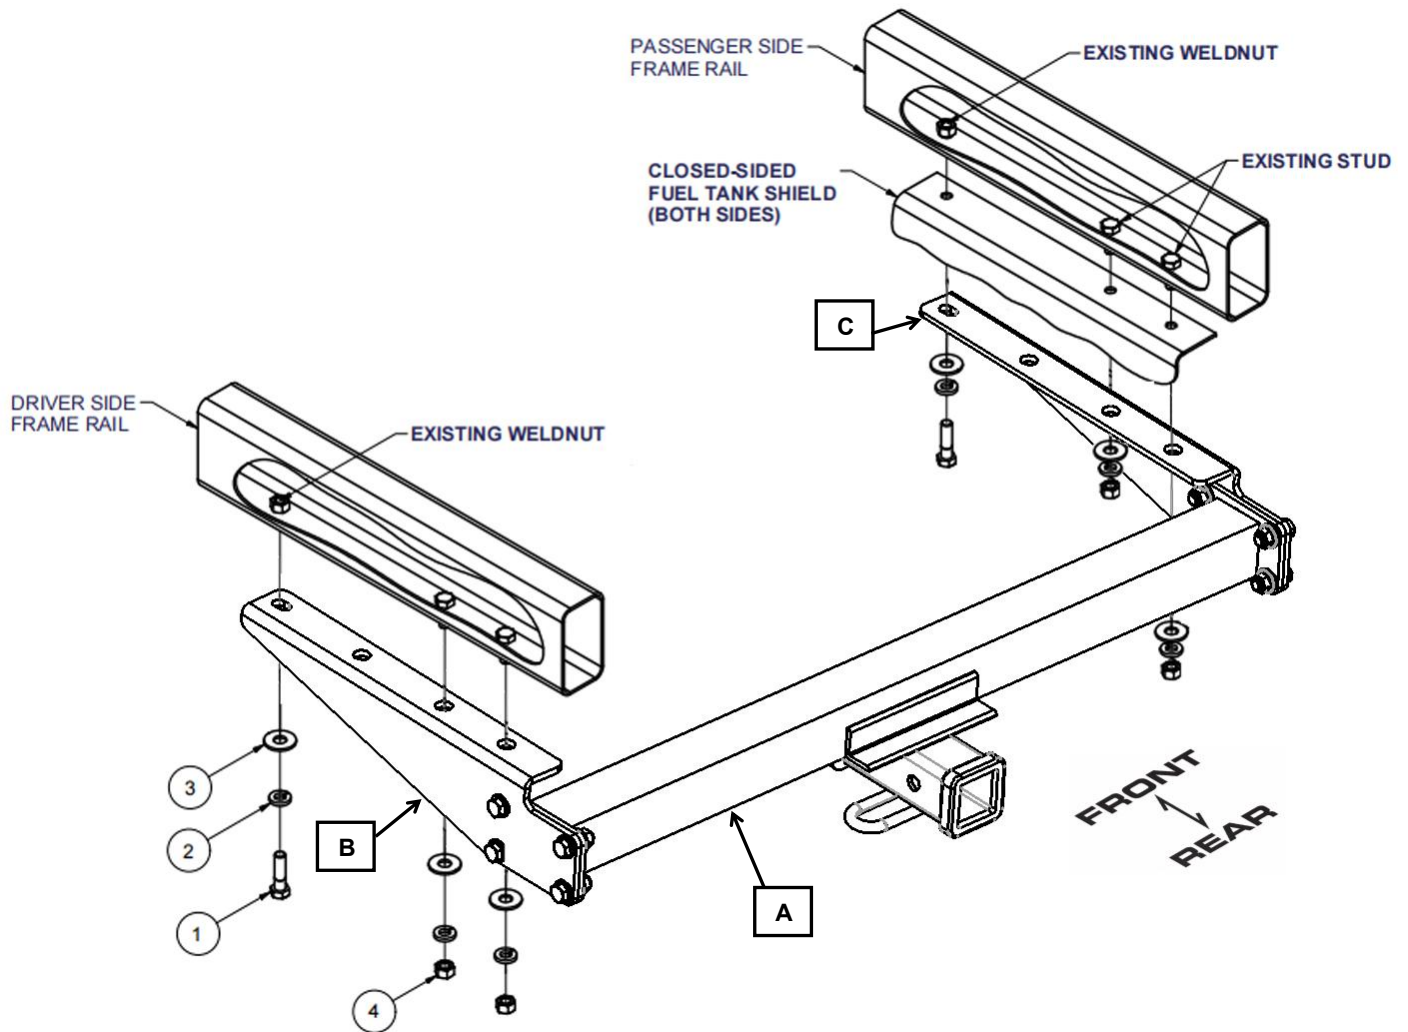

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X32661	Application	Jeep Grand Cherokee Including Laredo and with Skid Shield
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in “HW A”). Note: Finger tighten only. Do not fully tighten at this time.		
2	Raise hitch into position over the two existing studs at the end of the frame. Start lock washers and nut hand tighten only.		
3	Install hex head bolt, flat washer and lock washer into the existing weld nut at the forward hole.		
4	Torque all fasteners to 86 lb-ft		
*For Vehicles with sided fuel tank shield:			
1	Remove nuts and flat washers from the two studs at the end of the frame and discard		
2	Remove bolt and washer assembly from forward attachment and discard.		
3	Fuel tank shield should be sandwiched between the frame and side bracket		
4	Install hex head bolt, flat washer and lock washer into the existing weld nut at the forward hole.		
5	Torque all fasteners to 86 lb-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!