



Hitch Installation Instructions




REV.20260601D

Part#	HT-X32795	Application	Isuzu Axiom / Isuzu Rodeo Sport / Honda Passport under-vehicle spare Isuzu Rodeo, under-vehicle spare (exclude 3.5L)
-------	-----------	-------------	---

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
	1#	Fish Wire	1	L=762	6#	Hex Flange Nut	1	M12X1.75
	2#	Large Flat Washers	6	M16	7#	Spacer	1	With SQ Hole
	3#	Hex Bolts	3	M16X2-40	8#	Carriage Bolts	1	M12X1.75-45
	4#	Conical Washers	2	M12	9#	Hex Flange Nuts	3	M16X2
HW B (For Hitch Installation)	5#	Hex Bolts	2	M12X1.75-35				
	10#	Hex Bolts	6	M12X1.75-35	12#	Lock Washers	6	M12
	11#	Flat Washers	10	M12	13#	Hex Nuts	4	M12

Gross Load Capacity When Used As A Weight Carrying Hitch: 4000 LBS. Trailer Weight & 400 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

- * No Drilling Required
- * Fish Wire Fastener
- * Lower Spare Tire

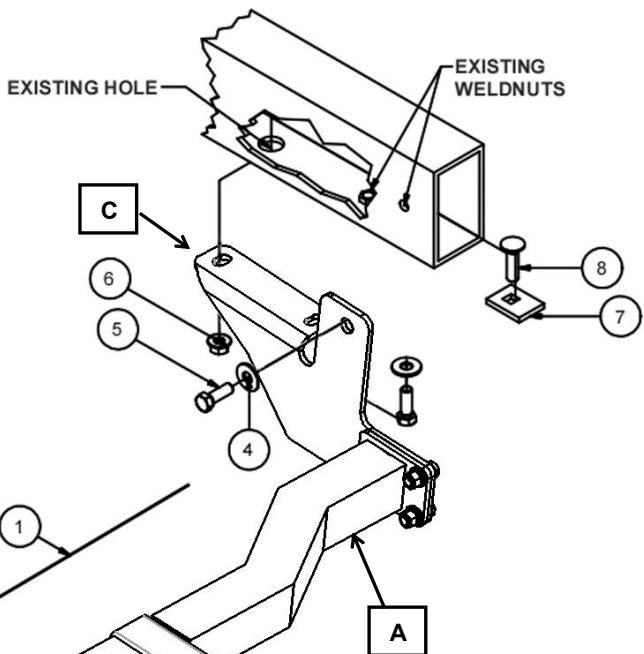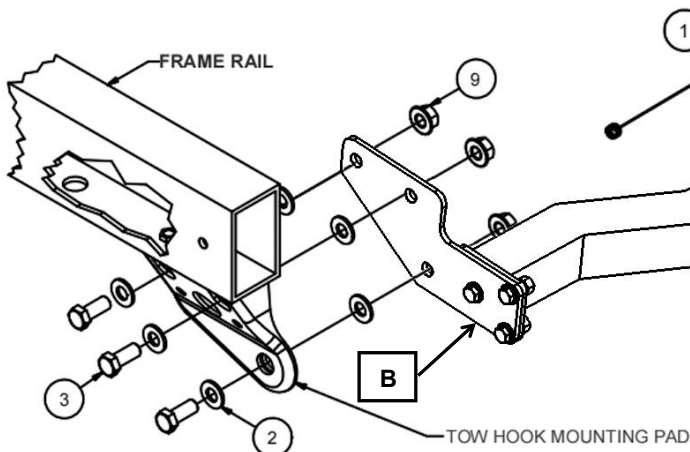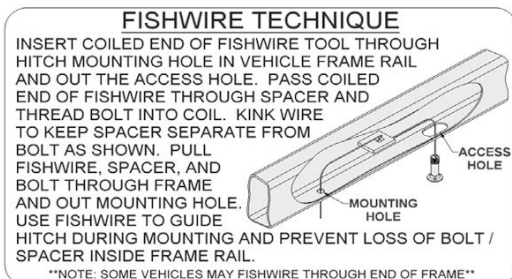

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X32795	Application	Isuzu Axiom / Isuzu Rodeo Sport / Honda Passport under-vehicle spare Isuzu Rodeo, under-vehicle spare (exclude 3.5L)
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (6) M12X1.75-35mm Hex Bolts, (10) M12 Flat Washers, (6) M12 Lock Washers, (4) M12 Hex Nuts. (Hardware in “HW A”). Note: Finger tighten only. Do not fully tighten at this time.		
2	Position hitch on the vehicle as shown, align holes in hitch with existing weld-nuts in vehicle frame (passenger side) and slots in tow hook mounting pad (driver side). Loosely install hex bolts as shown.		
3	Fish wire carriage bolt and spacer through end of frame on passenger side and install as shown.		
4	Tighten fasteners on the driver side and fastener on side of frame on passenger side first. Tighten fasteners on bottom of frame on passenger side last.		
5	Use (2) M16 flat washers for spacing between the hitch and tow hook mounting pad on the driver side.		
6	Torque M12 carriage bolts to 58 lb-ft and other M12 fasteners to 86 lb-ft. Torque all M16 fasteners to 210 lb-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!