



Hitch Installation Instructions


REV.20260601D

Part#	HT-X32796	Application	Dodge Ram 1500 Van /Ram 2500 Van/Ram 3500 Van With Factory Step Bumper					
-------	-----------	-------------	--	--	--	--	--	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
	1#	Hex Bolts	4	M12X1.25-50	5#	Fish Wire	1	L=762
	2#	Hex Flange Nut	6	M12X1.75	6#	Spacer	4	With SQ Hole
	3#	Hex Bolts	2	M12X1.75-40	7#	Carriage Bolts	4	M12X1.75-45
HW B (For Hitch Installation)	4#	Conical Washers	6	M12				
	8#	Hex Bolts	6	M12X1.75-35	10#	Lock Washers	6	M12
	9#	Flat Washers	10	M12	11#	Hex Nuts	4	M12

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 8000 LBS. Trailer Weight & 800 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

- * No Drilling Required
- * Fish Wire Fastener

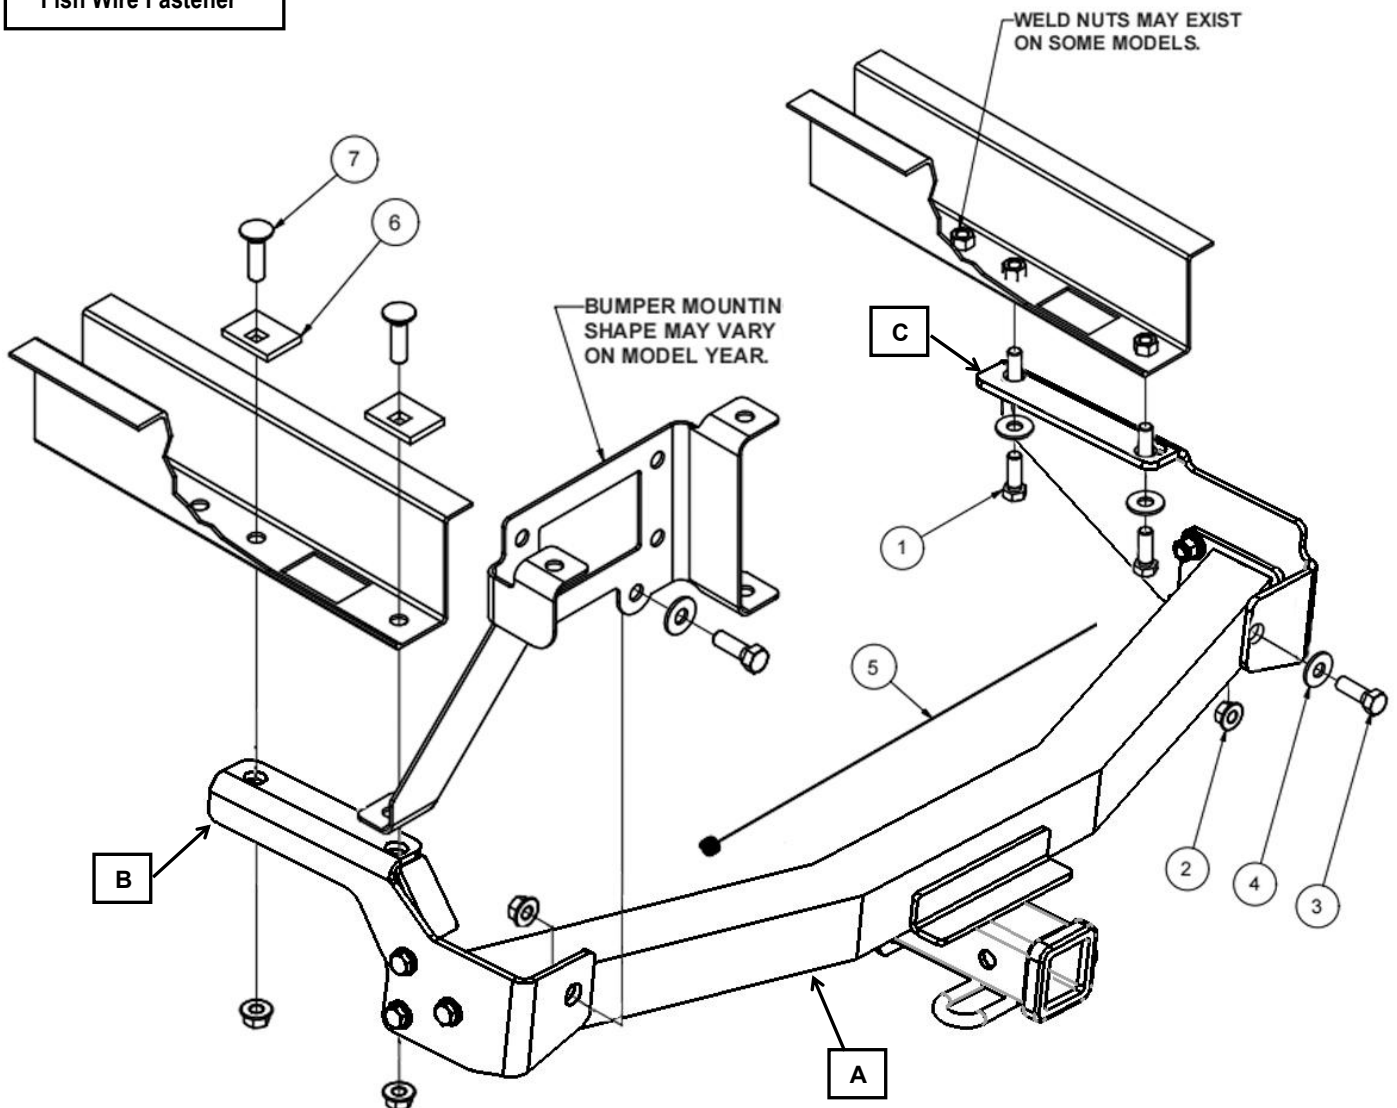

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X32796	Application	Dodge Ram 1500 Van /Ram 2500 Van/Ram 3500 Van With Factory Step Bumper
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (6) M12X1.75-35mm Hex Bolts, (10) M12 Flat Washers, (6) M12 Lock Washers, (4) M12 Hex Nuts. (Hardware in “HW A”). Note: Finger tighten only. Do not fully tighten at this time.		
Caution: Wiring harness is located inside passenger side frame rail, do not sandwich wires between frame rail and fasteners. Note: If vehicle has a heat shield, remove one screw from the bottom of the frame rail so that models with bracket will mount flat.			
2	Fish wire fasteners through access hole on underside of each frame rail. (Note: Vehicles with weld-nuts in frame use the M12 hex bolts and conical washers provided.)		
3	Raise hitch into position and install remaining fasteners through bumper mounting bracket as shown above.		
4	Torque M12 carriage bolts to 58 lb-ft and other M12 fasteners to 86 lb-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!