




Hitch Installation Instructions

REV.20260801D

Part#	HT-X32008	Application	Chevrolet Blazer Full Size / Chevrolet K5 Blazer All / GMC Jimmy Full Size					
Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Carriage Bolts	2	M12X1.75-45	4#	Large Flat Washers	4	M12
	2#	Hex Bolts	2	M12X1.75-45	5#	Spacers	2	With SQ Hole
	3#	Hex Flange Nuts	4	M12X1.75				
HW A (For Hitch Assembly)	6#	Hex Bolts	8	M12X1.75-35	8#	Hex Flange Nuts	8	M12X1.75
	7#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
 Gross Load Capacity When Used As A Weight Distribution Hitch: 10000 LBS. Trailer Weight & 1000 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

***Drilling Required**

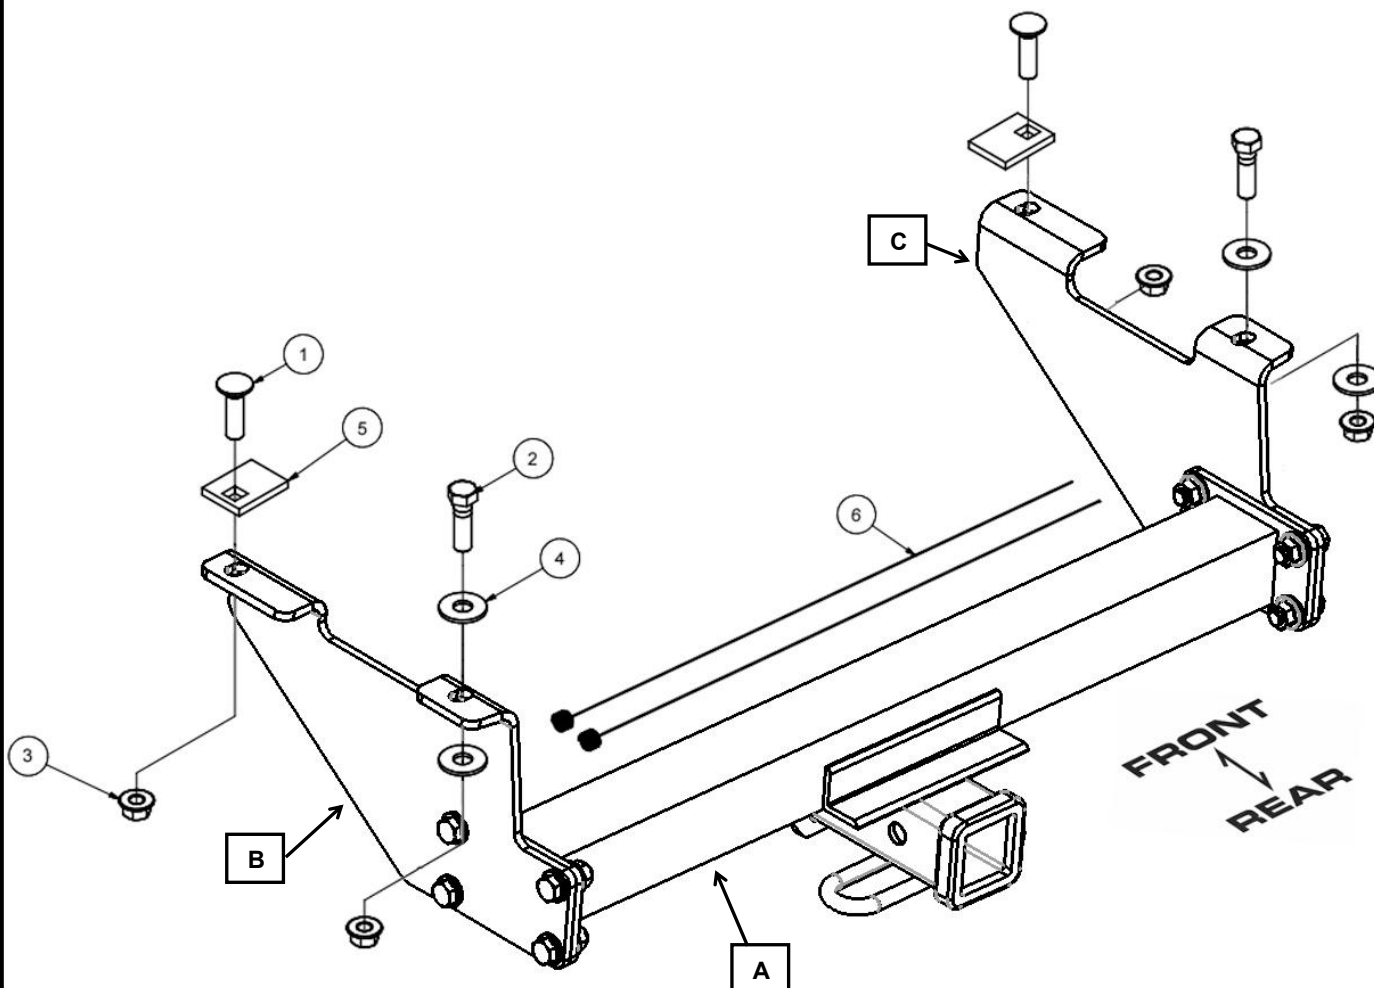

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X32008	Application	Chevrolet Blazer Full Size / Chevrolet K5 Blazer All / GMC Jimmy Full Size
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in "HW A"). Note: Torque all HWA to 86 lb-ft		
NOTE: 1973-1980 VEHICLES, FORWARD ATTACHMENT HOLES MUST BE DRILLED.			
2	Locate holes in bottom of frame which correspond to holes in hitch. Remove any undercoating present from attaching surfaces before installing hitch.		
3	Fishwire applicable bolts and spacers into frame holes.		
4	Raise hitch into position. Place one flat washer per side between the frame and hitch at the rearward attachment location.		
5	Torque M12 carriage bolts to 58 ft- lbs and other M12 hardware to 86 ft-lbs. Note: removal of license plate may be required to install hitch.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!