



Hitch Installation Instructions


REV.20260601D

Part#	HT-X32035	Application	Dodge Dakota All
-------	-----------	-------------	------------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Socket Countersunk Head Screw	1	M20X2.5-80	2#	Flat Washers	4	M14
HW A (For Hitch Assembly)	3#	Hex Bolts	8	M12X1.75-35	5#	Hex Flange Nuts	8	M12X1.75
	4#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 8000 LBS. Trailer Weight & 800 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

* No Drilling Required

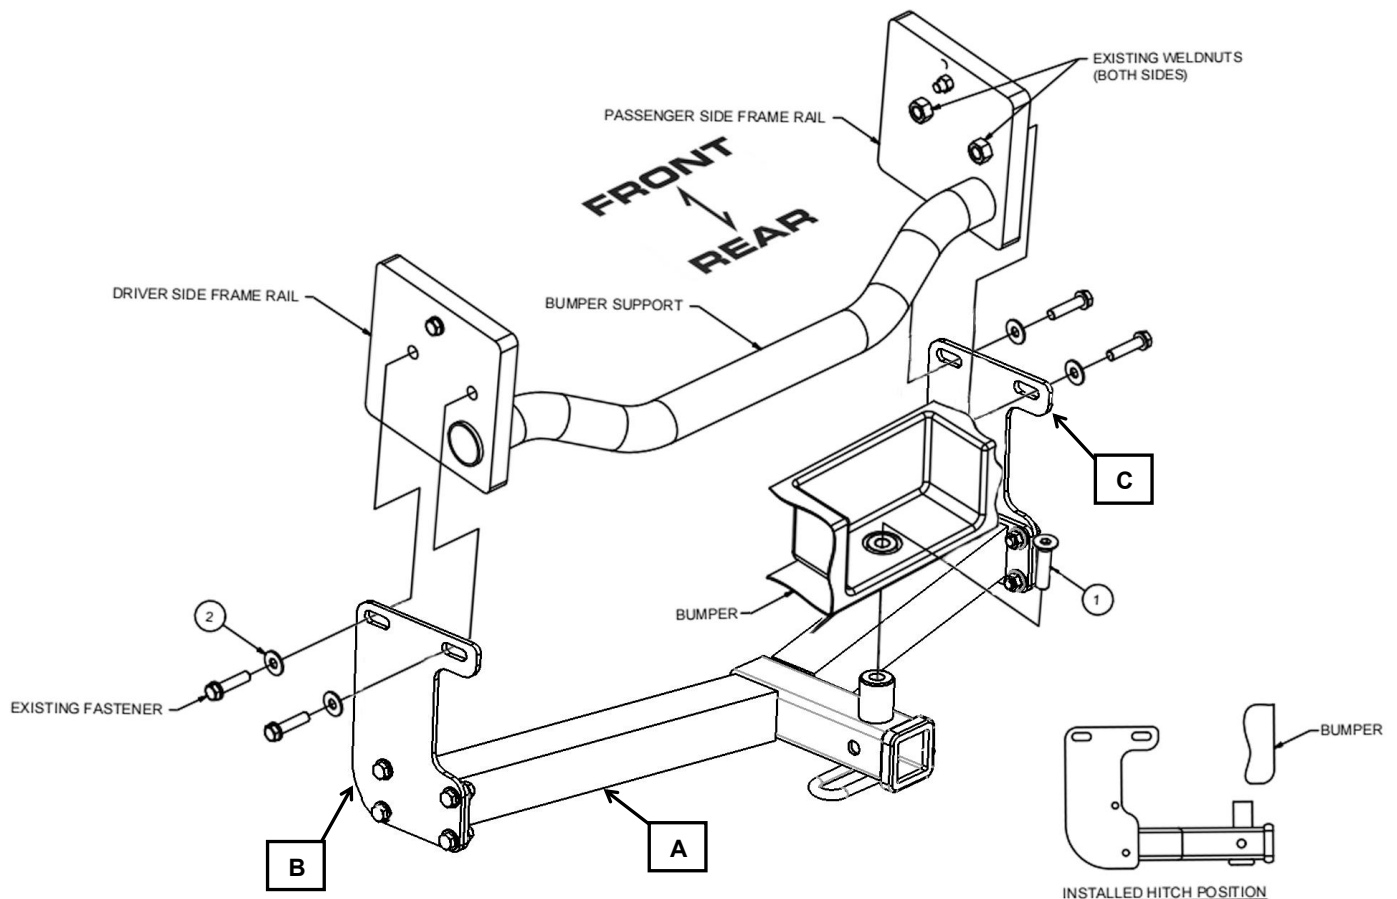

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X32035	Application	Dodge Dakota All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in “HW A”). Note: Finger tighten only. Do not fully tighten at this time.		
2	Remove the (4) existing M14 flange bolts from the frame, (2) per side, as shown. (Save the bolts for reuse in Step 3.)		
3	Raise the hitch into position and reinstall the M14 flange bolts removed in Step 2 with the additional washers provided, as shown. Do not fully tighten.		
4	Install the M20 hex socket countersunk head screw through the center hole in the bumper and into the threaded spacer/weld-nut on the hitch body as shown.		
5	Tighten the bolts installed in Step 3.		
6	Torque all M20 fasteners to 410 ft-lbs, all M14 fasteners to 126 ft-lbs.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!