



Hitch Installation Instructions


REV.20260501D

Part#	HT-X33645	Application	Toyota Sequoia All
-------	-----------	-------------	--------------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Flange Nuts	4	M12X1.75	4#	Hex Bolts (full thread)	6	M12X1.25-50
	2#	Hex Bolts	4	M12X1.75-90	5#	Conical Washers	6	M12
	3#	Spacers	6	With SQ Hole				
HW A (For Hitch Assembly)	6#	Hex Bolts	8	M12X1.75-35	8#	Hex Flange Nuts	8	M12X1.75
	7#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 6500 LBS. Trailer Weight & 650 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

* No Drilling Required

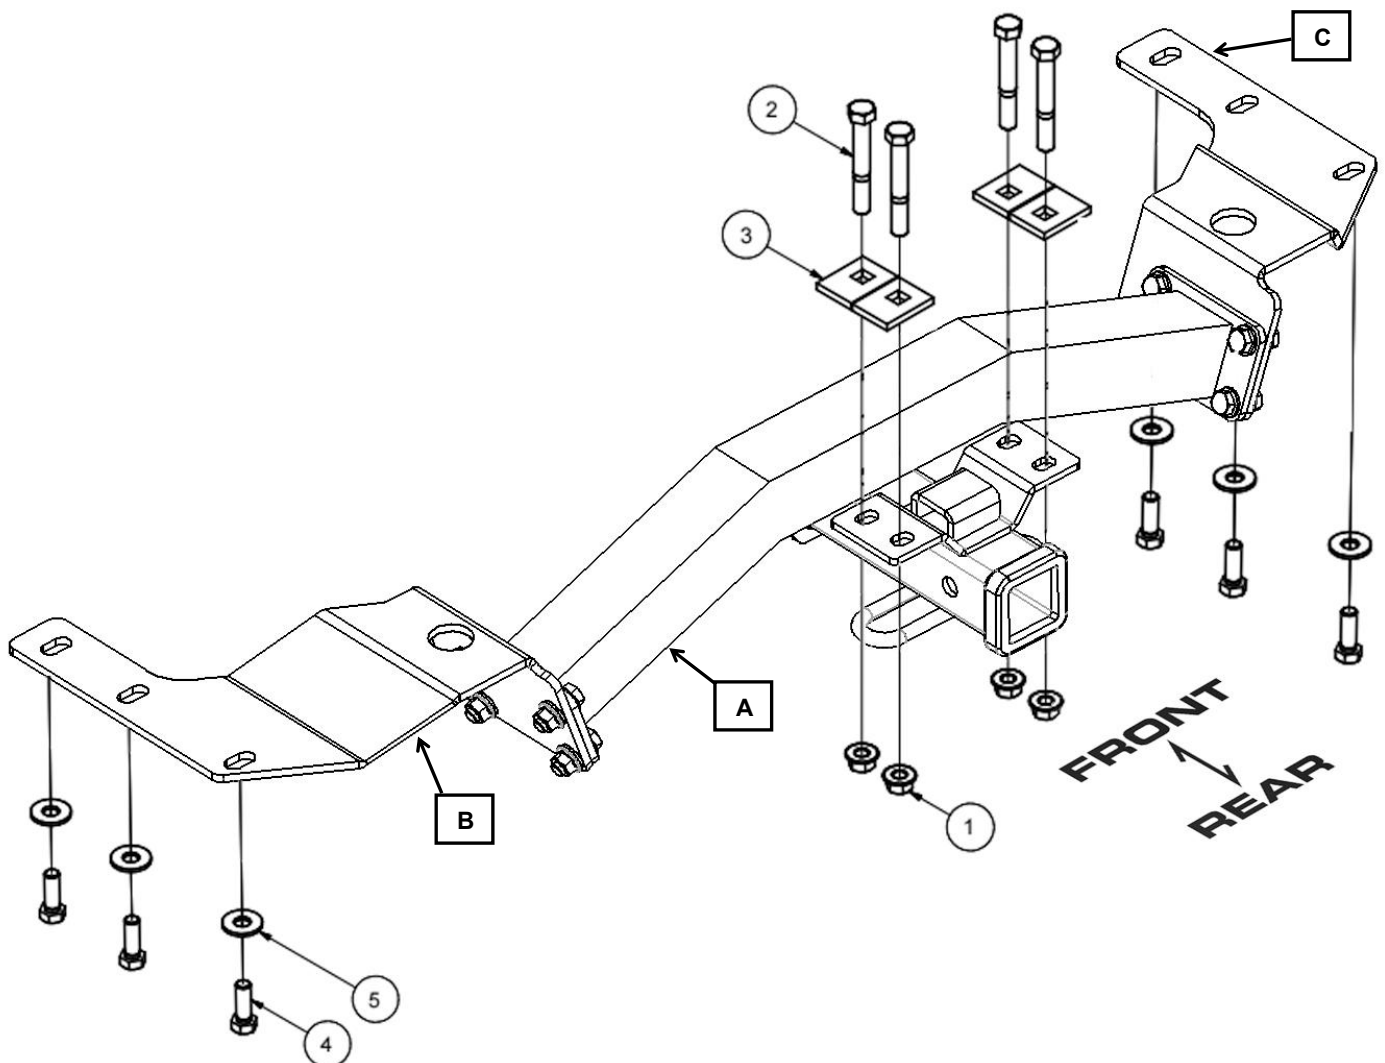

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X33645	Application	Toyota Sequoia All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in “HW A”). Note: Finger tighten only. Do not fully tighten at this time.		
2	Lower Spare Tire.		
3	Raise Hitch Into Position, Making Sure To Slide Bumper Mount Under Fascia, And Attach Side Plate Fasteners.		
4	Install Fasteners To Bumper Mount With The Spacers On Top Of Bumper Mount And Tighten All Fasteners.		
5	Raise Spare Tire Into Position.		
6	Torque all M12 Fasteners to 86 lb-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!