



Hitch Installation Instructions


REV.20260701D

Part#	HT-X33716	Application	Chevrolet Blazer All / Chevrolet C1500 / C2500 / K1500 / K2500 Suburban All / Chevrolet Suburban 1500/2500 All / Chevrolet Tahoe All / Cadillac Escalade All / GMC Yukon All					
-------	-----------	-------------	--	--	--	--	--	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Fish Wire	1	L=762	3#	Carriage Bolts	6	M12X1.75-50
	2#	Spacers	6	With SQ Hole	4#	Hex Flange Nuts	6	M12X1.75
HW A (For Hitch Assembly)	5#	Hex Bolts	8	M12X1.25-35	7#	Hex Flange Nuts	8	M12X1.25
	6#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 10000 LBS. Trailer Weight & 1000 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

* Enlarge Existing Holes to 1/2"

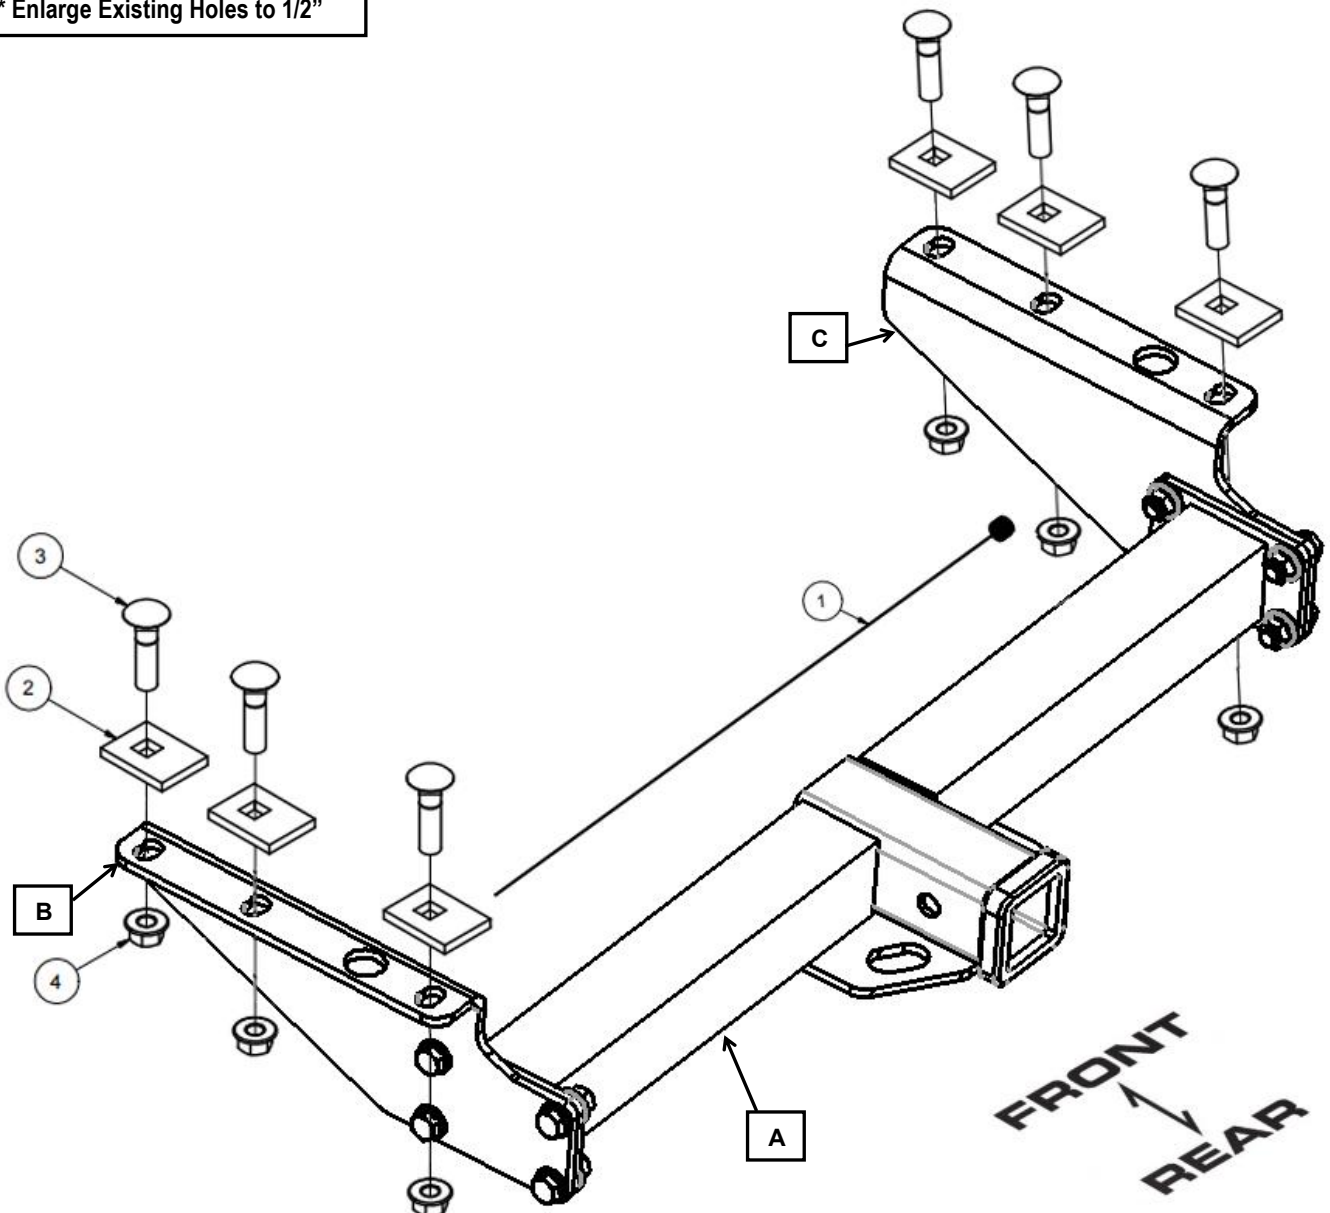

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X33716	Application	Chevrolet Blazer All / Chevrolet C1500 / C2500 / K1500 / K2500 Suburban All / Chevrolet Suburban 1500/2500 All / Chevrolet Tahoe All / Cadillac Escalade All / GMC Yukon All
-------	-----------	-------------	--

Step	Description
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in "HW A").
NOTE: If hatch-mounted spare is not present you will have to trim the rear fascia. (See Trim Diagram)	
2	Place carriage bolts and square hole spacers through existing holes in frame rails. (Some models may require mounting holes to be reamed out to allow for a M12 fastener.)
3	Installations on boxed-in frames will be made easier by fishwiring the bolts and spacers into the holes from an exiting access hole. Wrap a wire around the threads of the bolt at the end and pull wire, bolt and spacers back through the access hole through the attachment hole.
4	Raise hitch into position, taking care not to push bolts back into frame. The large slot on each side fits over the rivet. Secure each bolt with a flange nut.
5	Torque all mounting bolts to 58 lb-ft. using a torque wrench.
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.	

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!