



Hitch Installation Instructions


REV.20260701D

Part#	HT-X34150	Application	Nissan Pathfinder All					
Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Flange Nut	1	M8X1.25	5#	S-Spacers	2	With SQ Hole
	2#	Hex Bolts	2	M12X1.75-40	6#	L-Spacers	2	With SQ Hole
	3#	Hex Flange Nuts	1	M12X1.75	7#	Fish Wire	1	L=762
	4#	Carriage Bolt	1	M8X1.25-30	8#	Carriage Bolts	4	M12X1.75-45
HW A (For Hitch Assembly)	9#	Hex Bolts	8	M12X1.75-35	11#	Hex Flange Nuts	8	M12X1.75
	10#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.

*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

* Drilling Required

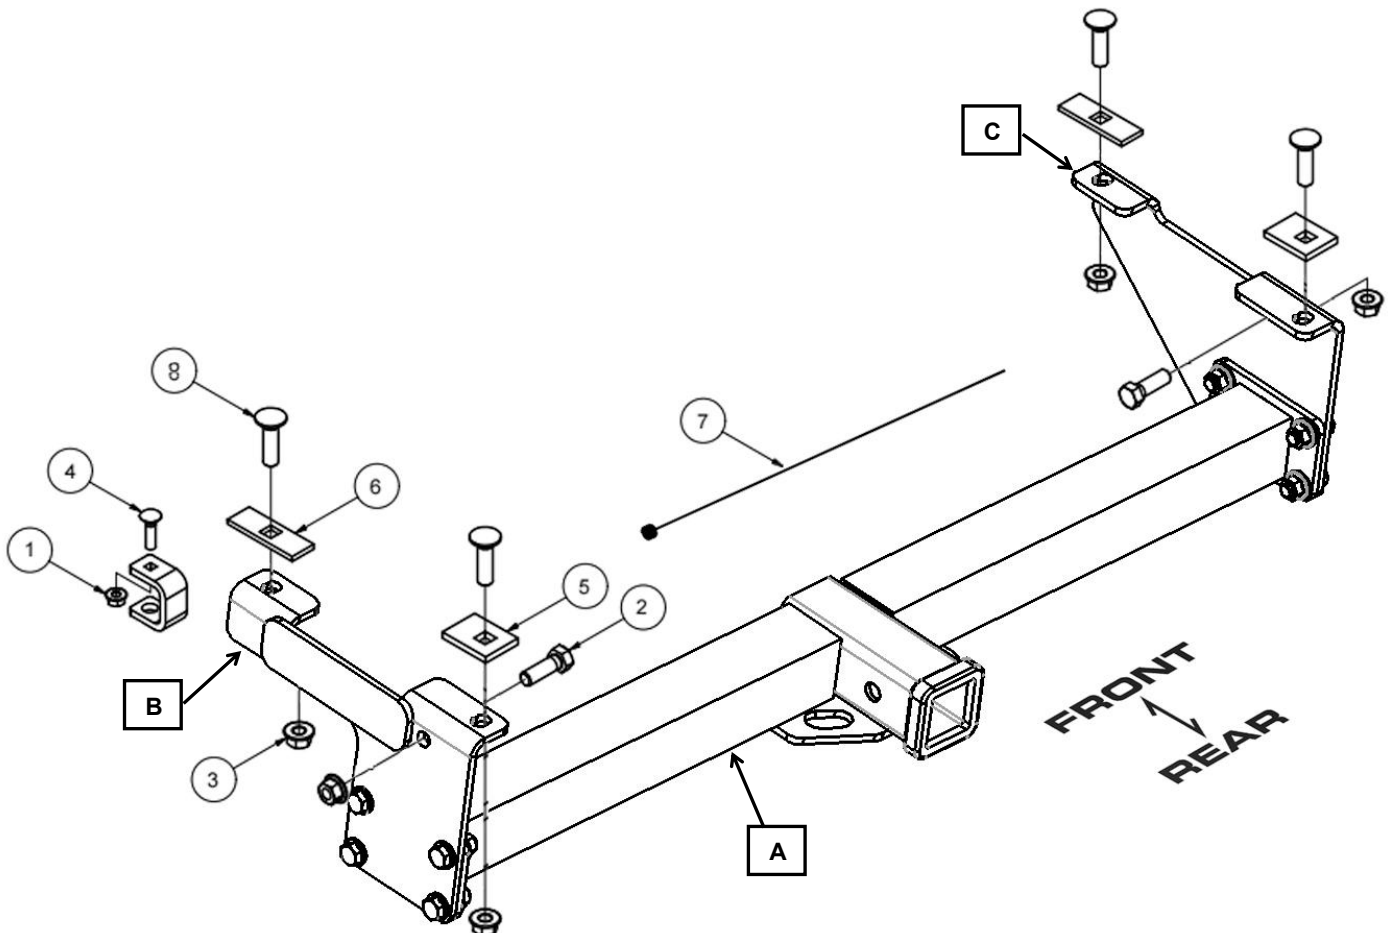

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X34150	Application	Nissan Pathfinder All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.25-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in "HW A"). Note: Torque all HWA to 86 lb-ft		
2	For ease of installation lower vehicle exhaust from the hangers.		
3	Remove the brackets at the end of the frame which are positioned in the hitch mounting location.		
4	Remove the exhaust isolator from the lowered exhaust. The isolator will be re-attached later in the installation.		
5	Fishwire carriage bolts and spacers thru the frame and out the available rear mounting holes.		
6	Raise the hitch into position and attach it to the frame using the M12 flange nuts provided.		
7	Install a M12 hex bolt thru the side bracket and hitch plate, attach using a M12 flange nut. (Both sides)		
8	Using the hitch as a template drill out the front mounting hole to 17/32".		
9	Fishwire a carriage bolt and spacer thru the access slot located on the inside of the frame rail near the gas tank and out the front mounting hole location. Attach a M12 flange nut as shown.		
10	Attach one end of the exhaust isolator to the bracket provided using the M8 hardware and attach the other end to the isolator hanger.		
11	Torque M12 Carriage Bolts to 58 ft-lbs and other M12 hardware to 86 ft-lbs. Torque all M10 hardware to 34 ft-lbs.		
12	Re-connect the exhaust to the hangers when installation is complete.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!