



Hitch Installation Instructions


REV.20260601D

Part#	HT-X34741	Application	Chevrolet / GMC 2500HD / 2500HD Classic ALL Chevrolet / GMC 3500 / 3500HD / 3500 Classic ALL					
-------	-----------	-------------	---	--	--	--	--	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Flange Nuts	4	M12X1.75	5#	Spacers (S)	4	With Round Hole
	2#	Lock Washers	4	M14	6#	Large Flat Washers	2	M14
	3#	Hex Bolts	4	M12X1.75-45	7#	Hex Bolts	4	M14X2-40
	4#	Spacers (L)	2	With Round Hole				
HW A (For Hitch Assembly)	8#	Hex Bolts	8	M12X1.75-35	10#	Hex Flange Nuts	8	M12X1.75
	9#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 8000 LBS. Trailer Weight & 800 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 12000 LBS. Trailer Weight & 1200 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

- * Drilling Required
- * Trimming Required
- * Lower Spare Tire

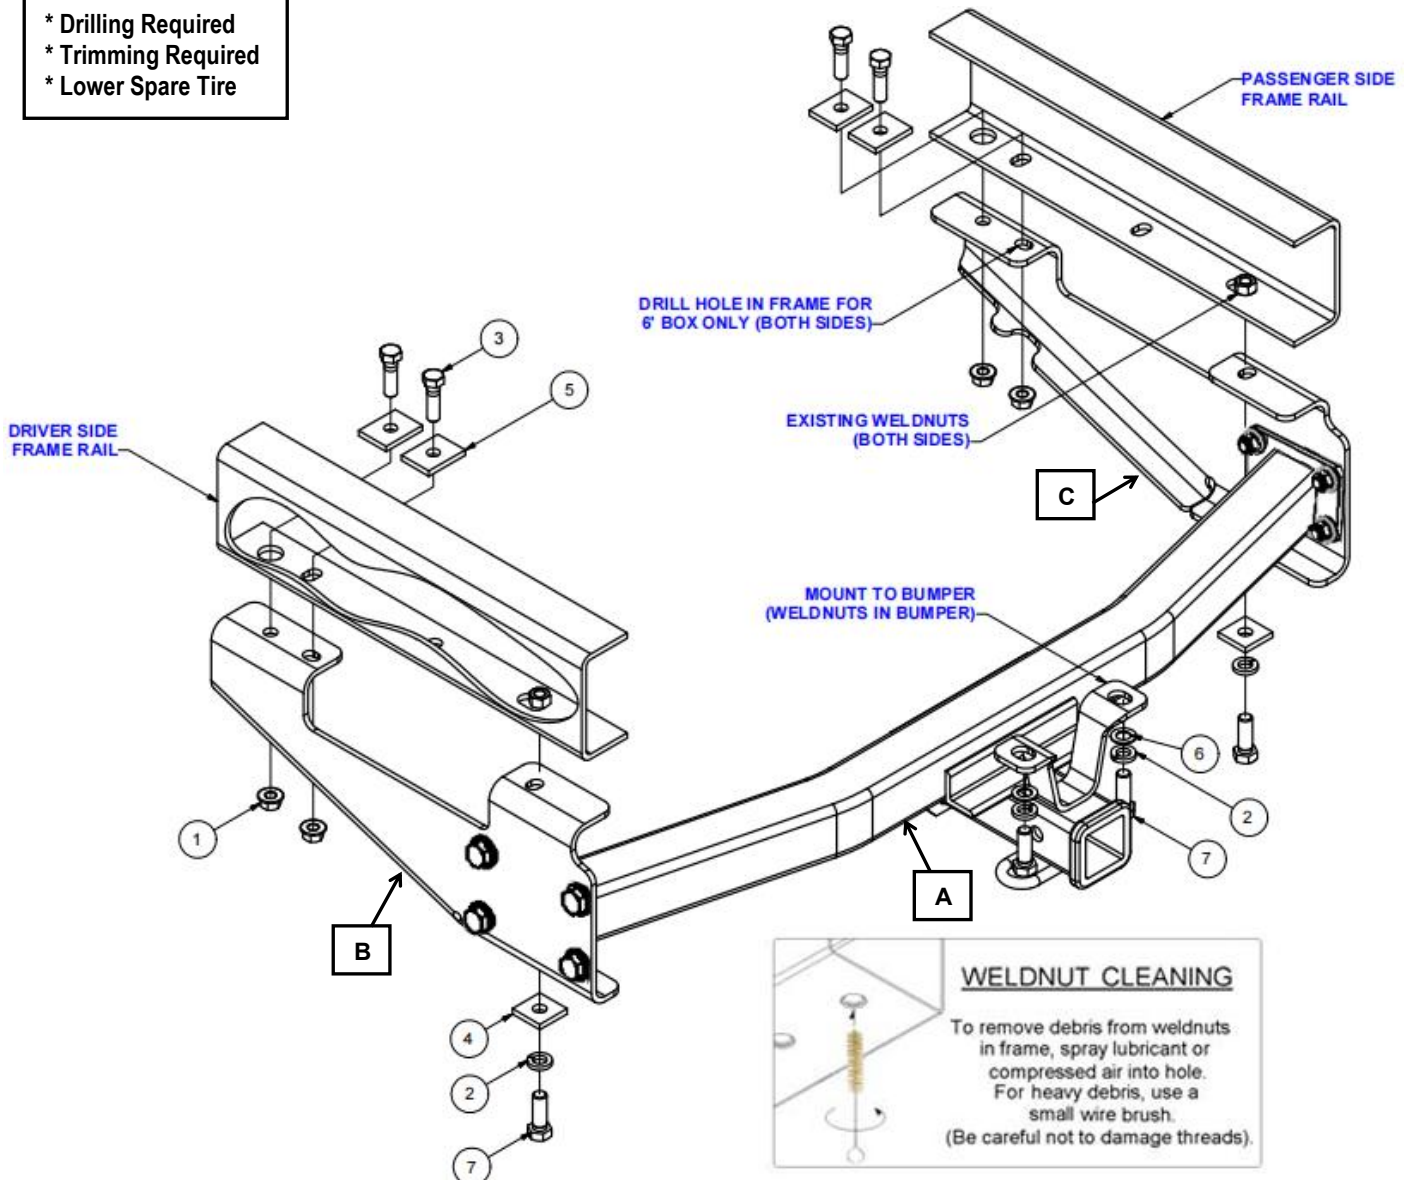

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X34741	Application	Chevrolet / GMC 2500HD / 2500HD Classic ALL Chevrolet / GMC 3500 / 3500HD / 3500 Classic ALL
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in “HW A”). Note: Finger tighten only. Do not fully tighten at this time.		
2	Remove existing 14mm fasteners from end of each frame rail if present and return to customer.		
3	Trim bumper fascia for access to weld-nuts in bumper and clearance for bumper mount.		
4	Lift receiver into position, locating slots in hitch over weld-nuts in vehicle frame.		
5	Install 14mm fasteners through hitch into weld-nuts in vehicle frame and bumper.		
6	On 6' short box, use hitch as a template to drill for center attachment on both sides as shown above.		
7	Torque all 14mm fasteners to 126 lb-ft and all M12 fasteners to 86 lb-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!