



Hitch Installation Instructions


REV.20260801D

Part#	HT-X34856	Application	Kia Sorento All
-------	-----------	-------------	-----------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Bolts	4	M12X1.5-25	2#	Conical Washers	4	M12
HW A (For Hitch Assembly)	3#	Hex Bolts	8	M12X1.75-35	5#	Hex Flange Nuts	8	M12X1.75
	4#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
Gross Load Capacity When Used As A Distribution Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

- * No Drilling Required
- * May Require Exhaust Modification

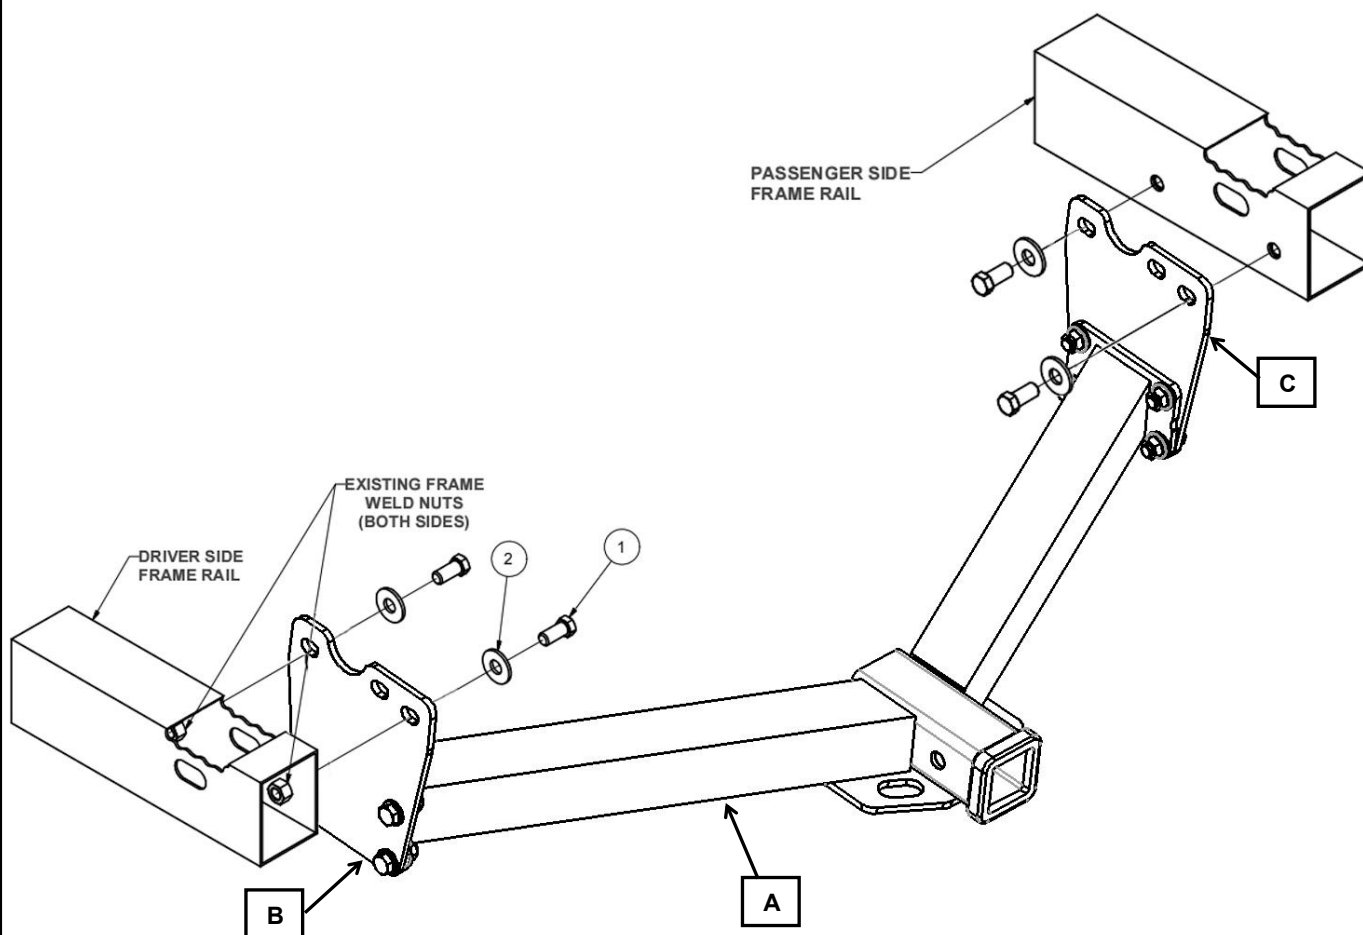

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X34856	Application	Kia Sorento All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in “HW A”). Note: Torque all HWA to 86 lb-ft		
2	Position the hitch frame brackets up against the inner surface of each vehicle frame rail. Align holes in hitch frame brackets with existing tapped holes in vehicle frame.		
3	Place a M12 conical washer on each 12mm bolts and bolt hitch to frame.		
4	Torque all M12 fasteners to 86 lb-ft. Note: If tail pipe(s) is touching the hitch cross tube (or rattles against when driving), reform the hanger bracket welded to the vehicle frame so that the tailpipe is pulled up which will give added clearance.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!