



Hitch Installation Instructions


REV.20260701D

Part#	HT-X35133	Application	Acura RDX All
-------	-----------	-------------	---------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Bolts	2	M12X1.75-45	3#	Hex Bolts	2	M12X1.25-40
	2#	Conical Washers	4	M12	4#	Handle Nuts	2	M12X1.75
HW A (For Hitch Assembly)	5#	Hex Bolts	6	M12X1.75-35	7#	Lock Washers	6	M12
	6#	Flat Washers	10	M12	8#	Hex Nuts	4	M12X1.75

Gross Load Capacity When Used As A Weight Carrying Hitch: 3500 LBS. Trailer Weight & 300 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

* Lower Exhaust Required

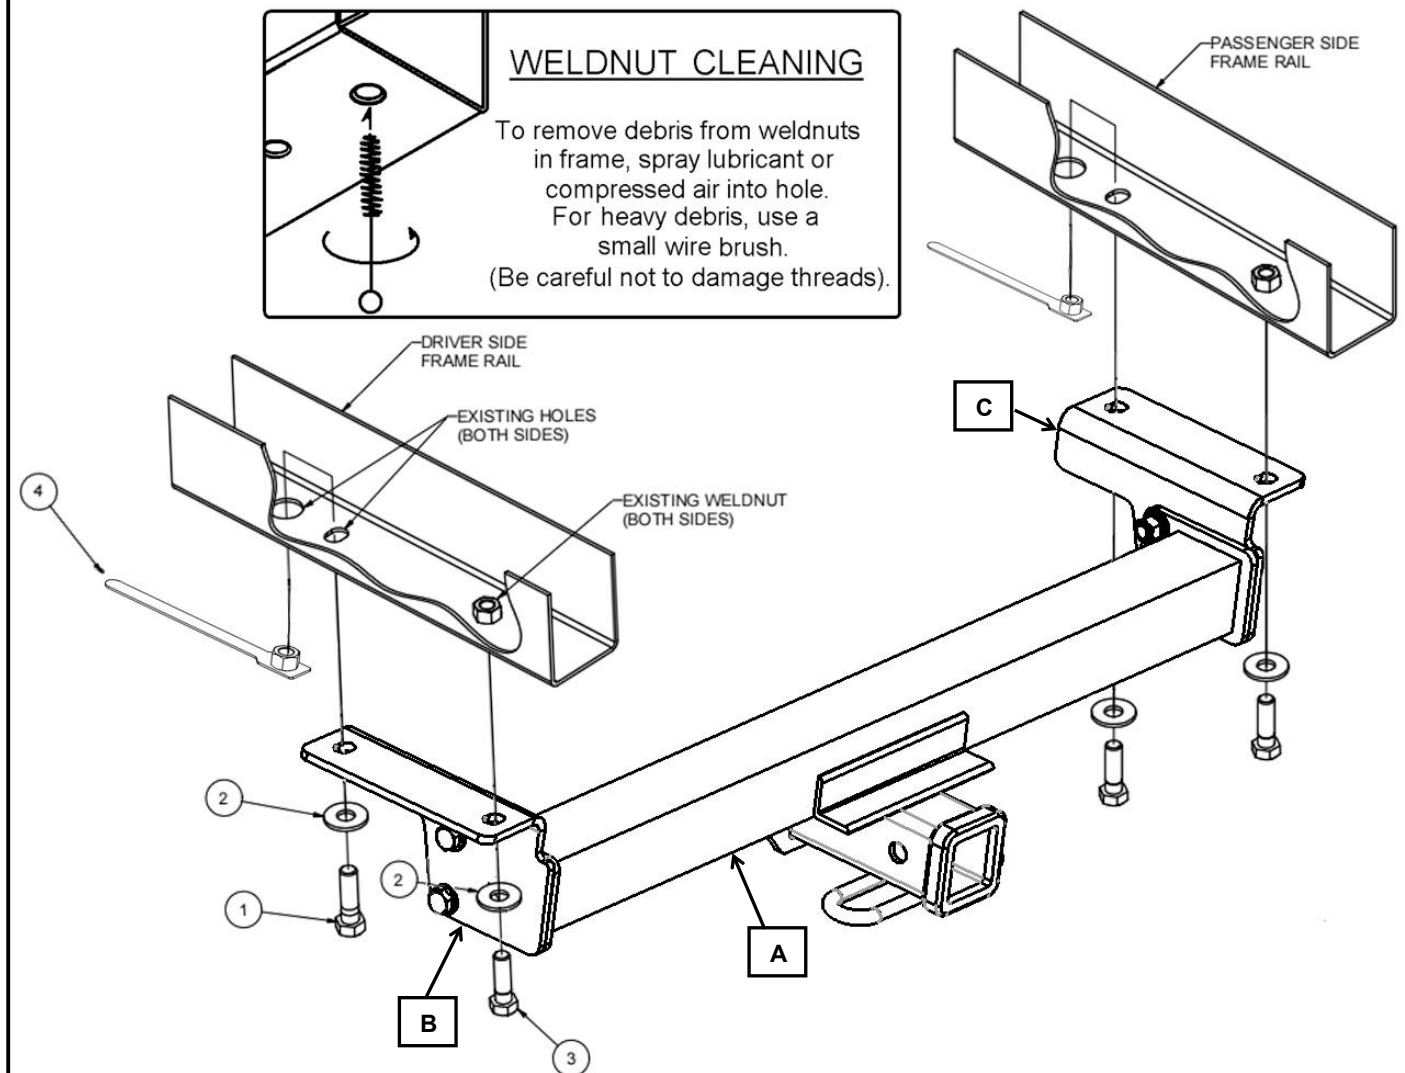

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X35133	Application	Acura RDX All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (6) M12X1.75-35mm Hex Bolts, (10) M12 Flat Washers, (6) M12 Lock Washers, (4) M12 Hex Nuts. (Hardware in “HW A”). Note: Torque all “HW A” fasteners to 86 lb-ft.		
2	Raise hitch into position and align holes on hitch with holes in frame rail.		
3	Install rearmost bolts hand-tight to secure hitch to frame.		
4	Insert handle nuts bent as shown and install remaining hardware.		
5	Torque M12 hardware to 79 lb-ft. and all 1/2" hardware to 110 lb-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!