



Hitch Installation Instructions


REV.20260801D

Part#	HT-X35408	Application	Nissan Frontier
-------	-----------	-------------	-----------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Bolts	2	M12X1.75-40	4#	Conical Washers	4	M10
	2#	Hex Bolts	4	M10X1.5-35	5#	Nut Plate Weld-nut	2	M12X1.75
	3#	Conical Washers	2	M12				
HW A (For Hitch Assembly)	6#	Hex Bolts	8	M12X1.75-35	8#	Hex Flange Nuts	8	M12X1.75
	7#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

* Drilling Required

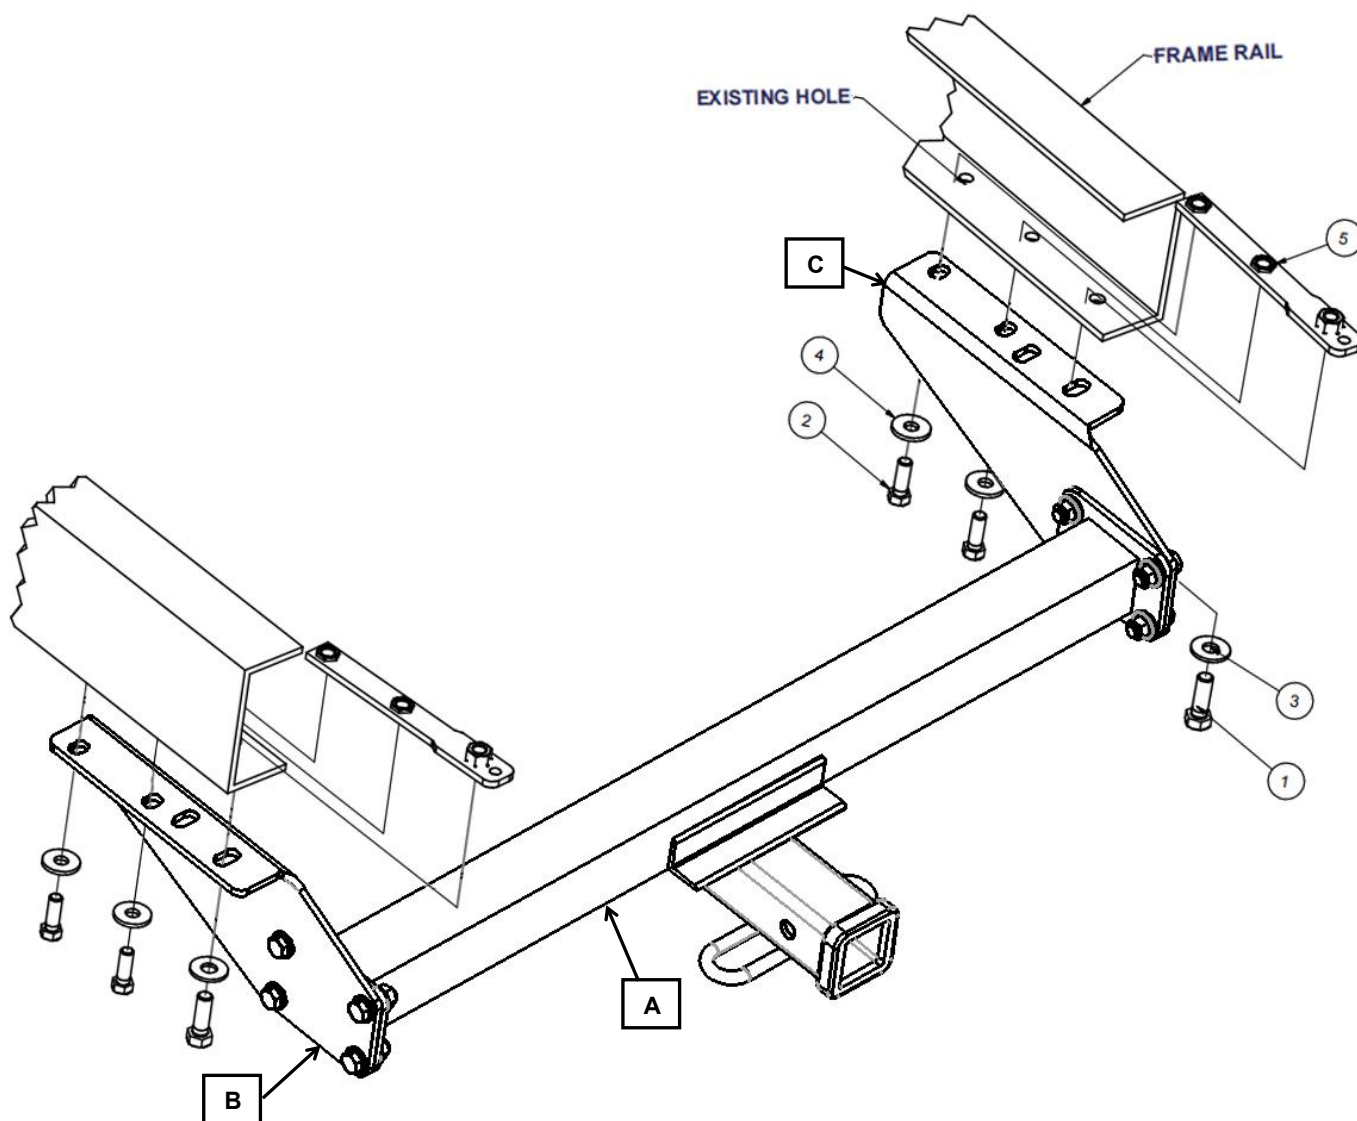

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X35408	Application	Nissan Frontier
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in “HW A”). Note: Torque all HWA to 86 lb-ft		
2	Raise the hitch into position at end of vehicle frame.		
3	Install fasteners as shown.		
4	Torque all M12 fasteners to 86 lb-ft and all M10 fasteners to 50 lb-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!