



Hitch Installation Instructions


REV.20260801D

Part#	HT-X35451	Application	Dodge Nitro All					
-------	-----------	-------------	-----------------	--	--	--	--	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Bolts	6	M12X1.75-45	2#	Conical Washers	6	M12
HW A (For Hitch Assembly)	3#	Hex Bolts	8	M12X1.75-35	5#	Hex Flange Nuts	8	M12X1.75
	4#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 3500 LBS. Trailer Weight & 350 LBS. Tongue Weight.
Gross Load Capacity When Used As A Distribution Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

* No Drilling Required

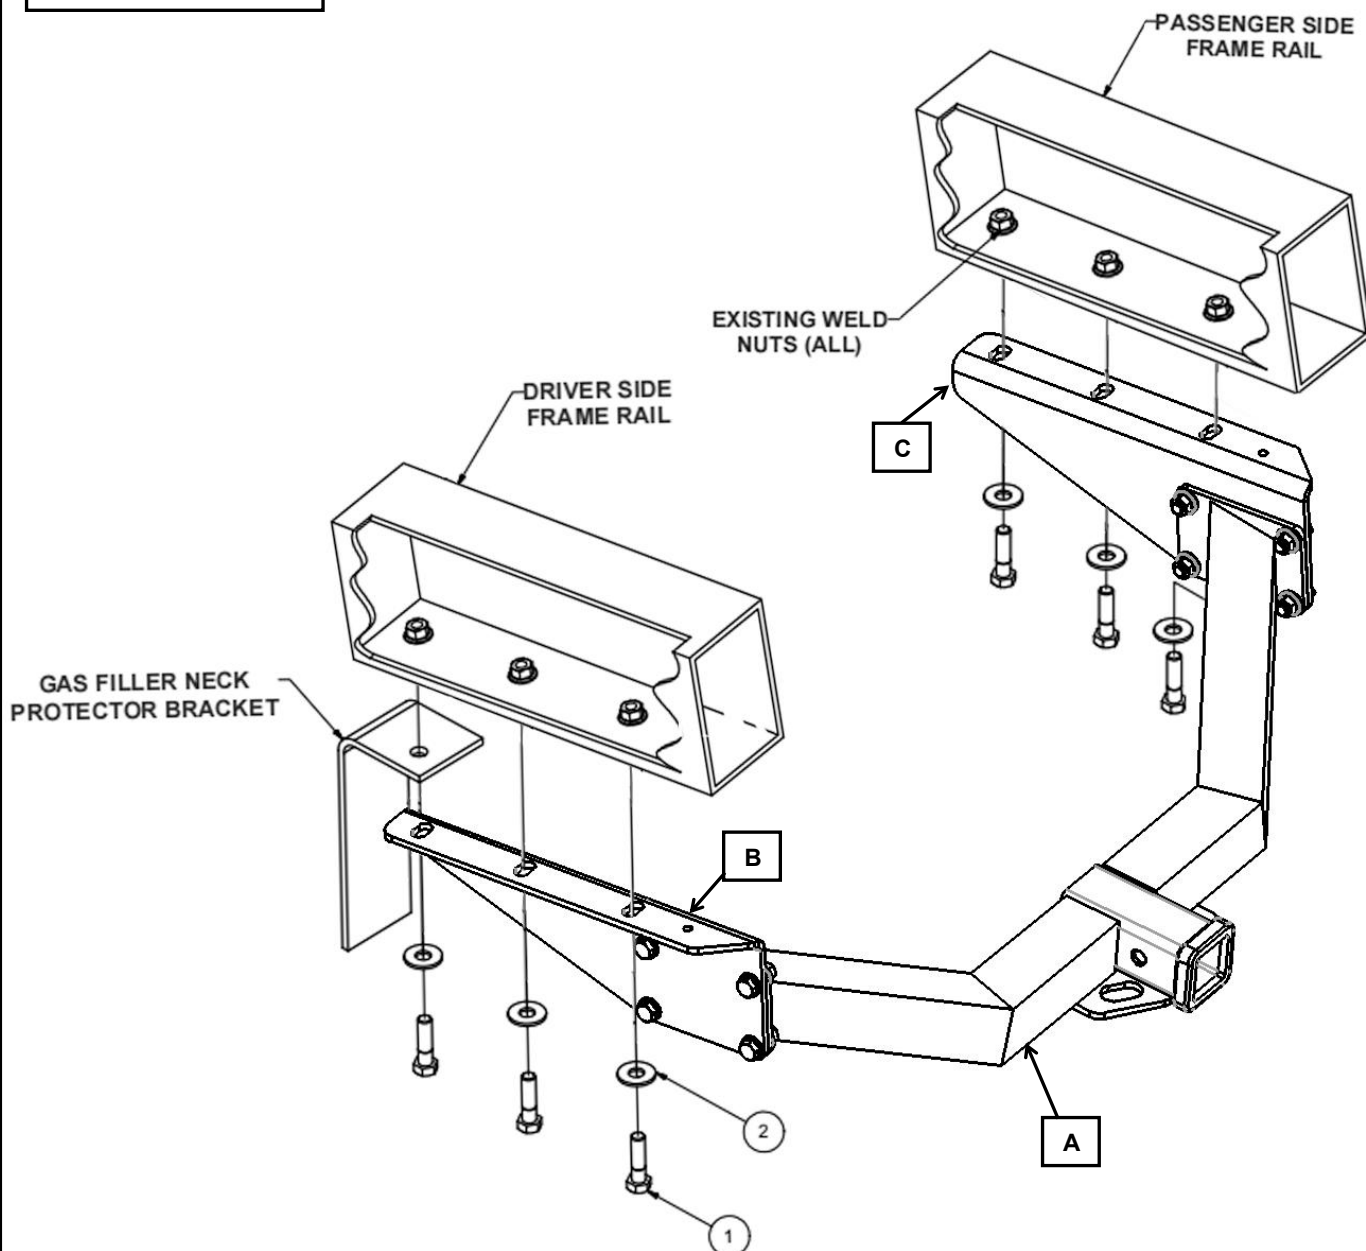

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X35451	Application	Dodge Nitro All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in “HW A”). Note: Torque all HWA to 86 lb-ft		
2	Remove the tow hook from bottom of driver side vehicle frame. Discard the attaching bolts.Retain the tow hook and return it to the customer. Remove the bolt holding gas filler neck protector bracket to frame.		
3	Raise hitch into position with gas filler neck protector bracket between hitch and frame and align holes in hitch to the holes in frame as shown.		
4	Fasten hitch to frame with M12 bolts and M12 conical washers. Finger tight only.		
5	Torque all M12 bolts to 86 ft.-lbs.		
6	Return tow hook to customer.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!