




Hitch Installation Instructions

REV.20260801S

Part#	HT-X35533	Application	Dodge Durango All \ Chrysler Aspen All					
Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B	1#	Spacers	6	With Round Hole	3#	Hex Bolts	4	M12X1.75-120
	2#	Hex Flange Nuts	4	M12X1.75	4#	Large Flat Washers	4	M12
HW A (For Hitch Assembly)	5#	Hex Bolts	8	M12X1.75-35	7#	Hex Flange Nuts	8	M12X1.75
	6#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 10000 LBS. Trailer Weight & 1000 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

* No Drilling Required

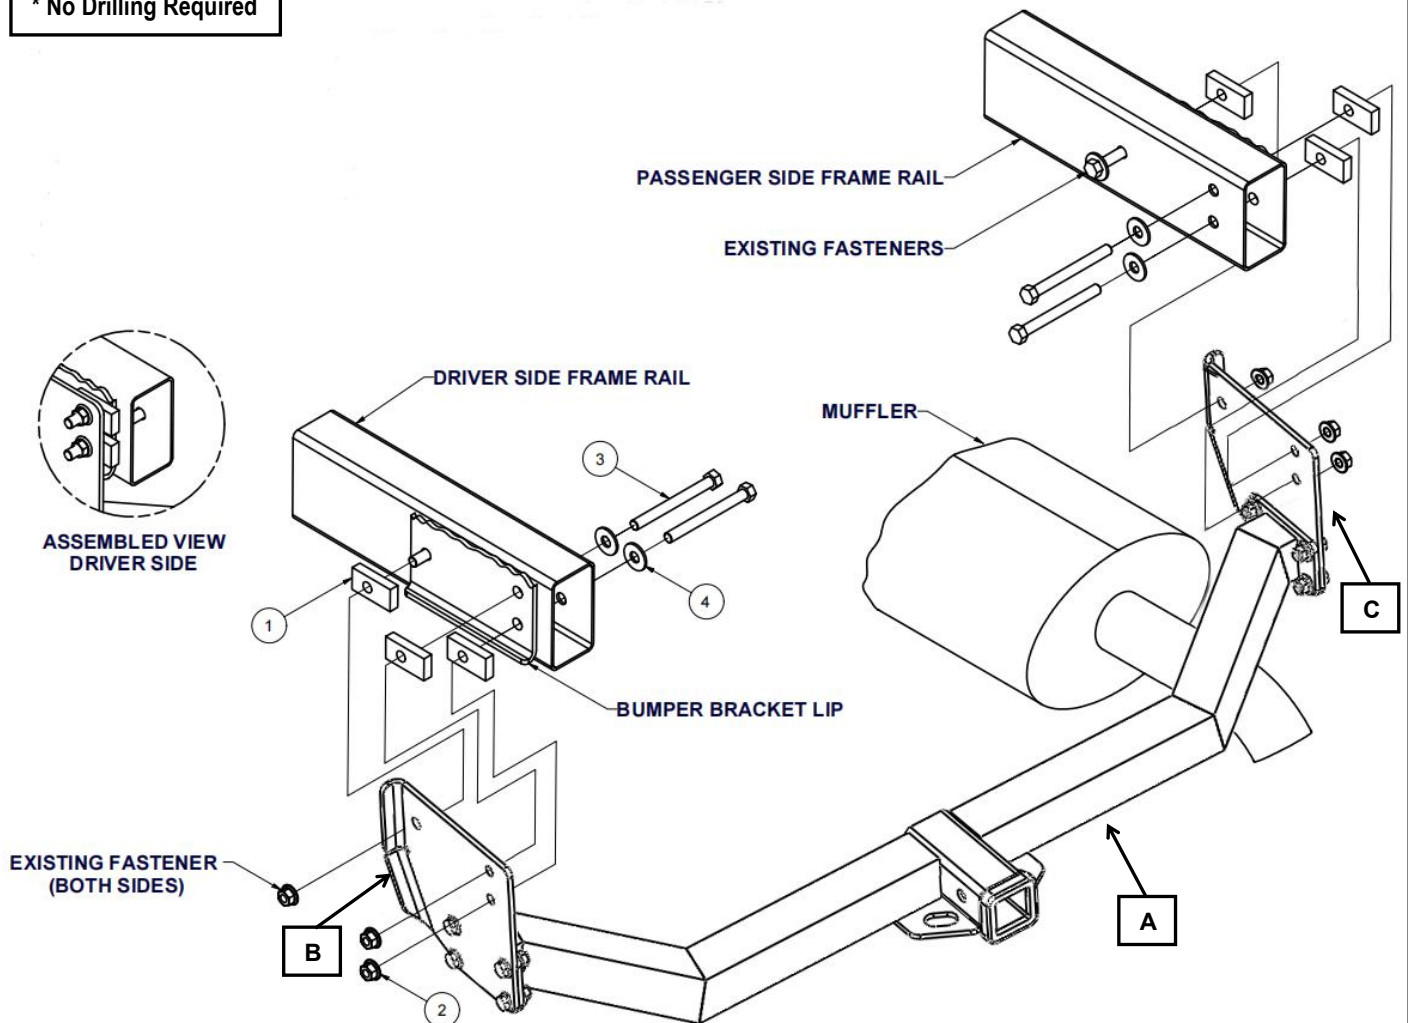

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

REV.20260801S

Part#	HT-X35533	Application	Dodge Durango All \ Chrysler Aspen All
-------	-----------	-------------	--

Step	Description
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in "HW A"). Note: Finger tighten only. Do not fully tighten at this time.
2	Remove three bumper bracket nuts each side. Remove two rear most bolts each side.
3	Install supplied M12 bolts where factory bolts were removed. Push all bolts through frame until M12 protrudes through frame over bumper bracket lip. Position spacers over bolts.
4	Raise hitch into position over tail pipe. Attach with existing forward most bolts and fasten with existing nuts. Fasten remaining bolts with M12 flange nuts.
5	Torque all M12 hardware to 86 ft-lbs. Torque all M14 fasteners to 136 ft-lbs.
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.	

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!