



Hitch Installation Instructions


REV.20260801D

Part#	HT-X35036	Application	Dodge Caravan/Grand Caravan With Stow-n-Go\ Chrysler Town & Country With Stow-n-Go
-------	-----------	-------------	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW A (For Hitch Assembly)	1#	Hex Bolts	3	M12X1.75-35	4#	Hex Nuts	5	M12X1.75
	2#	Flat Washers	11	M12	5#	Hex Bolts	3	M12X1.75-50
	3#	Lock Washers	6	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 3500 LBS. Trailer Weight & 350 LBS. Tongue Weight.
Gross Load Capacity When Used As A Distribution Carrying Hitch: 4000 LBS. Trailer Weight & 400 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

- * No Drilling Required
- * No Trimming Required

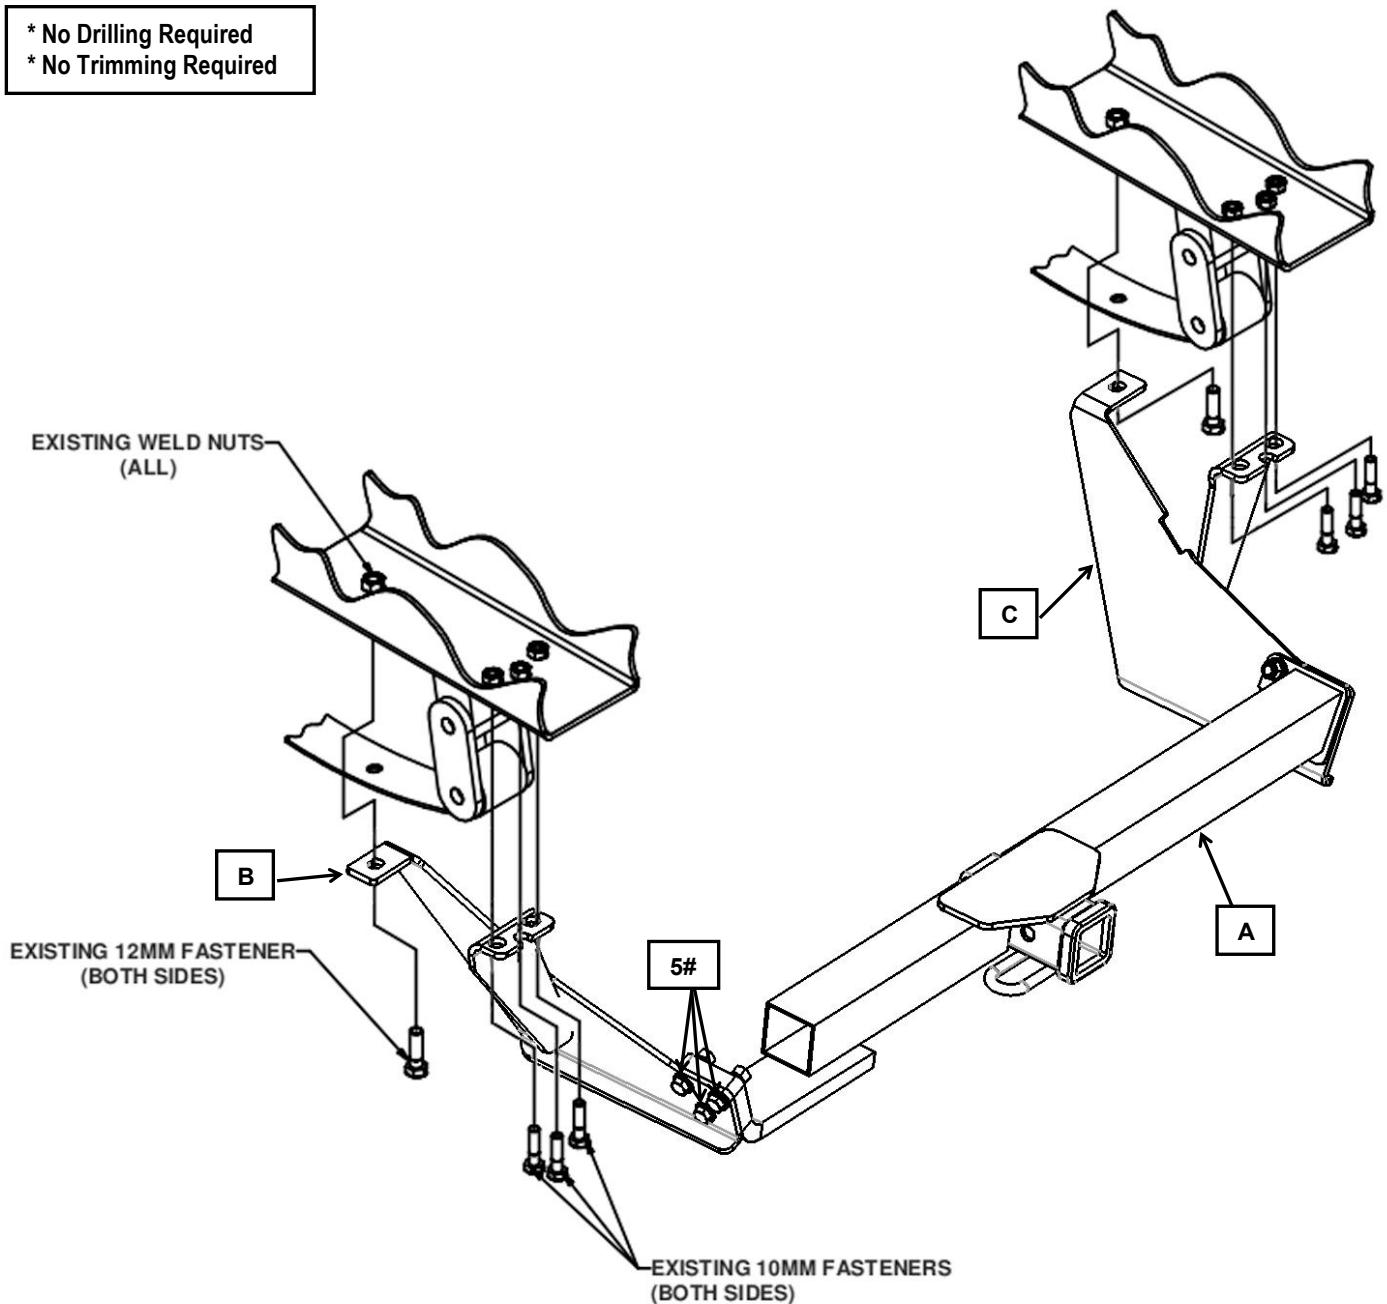

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X35036	Application	Dodge Caravan/Grand Caravan With Stow-n-Go\ Chrysler Town & Country With Stow-n-Go
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (3) M12X1.75-35mm Hex Bolts, (3) M12X1.75-50mm Hex Bolts, (11) M12 Flat Washers, (6) M12 Lock Washers, (5) M12 Hex Nuts. (Hardware in "HW A"). Note: Torque all "HW A" fasteners to 86 lb-ft.		
2	Remove the three 10mm bolts attaching the rear spring shackle to the vehicle's frame. Also remove the single 12mm bolt from the vehicle just forward of the spring shackle. Save all of these bolts for use later during hitch installation. (Both sides)		
3	Position the hitch's left mounting tab on the driver side over the leaf spring near the rear axle. Then pull this side of the hitch towards the rear of the vehicle and into position. Repeat this procedure on the passenger side of the vehicle.		
4	Raise the hitch into position so it contacts the vehicle's frame rail. Align the 3 holes in the hitch with the holes in the vehicle's frame where fasteners were removed. Bolt the hitch in place using previously removed fasteners		
5	Torque all 10mm fasteners to 50 lb-ft, and all 12mm fasteners to 86 lb-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!