

Part#	HT-X36231	Application	Ford Ranger All \ Mazda B2300 / B4000 / B3000 All
-------	-----------	-------------	---


Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Carriage Bolts	4	M12X1.75-45	3#	Spacers	6	With SQ Hole
	2#	Hex Flange Nuts	4	M12X1.75				
HW A (For Hitch Assembly)	4#	Hex Bolts	8	M12X1.75-35	6#	Hex Flange Nuts	8	M12X1.75
	5#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 4000 LBS. Trailer Weight & 400 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.

*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

*** Drilling Required**

*** NOTE: 97 and prior years 19mm open end style wrench must be purchased to allow removal of spare tire after hitch installation**

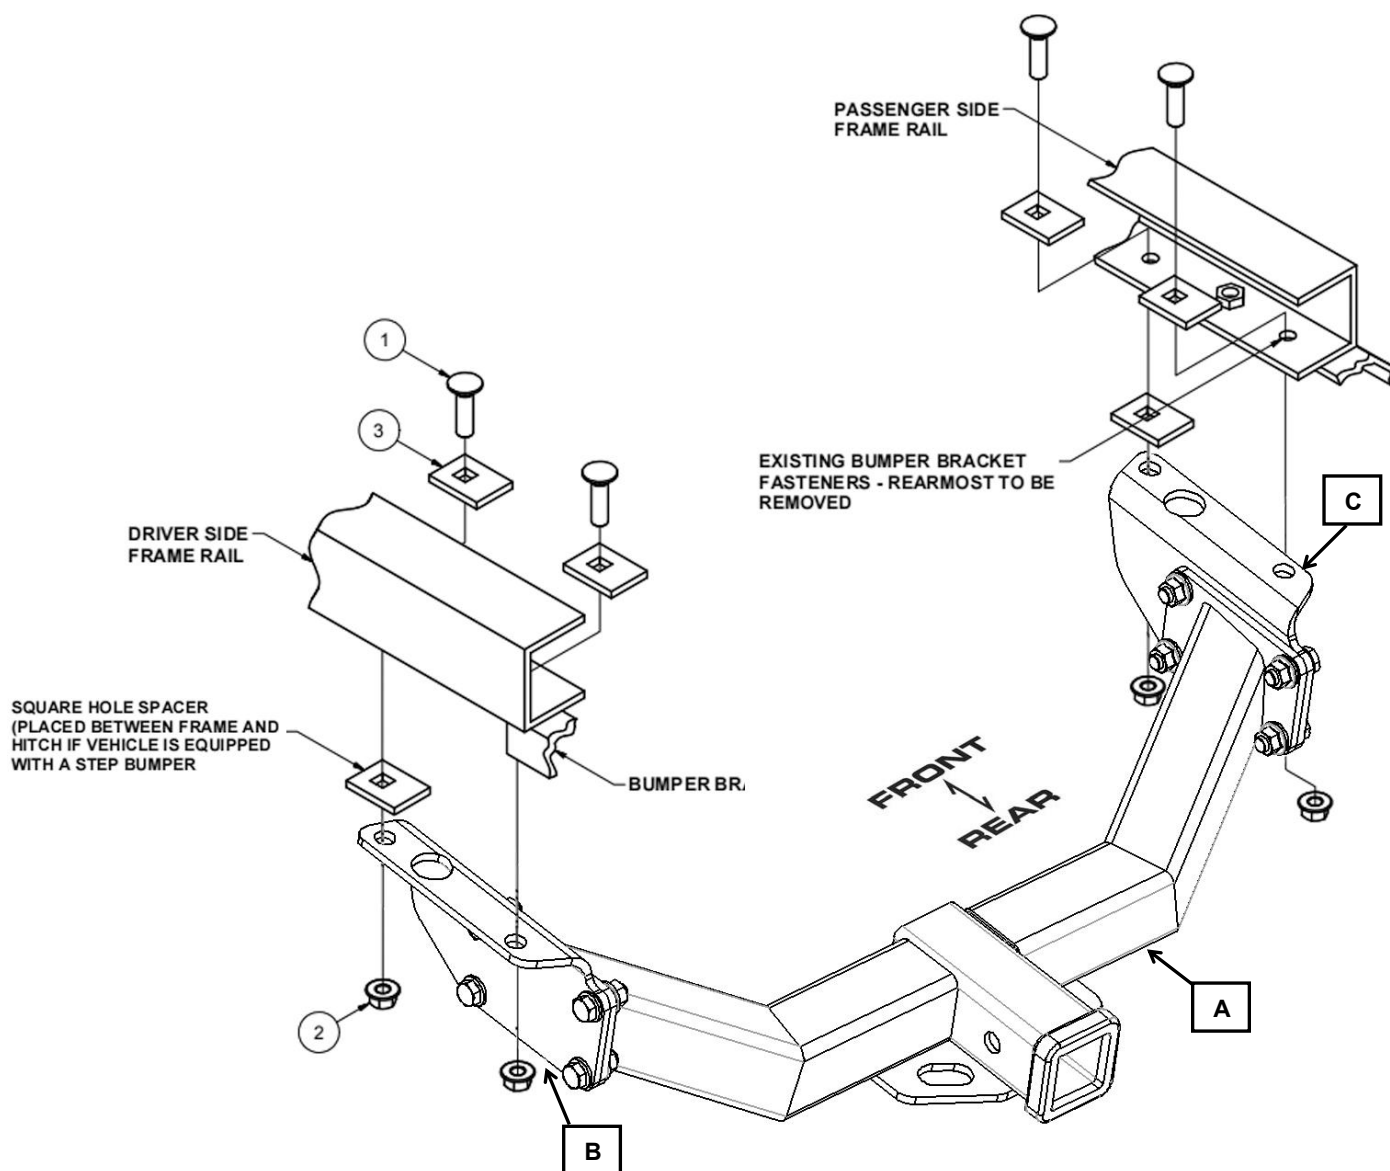

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X36231	Application	Ford Ranger All \ Mazda B2300 / B4000 / B3000 All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in "HW A"). Note: Finger tighten only. Do not fully tighten at this time.		
2	For vehicles with step bumper, remove rearmost bumper bracket bolts and J-nuts (both sides).		
3	Position hitch on vehicle, sandwiching the bumper brackets (if present) between the hitch and the vehicle frame. Install rearmost fasteners as shown.		
4	Using hitch as a template, drill two 1/2" holes into frame at forward end of hitch. Note: On some models, these holes may already exist.		
5	Install remaining fasteners as shown. For vehicles with step bumper, place square hole spacer between frame and side brackets at forward attachment.		
6	Torque carriage bolts to 58 lb-fts and other hardware to 86 lb-fts.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!