



Hitch Installation Instructions


REV.20260601D

Part#	HT-X36334	Application	Land Rover LR3 All \ Land Rover LR4 All \ Land Rover Range Rover Sport HSE
-------	-----------	-------------	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Carriage Bolts	4	M12X1.75-45	4#	Hex Flange Nuts	4	M12X1.75
	2#	Spacers (25.4X76)	2	With SQ Hole	5#	Fish Wires	4	L=762
	3#	Spacers (32X75)	2	With SQ Hole				
HW A (For Hitch Assembly)	6#	Hex Bolts	6	M12X1.75-35	8#	Lock Washers	6	M12
	7#	Flat Washers	10	M12	9#	Hex Nuts	4	M12

Gross Load Capacity When Used As A Weight Carrying Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 8000 LBS. Trailer Weight & 800 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

- * No Drilling Required
- * Fish Wire Required
- * Lower Spare Tire

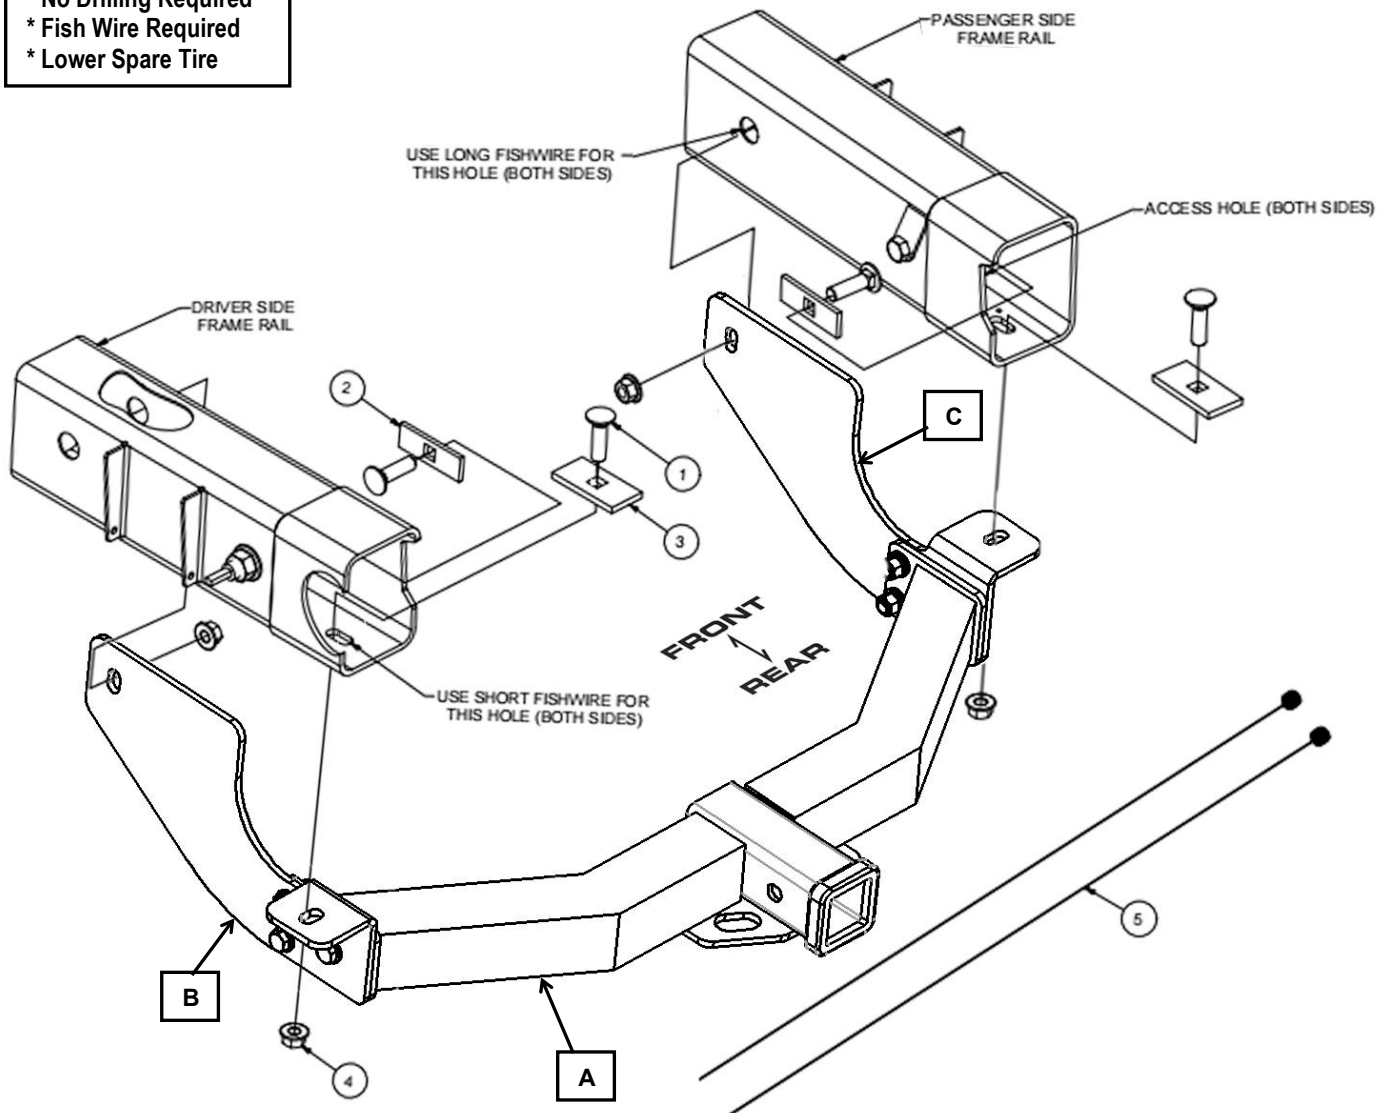


The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!




Hitch Installation Instructions

Part#	HT-X36334	Application	Land Rover LR3 All \ Land Rover LR4 All \ Land Rover Range Rover Sport HSE
-------	-----------	-------------	--

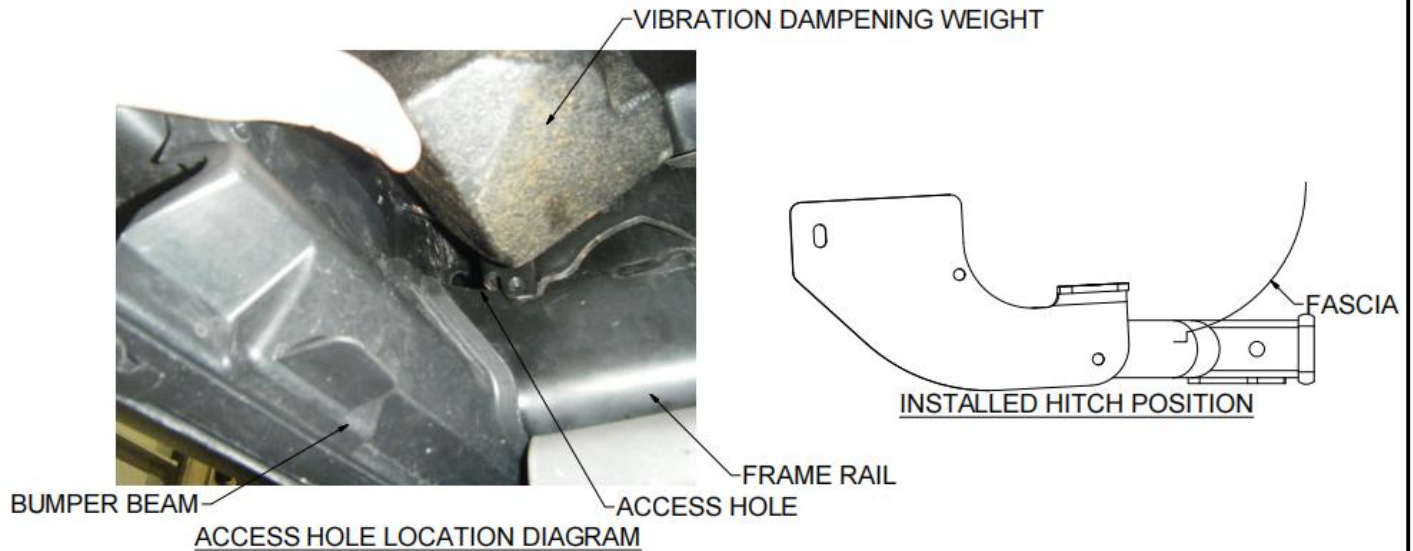

FISHWIRE TECHNIQUE

INSERT COILED END OF FISHWIRE TOOL THROUGH HITCH MOUNTING HOLE IN VEHICLE FRAME RAIL AND OUT THE ACCESS HOLE. PASS COILED END OF FISHWIRE THROUGH SPACER AND THREAD BOLT INTO COIL. KINK WIRE TO KEEP SPACER SEPERATE FROM BOLT AS SHOWN. PULL FISHWIRE, SPACER, AND BOLT THROUGH FRAME AND OUT MOUNTING HOLE. USE FISHWIRE TO GUIDE HITCH DURING MOUNTING AND PREVENT LOSS OF BOLT / SPACER INSIDE FRAME RAIL.

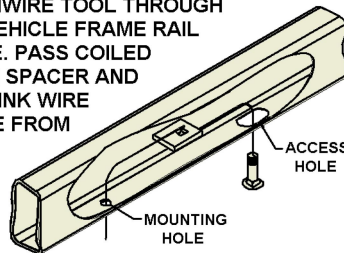

****NOTE: SOME VEHICLES MAY FISHWIRE THROUGH END OF FRAME****

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X36334	Application	Land Rover LR3 All \ Land Rover LR4 All \ Land Rover Range Rover Sport HSE
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (6) M12X1.75-35mm Hex Bolts, (10) M12 Flat Washers, (6) M12 Lock Washers, (4) M12 Hex Nuts. (Hardware in "HW A"). Note: Finger tighten only. Do not fully tighten at this time.		
2	Lower spare tire for ease of installation.		
3	Locate the access holes used for fish wiring the hardware. The access hole is located on the inside of the frame rails between the frame and bumper beam. Push vibration dampening weights toward front of vehicle to locate the hole. Note: See Access Hole Location Diagram.		
4	Using fish wires, pull M12 carriage bolts and spacers (25.4X76) through access holes and out hole on inside of frame rails. See Fish wire Technique diagram.		
5	Using fish wires, pull M12 carriage bolts and spacers (32X75) through access holes and out slots in bottom of frame rails. See Fish wire Technique diagram.		
6	Raise hitch into position and secure with M12 hex flange nuts.		
7	Torque M12 carriage bolts to 58 lb-ft and other M12 hardware to 86 lb-ft.		
8	Raise spare tire.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!