




Hitch Installation Instructions

Part#	HT-X36391	Application	INFINITI FX35 AII \ FX37 AII \ FX50 AII \ QX70 AII
-------	-----------	-------------	--



PASSENGER SIDE UNDERBODY
PANEL TRIM DIAGRAM

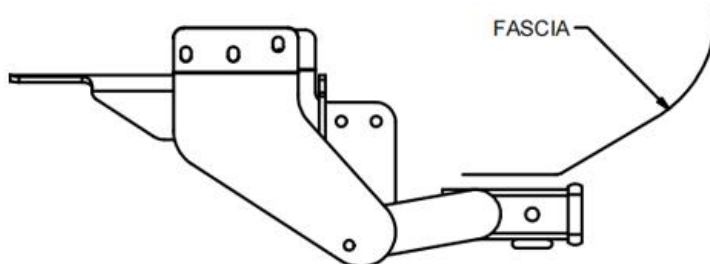

INSTALLED HITCH POSITION

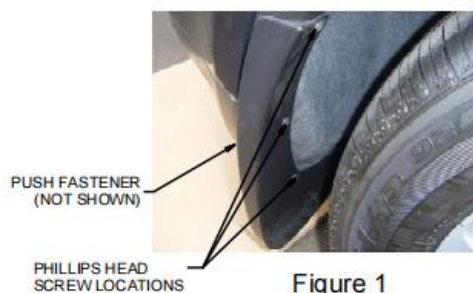


Figure 1



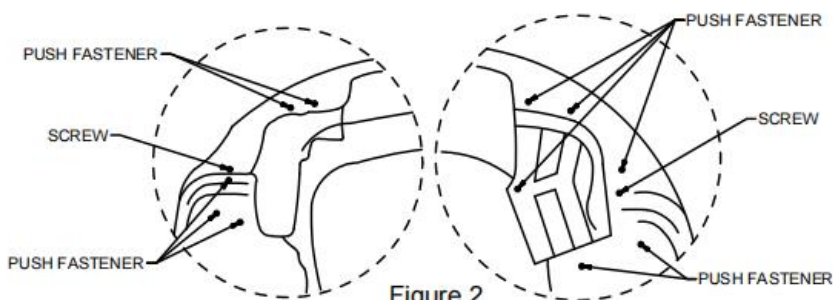



Figure 2

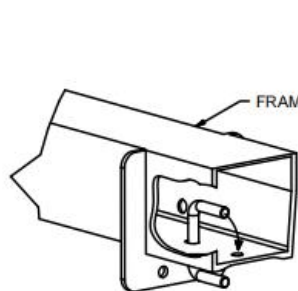

U-BOLT INSTALLATION

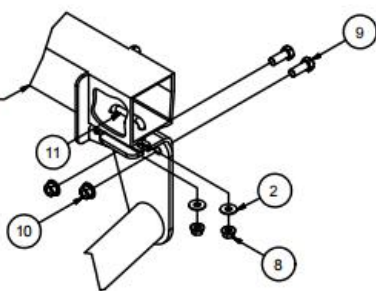

MOUNT PLATE WELDMENT
INSTALLATION

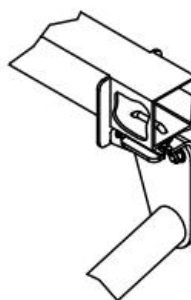

MOUNT PLATE WELDMENT INSTALLED

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!





Hitch Installation Instructions

Part#	HT-X36391	Application	INFINITI FX35 AII \ FX37 AII \ FX50 AII \ QX70 AII
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in "HW A"). Note: Finger tighten only. Do not fully tighten at this time.		
2	Remove the rear splash guards from driver and passenger side of vehicle if necessary. Remove the underbody panels by removing the (2) bolts and (11) push fasteners. Save panels and fasteners for re installation.		
			
3	Remove the tow hook from the driver side frame rail by removing the (4) bolts securing it with a 14mm socket. Remove the (2) M8 bolts from the bottom of the flange on the passenger side frame rail. Return the tow hook and bolts to the vehicle owner.		
			
4	Raise hitch into position and install the (4) M10 hex bolts with M10 conical toothed washers and (3) M12 hex bolts with M12 conical toothed washers into the driver side frame rail as shown.		

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!




Hitch Installation Instructions

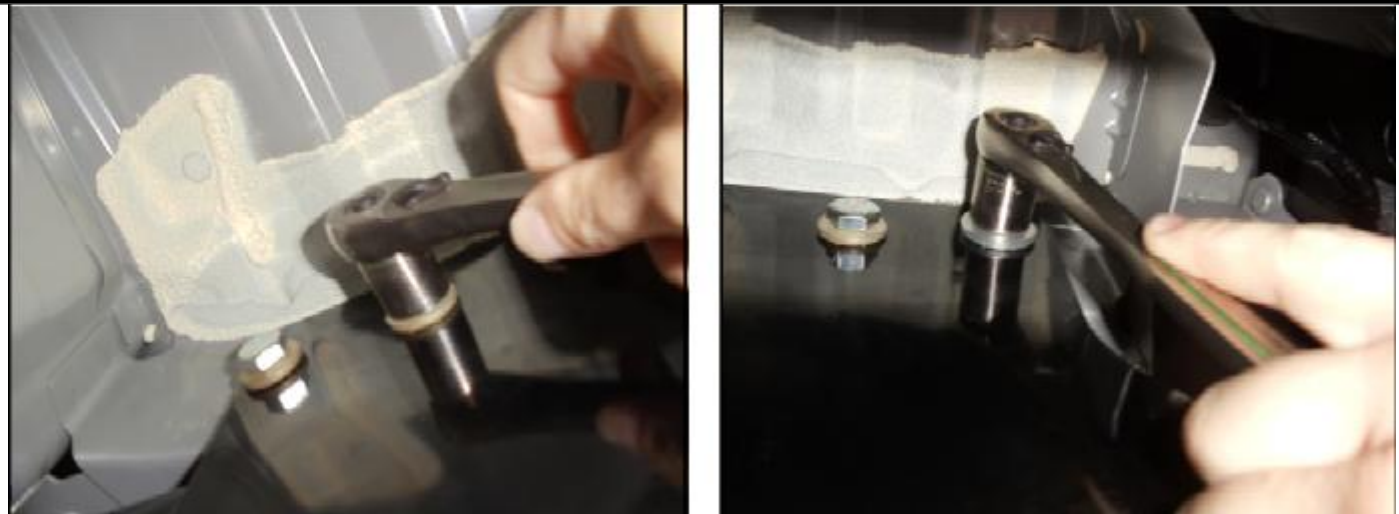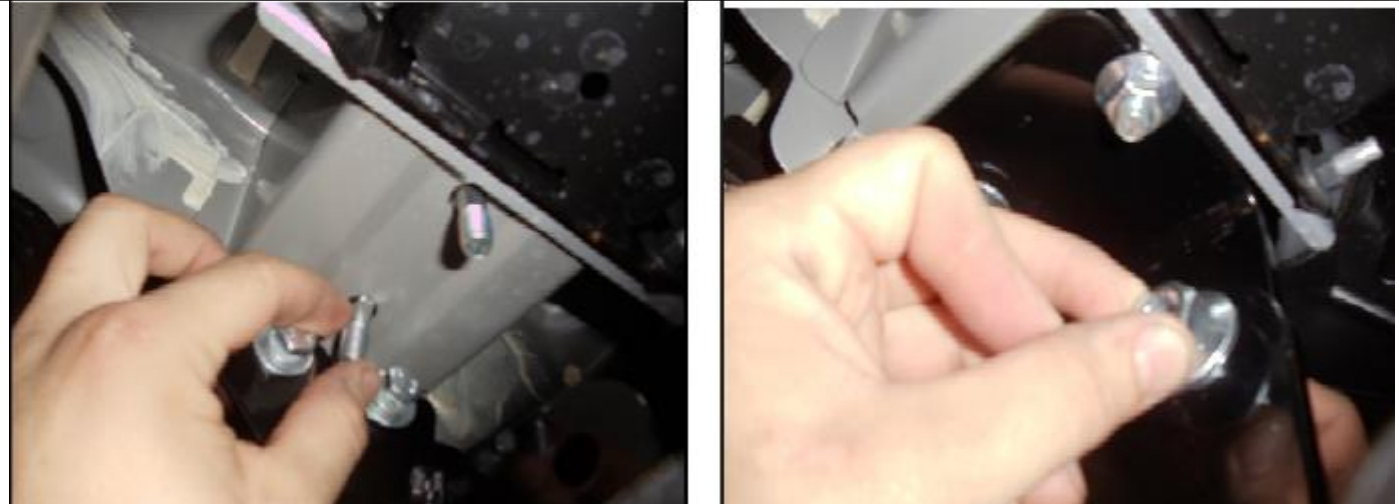Part#	HT-X36391	Application	INFINITI FX35 AII \ FX37 AII \ FX50 AII \ QX70 AII
			
5	Secure the passenger side to the frame rail using (2) M8 hex bolts with M8 lock and M8 flat washers in the position the bolts were removed from. Also, install a M12X1.25-35 hex bolt with a M12 conical toothed washer as shown in the forward-most hole.		
			
6	Install the u-bolt into the passenger side frame rail. Attach the mount plate weldment to the passenger side plate using M12X1.75-35 hex bolts and M12 hex flange nuts and secure to the frame rail using (2) M10 conical washers and M10 hex flange nuts.		
			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

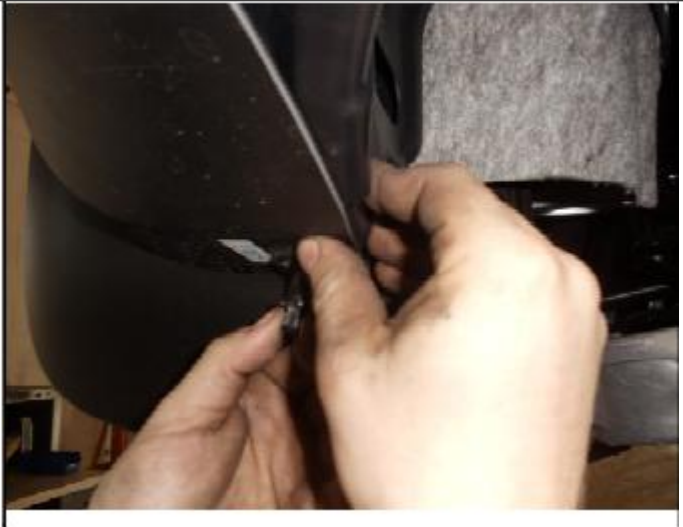Part#	HT-X36391	Application	INFINITI FX35 AII \ FX37 AII \ FX50 AII \ QX70 AII
7	Torque hardware: M8 to 23 ft-lbs M10 to 50 ft-lbs M12 to 86 ft-lbs		
 			
8	Trim and reinstall the passenger side underbody panel as shown. Reinstall the driver-side underbody panel and reinstall splash guards if removed.		
 			
9	Installation is complete.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!