



Hitch Installation Instructions


REV.20260801D

Part#	HT-X36560	Application	Hyundai Santa Fe All					
-------	-----------	-------------	----------------------	--	--	--	--	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B	1#	Hex Bolts	6	M10X1.25-40	2#	Conical Washers	6	M10
HW A (For Hitch Assembly)	3#	Hex Bolts	6	M12X1.75-35	5#	Lock Washers	6	M12
	4#	Flat Washers	10	M12	6#	Hex Nuts	4	M12X1.75

Gross Load Capacity When Used As A Weight Carrying Hitch: 4000 LBS. Trailer Weight & 400 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

* No Drilling Required

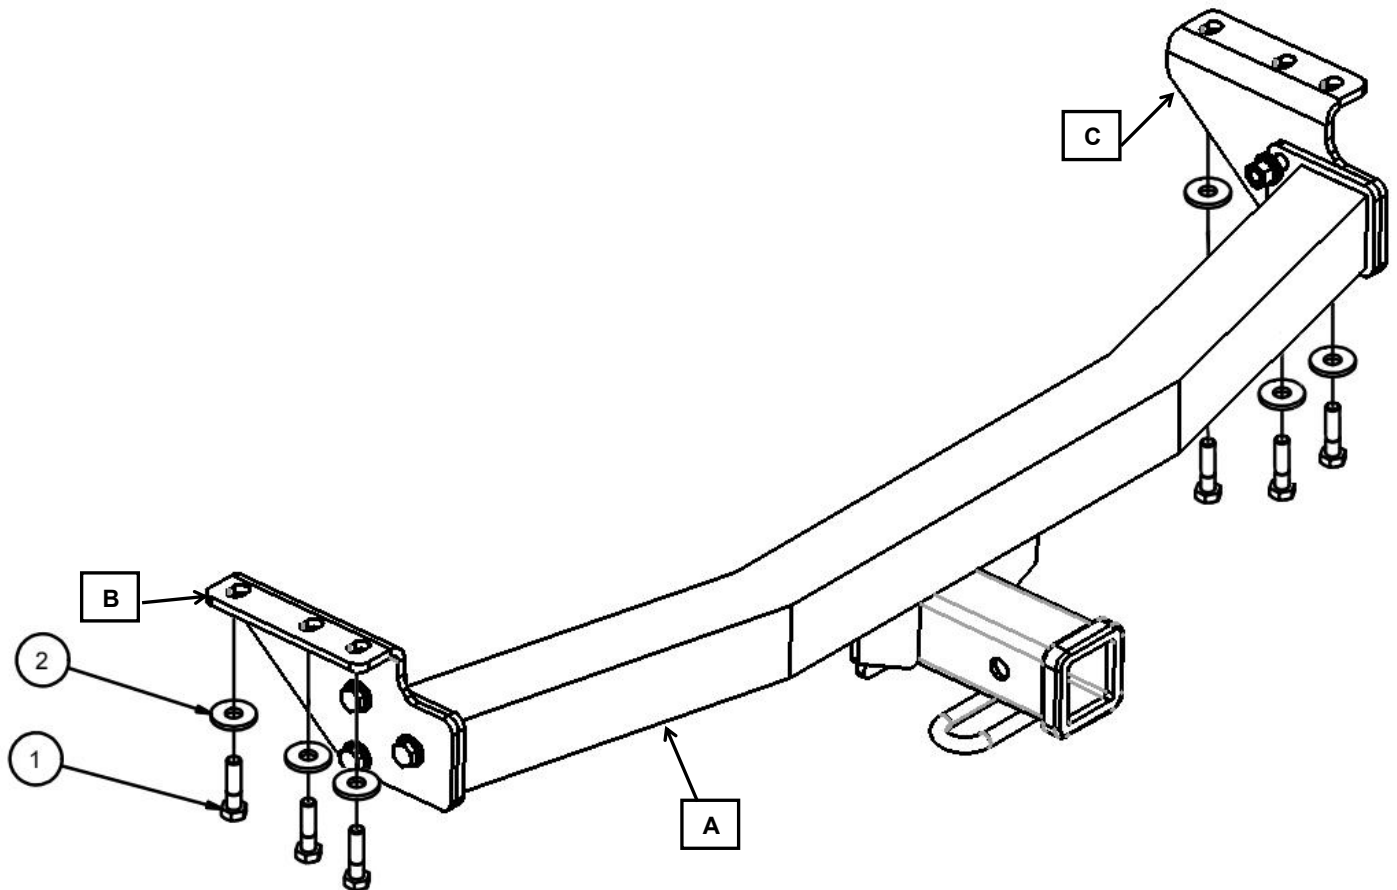

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X36560	Application	Hyundai Santa Fe All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (6) M12X1.75-35mm Hex Bolts, (10) M12 Flat Washers, (6) M12 Lock Washers, (4) M12 Hex Nuts. (Hardware in "HW A"). Note: Torque all "HW A" fasteners to 86 lb-ft.		
2	For ease of installation lower the spare tire or remove it.		
3	The lowering of the exhaust is not necessary, but will make the installation easier.		
4	Remove the tow hooks from each side and return to vehicle owner.		
5	Raise the hitch into position, the main cross tube should be concealed behind the rear fascia and the passenger side mounting plate notch should wrap around the rearmost exhaust hanger.		
6	Attach the hitch with three M10 fasteners on each side.		
7	Torque all HW B (M10) fasteners to 50 ft-lbs.		
8	Re- attach the exhaust if it was lowered and return the spare tire to the carrier.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!