



Hitch Installation Instructions


REV.20260601D

Part#	HT-X36611	Application	Toyota Tundra Excluding factory receiver					
-------	-----------	-------------	--	--	--	--	--	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Hex Bolts	2	M12X1.75-45	6#	Hex Bolts	4	M14X2-40
	2#	Spacers	2	With SQ Hole	7#	Large Flat Washers	4	M14
	3#	Hex Flange Nuts	2	M12X1.75	8#	Lock Washers	4	M14
	4#	Conical Washers	4	M12	9#	Hex Nuts	4	M14X2
	5#	Hex Bolts	4	M12X1.25-40				
HW A (For Hitch Assembly)	10#	Hex Bolts	8	M12X1.75-35	12#	Hex Flange Nuts	8	M12X1.75
	11#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 8000 LBS. Trailer Weight & 800 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

- * No Drilling Required
- * Remove Existing Bracket

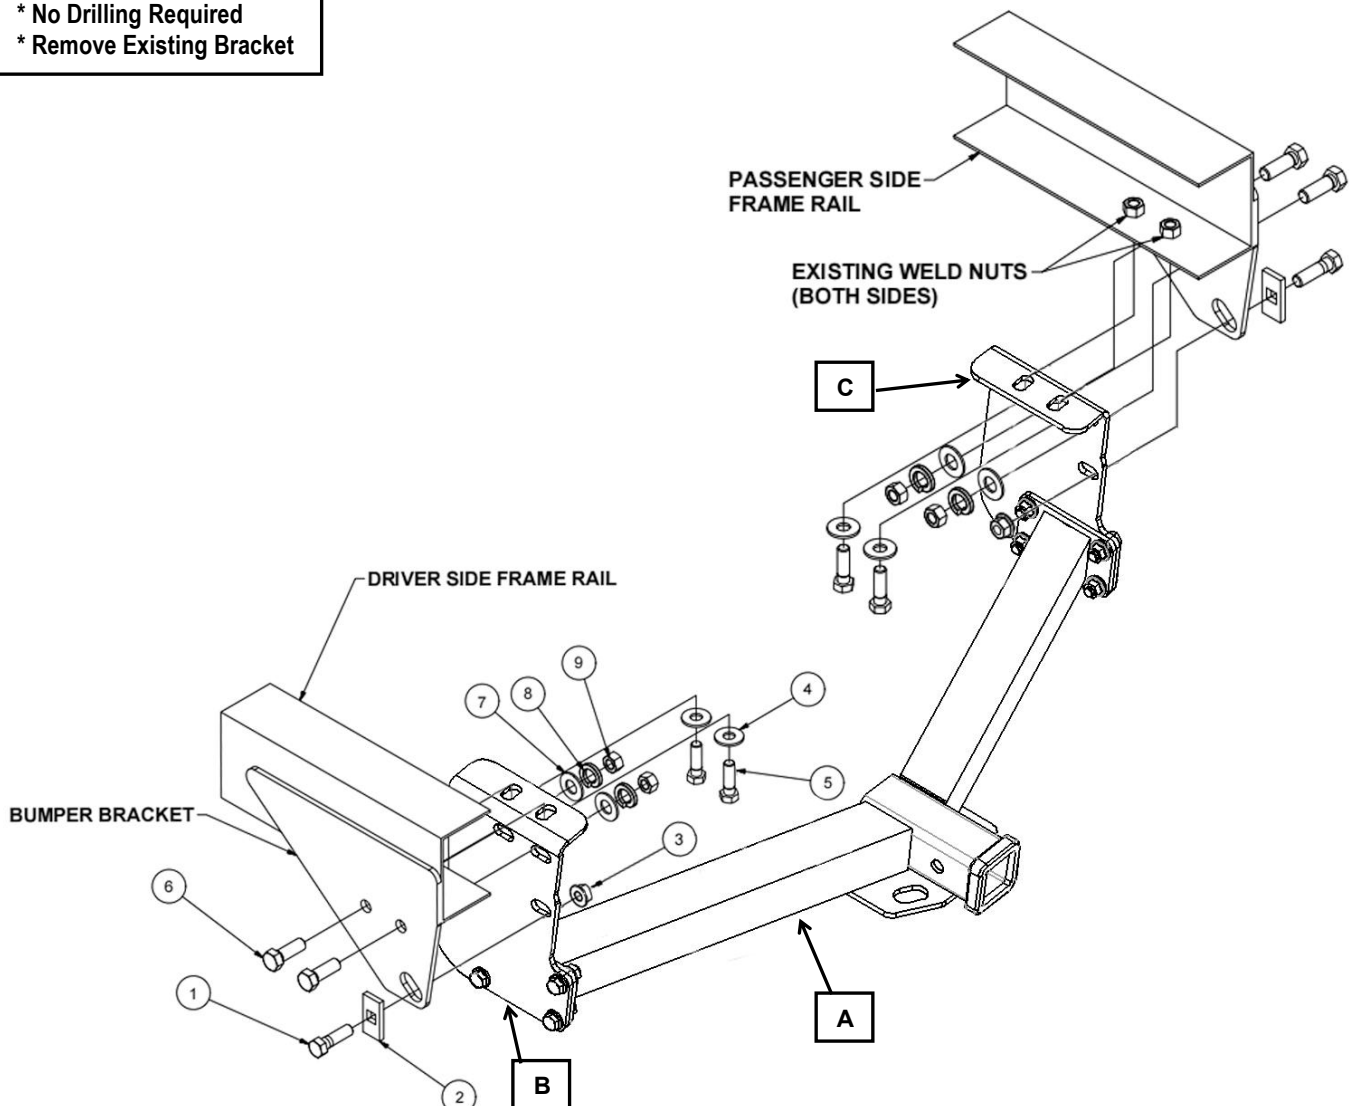

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X36611	Application	Toyota Tundra Excluding factory receiver
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in “HW A”). Note: Finger tighten only. Do not fully tighten at this time.		
2	Remove existing angle brackets from inside surface of frame rails and bumper brackets. (return brackets and fasteners to vehicle owner)		
3	Raise hitch into position and install the 12mm bolts with conical tooth washers.		
4	Install the 14mm fasteners as shown above.		
5	Torque all M12 fasteners to 86 lb-ft and all M14 fasteners to 140 lb-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!