



Hitch Installation Instructions


REV.20260801D

Part#	HT-X36805	Application	Mitsubishi Montero All					
-------	-----------	-------------	------------------------	--	--	--	--	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
	1#	Nylon straps	2	5X200	3#	Conical Washers	5	M12
HW B (For Hitch Installation)	2#	Hex Bolts	5	M12X1.25-40				
	4#	Hex Bolts	6	M12X1.25-35	6#	Lock Washers	6	M12
	5#	Flat Washers	10	M12	7#	Hex Nuts	4	M12X1.25

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
Gross Load Capacity When Used As A Distribution Carrying Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

* No Drilling Required

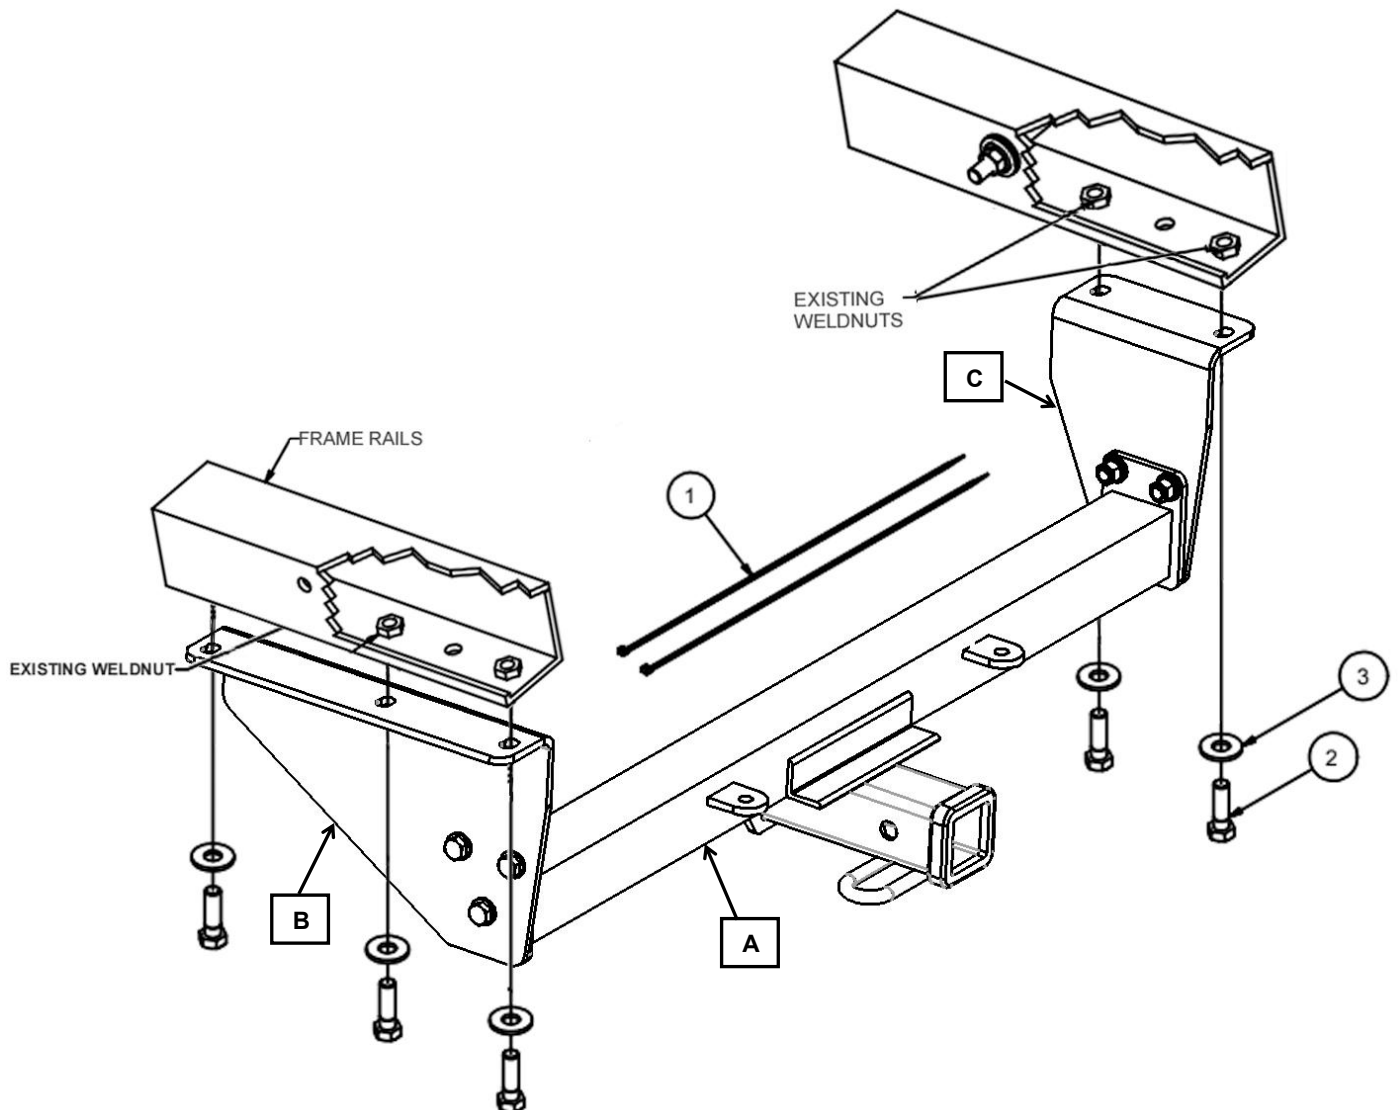

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X36805	Application	Mitsubishi Montero All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (6) M12X1.25-35mm Hex Bolts, (10) M12 Flat Washers, (6) M12 Lock Washers, (4) M12 Hex Nuts. (Hardware in "HW A"). Note: Torque all "HW A" fasteners to 86 lb-ft.		
2	Remove tow hooks if present and modify heat shield(s) as required for proper fit.		
3	Raise hitch into position and install (5) M10 bolts with conical washers.		
4	Torque all M12 fasteners to 86 lb-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!