



Hitch Installation Instructions


REV.20260801D

Part#	HT-X36856	Application	Ford Expedition All\ Lincoln Navigator SUV					
-------	-----------	-------------	--	--	--	--	--	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
	1#	Carriage Bolts	8	M12X1.75-50	3#	Hex Flange Nuts	8	M12X1.75
HW B (For Hitch Installation)	2#	Spacers	4	With SQ Hole				
	4#	Hex Bolts	8	M12X1.75-35	6#	Hex Flange Nuts	8	M12X1.75
HW A (For Hitch Assembly)	5#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.
Gross Load Capacity When Used As A Distribution Carrying Hitch: 10000 LBS. Trailer Weight & 1000 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

*No Drilling Required

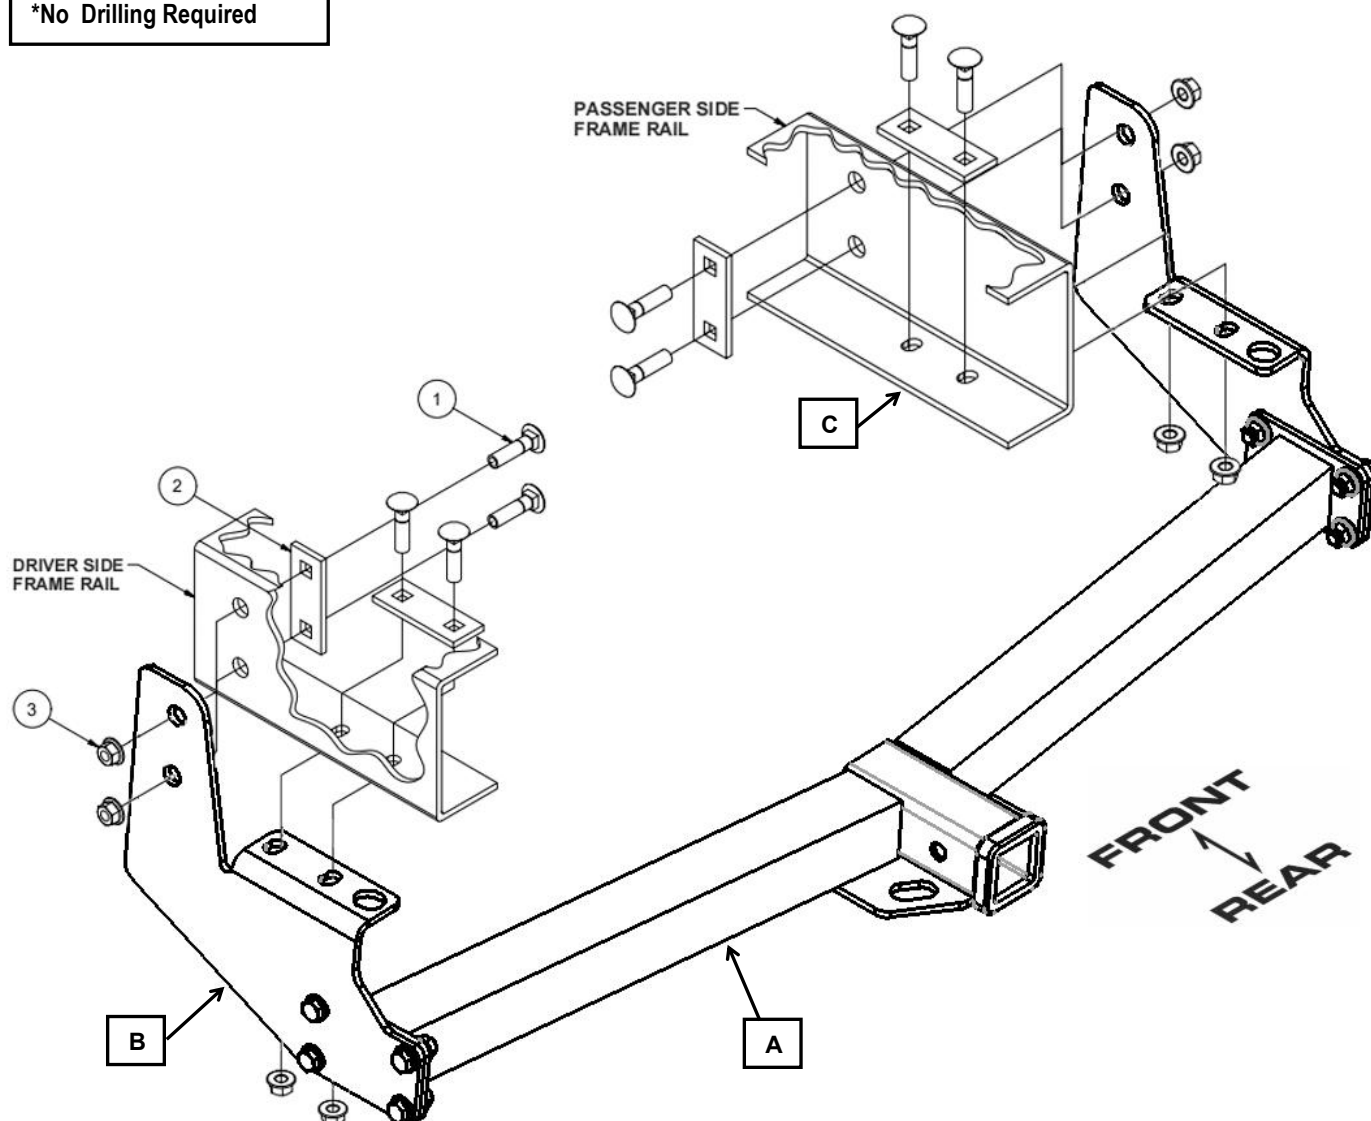

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X36856	Application	Ford Expedition All\ Lincoln Navigator SUV
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in “HW A”). Note: Torque all HWA to 86 lb-ft		
2	Raise hitch into position with the attachments in the vertical portion of the bracket on the outside of the frame.		
3	Install the M12 carriage bolt and spacer into the rearmost attachment holes in each frame rail. Attach with the flange nut but do not tighten.		
4	Insert the M12 carriage bolt and spacer into the forward attachment holes in each frame rail. Attach with flange nuts and tighten.		
5	Torque all HWB fasteners to 58 lb-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!