



Hitch Installation Instructions


REV.20260801D

Part#	HT-X37311	Application	Isuzu Trooper All \ Acura SLX All
-------	-----------	-------------	-----------------------------------

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Large Flat Washers	6	M12	3#	Lock Washers	6	M12
	2#	Hex Bolts	6	M12X1.25-35				
HW A (For Hitch Assembly)	4#	Hex Bolts	8	M12X1.25-35	6#	Hex Flange Nuts	8	M12X1.25
	5#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
Gross Load Capacity When Used As A Distribution Carrying Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

- * No Drilling Required
- * Remove Tow Hook

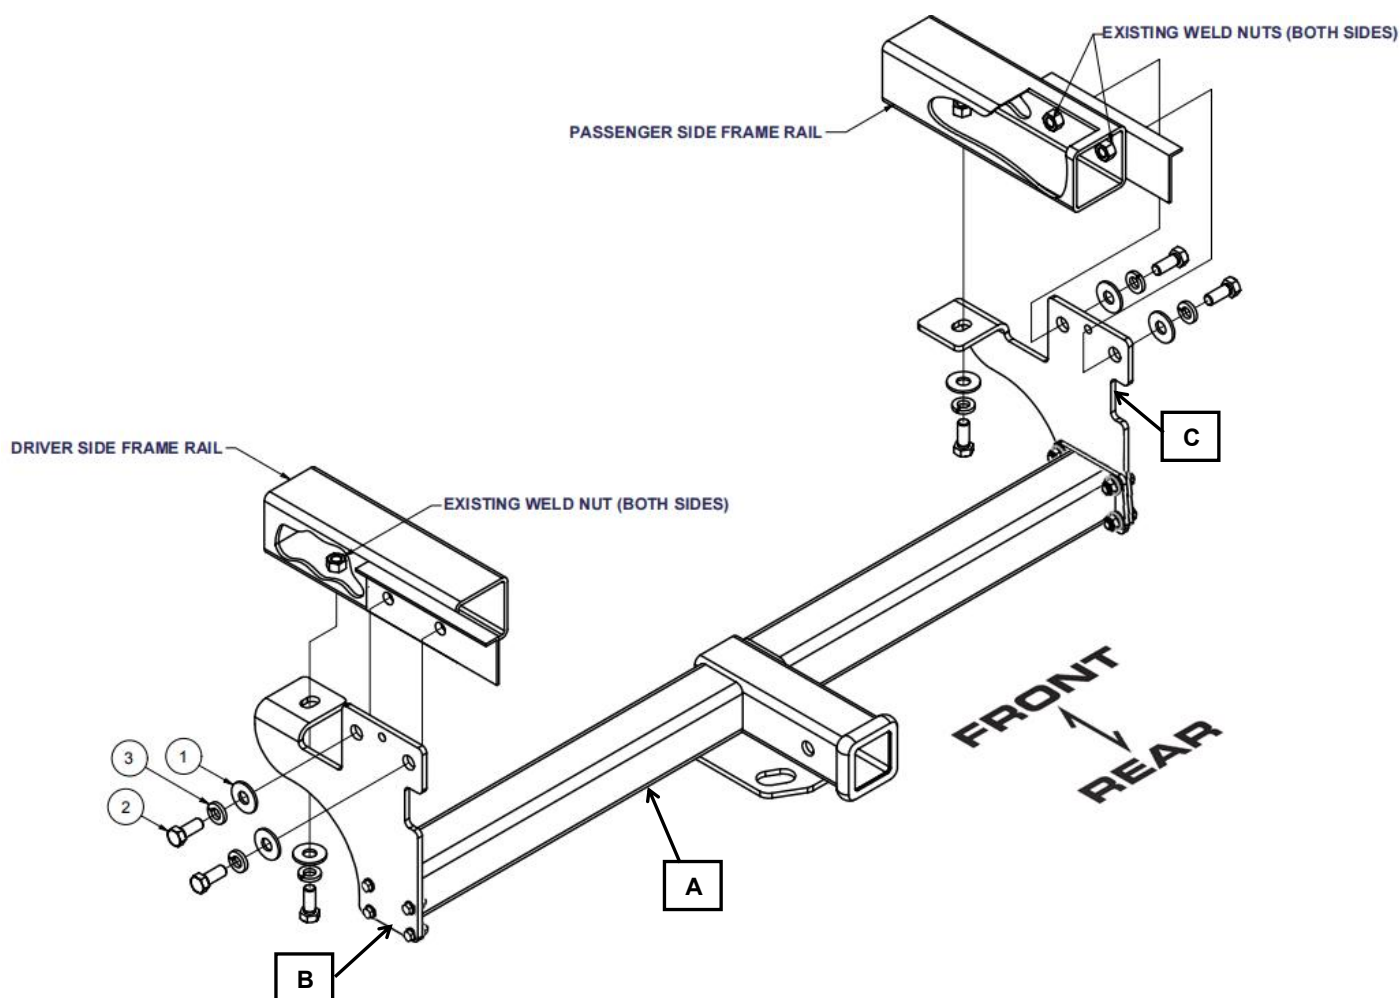

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X37311	Application	Isuzu Trooper All \ Acura SLX All
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.25-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in "HW A"). Note: Torque all HWA to 86 lb-ft		
2	Remove tow hook from the metal bracket welded to the bottom surface of the frame on passenger side. Return bolts and tow hook to vehicle owner for re-installation. Note: do not remove the metal bracket		
3	Remove M12 bolts from frame and return to owner, Mount hitch to existing M12 holes in frame sides where bumper brackets attach to the frame and to existing M12 holes in bottom of frame rail. Hitch side plates mount to the outside of bumper brackets; bumper brackets are not disturbed.		
4	Position hitch on vehicle, and mount to frame rails using fasteners provided.		
5	Torque all HW B (M12) fasteners to 86 lb.-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!