



Hitch Installation Instructions



REV.20260801D

Part#	HT-X37365	Application	Jeep Cherokee All, Including Sport					
-------	-----------	-------------	------------------------------------	--	--	--	--	--

Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
	1#	Fishwire	1	L=762	6#	Spacers	6	With SQ Hole
	2#	Flat Washers	4	M12	7#	Hex Bolts	8	M12X1.75-40
	3#	Hex Bolts	2	M12X1.75-45	8#	Conical Washers	8	M12
	4#	Hex Flange Nuts	8	M12X1.75	9#	Carriage Bolts	6	M12X1.75-45
HW B (For Hitch Installation)	5#	Spacers	2	With Round Hole				
	10#	Hex Bolts	6	M12X1.75-35	12#	Lock Washers	6	M12
	11#	Flat Washers	10	M12	13#	Hex Nuts	4	M12X1.75

Gross Load Capacity When Used As A Weight Carrying Hitch: 5000 LBS. Trailer Weight & 500 LBS. Tongue Weight.
Gross Load Capacity When Used As A Distribution Carrying Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

* No Drilling Required

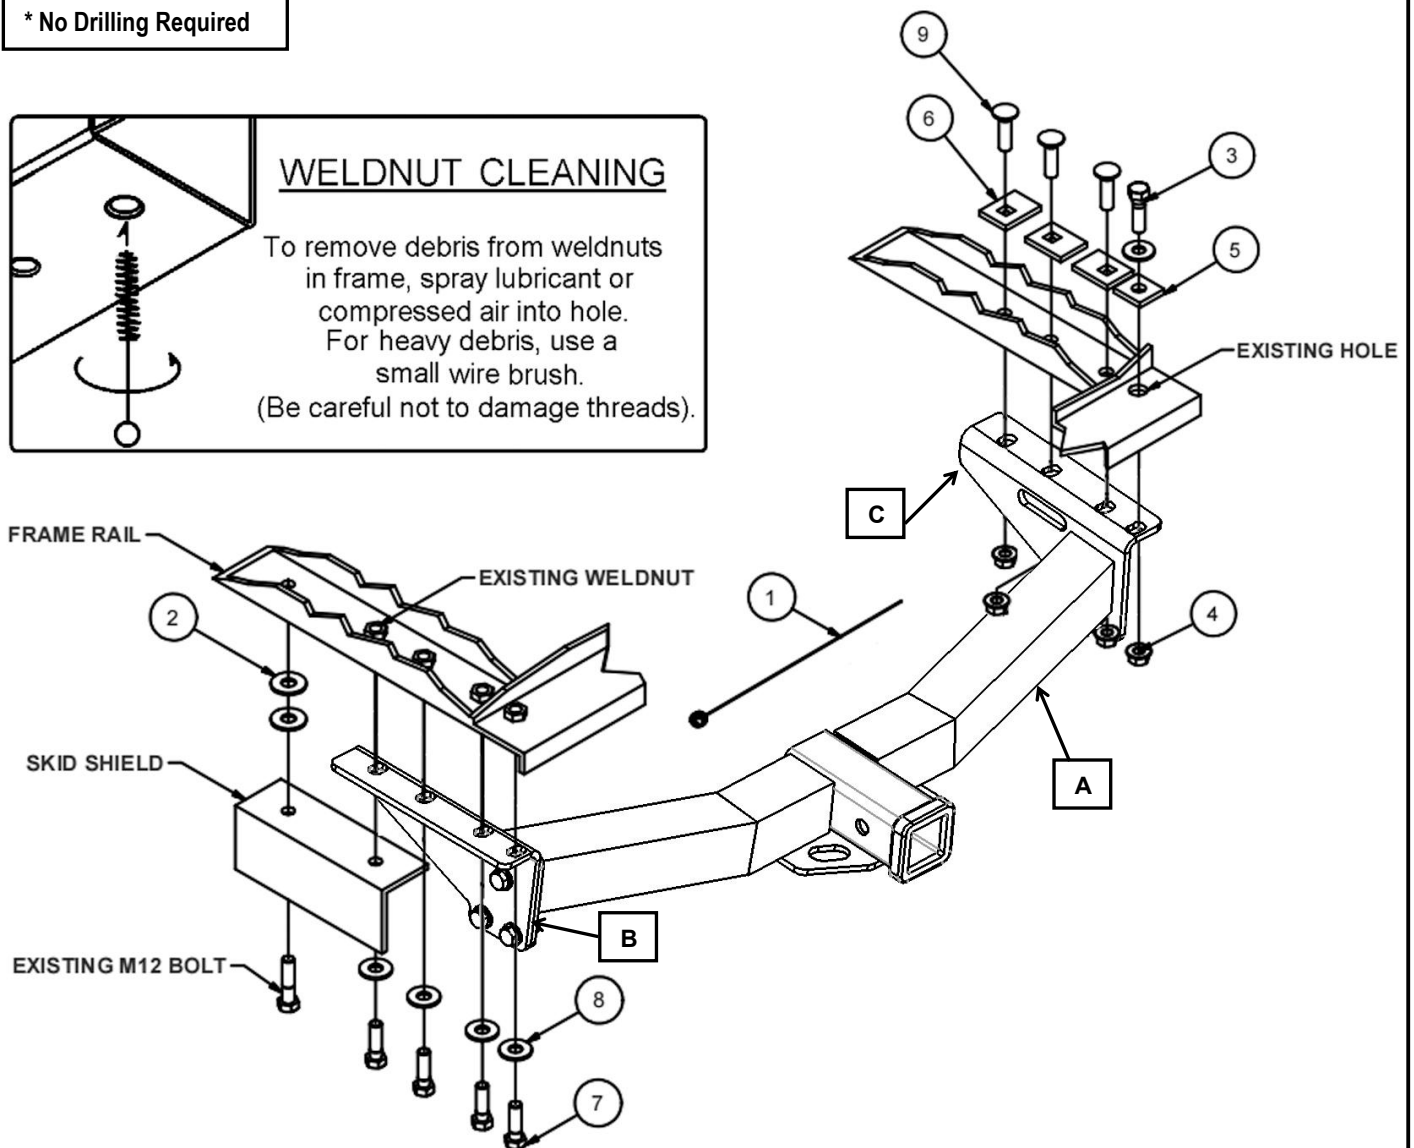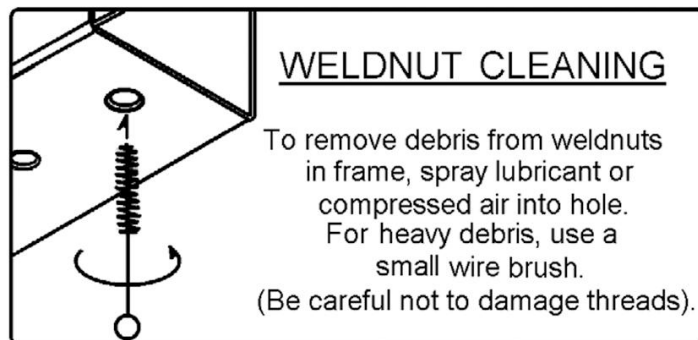

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X37365	Application	Jeep Cherokee All, Including Sport
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (6) M12X1.75-35mm Hex Bolts, (10) M12 Flat Washers, (6) M12 Lock Washers, (4) M12 Hex Nuts. (Hardware in "HW A"). Note: Torque all "HW A" fasteners to 86 lb-ft.		
Note: Hitch installation will vary for different models years.			
2	Remove all but a thin layer of undercoating from attaching surfaces. Also, grind or chisel off small aluminum rivet heads if present on attaching surface. This will ensure side brackets will sit flat against the frame.		
3a	-For vehicles equipped with frame mounted, closed sided, steel skid shield:		
(1)	Remove the rear skid shield mounting bolt and loosen the forward skid shield mounting bolt on each side so that the skid shield is lowered about 1/4". NOTE: DO NOT remove the forward mounting bolt at this time or the skid shield will come off.		
(2)	Raise the hitch into position, putting the receiver flange between the frame and the skid shield.		
(3)	Install four M12 bolts and conical washers on each side as shown.		
(4)	Remove the forward skid shield mounting bolts. Place two M12 flat washers as spacers between the frame and the skid shield and reinstall the existing M12 fastener.		
3b	-For vehicles equipped with frame mounted tow hook bracket on driver's side: Remove the tow hook and the tow hook bracket. Mount the driver and passenger sides as shown.		
3c	-For vehicles NOT equipped with frame mounted, closed sided, steel skid shield or frame mounted tow hook: Fishwire the square hole spacers, round spacers and the M12 carriage bolts through the end of the frame and into existing holes. Leave the fishwires attached to the carriage bolts until the M12 Flange Nuts are installed. This allows the bolts to be pulled through the receiver after it has been positioned around the fuel tank. NOTE: Removal of bumper may ease the fishwiring process		
4	Torque M12 Carriage Bolts to 58 lb-ft and other M12 fasteners to 86 lb-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!