




Hitch Installation Instructions

REV.20260701D

Part#	HT-X37535	Application	Chevrolet/GMC C1500/K1500 Excluding dual exhaust or 10 in. step bumper\ Chevrolet/GMC C/K2500/C/K3500 Excluding dual exhaust, 4-door crew cab, 10 in. step bumper or cab & chassis;					
Hardware List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
Hitch Parts	A	Hitch Body	1		B/C	Mounting Brackets	2	B-Driver Side C-Passenger Side
HW B (For Hitch Installation)	1#	Spacers	8	With SQ Hole	4#	Carriage Bolts	4	M12X1.75-50
	2#	Conical Washers	2	M12	5#	Hex Flange Nuts	4	M12X1.75
	3#	Hex Bolts	2	M12X1.75-50	6#	Hex Nuts	2	M12X1.75
HW A (For Hitch Assembly)	7#	Hex Bolts	8	M12X1.75-35	9#	Hex Flange Nuts	8	M12X1.75
	8#	Flat Washers	16	M12				

Gross Load Capacity When Used As A Weight Carrying Hitch: 6000 LBS. Trailer Weight & 600 LBS. Tongue Weight.
Gross Load Capacity When Used As A Weight Distribution Hitch: 10000 LBS. Trailer Weight & 1000 LBS. Tongue Weight.
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

- * No Drilling Required
- * Lower Spire Tire

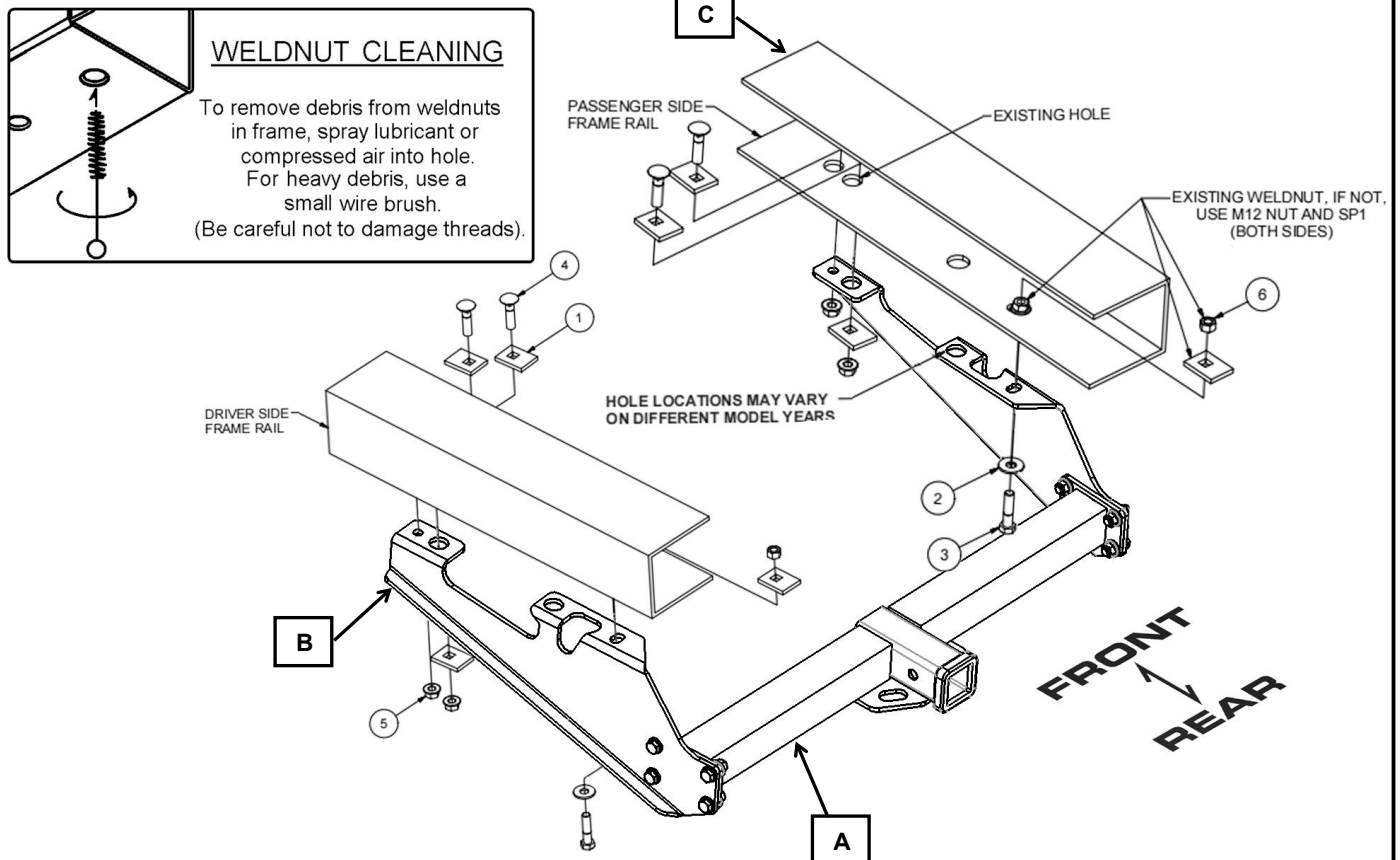

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!



Hitch Installation Instructions

Part#	HT-X37535	Application	Chevrolet/GMC C1500/K1500 Excluding dual exhaust or 10 in. step bumper\ Chevrolet/GMC C/K2500/C/K3500 Excluding dual exhaust, 4-door crew cab, 10 in. step bumper or cab & chassis;
Step	Description		
1	Assemble Hitch Body (A) and Mounting Brackets (B, C) with (8) M12X1.75-35mm Hex Bolts, (16) M12 Flat Washers, (8) M12 Hex Flange Nuts. (Hardware in “HW A”). Note: Torque all HWA to 86 lb-ft		
2	Lower the spare tire. The rear bolt in the bottom of the frame on each side must be removed, if equipped with factory step bumper. Clean away any mud and undercoating present		
3	Position the receiver against the frame. The large cut outs in the hangers should clear rivets and cross member bolts.		
4	Secure the hitch to vehicle using all existing holes in vehicle frame as illustrated above.		
5	Reposition spare tire slightly forward to clear hitch. Oversized spare tire may have to be relocated.		
6	Torque M12 carriage bolts to 58 lb-ft and other M12 fasteners to 86 lb-ft.		
***Periodically Check The Receiver Hitch To Ensure That All Fasteners *** Are Tight & All Structural Components Are Sound.			

The instructions here are for your reference only. We strongly recommend professional installation for best results. We are not responsible for any damage caused by the installation. Thank you for choosing our product!